


OWNER'S MANUAL & OPERATING INSTRUCTIONS



389cc REPLACEMENT ENGINE

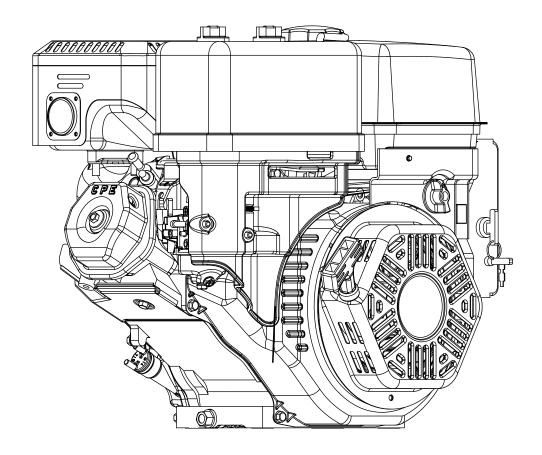

MODEL NUMBER 100221

SAVE THESE INSTRUCTIONSImportant Safety Instructions are included in this manual.

MADE IN CHINA REV 100221-20170616 12039 Smith Ave. Santa Fe Springs CA 90670 USA / 1-877-338-0999 www.championpowerequipment.com

AN IMPORTANT MESSAGE ABOUT TEMPERATURE:

Your Champion Power Equipment product is designed and rated for continuous operation at ambient temperatures up to 40°C (104°F). When your product is needed your product may be operated at temperatures ranging from -15°C (5°F) to 50°C (122°F) for short periods. If the product is exposed to temperatures outside this range during storage, it should be brought back within this range before operation. In any event, the product must always be operated outdoors, in a well-ventilated area and away from doors, windows and other vents.

Have questions or need assistance?

Do not return this product to the store!

WE ARE HERE TO HELP!

Visit our website: www.championpowerequipment.com for more info:

- Product Info & Updates
- Tech Bulletins
- Frequently Asked Questions
- Product Registration

– or –

Call our Customer Care Team Toll-Free at:


1-877-338-0999

For residents of California:

WARNING: This product contains chemicals known to the State of California to cause cancer or birth defects and other reproductive harm.

WARNING: The engine exhaust from this product contains chemicals known to the State of California to cause cancer and birth defects and other reproductive harm.

*We are always working to improve our products. Therefore, the enclosed product may differ slightly from the image on the cover.

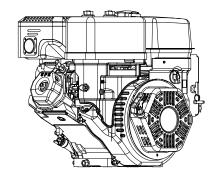

389cc REPLACEMENT ENGINE

TABLE OF CONTENTS

Introduction
Introduction
Manual Conventions 2
Safety Rules
Controls and Features
Replacement Engine
Parts Included
Assembly
Add Engine Oil 6
Add Engine Fuel
Operation
Starting the Engine
Stopping the Engine
Operation at High Altitude 8
Maintenance and Storage
Engine Maintenance
Oil
Spark Plugs
Air Filter
Cleaning
Maintenance Schedule
Storage
Engine Storage 10

Troubleshooting	11
Specifications	12
Engine Specifications	12
Fuel	12
Oil	12
Spark Plugs	12
Valve Clearance	12
Keyway Shaft	12
Parts Diagram	13
Parts List	14

INTRODUCTION

Introduction

Congratulations on your purchase of a Champion Power Equipment product. Champion Power Equipment and Champion Engine Technology designs, builds, and supports all of our products to strict specifications and guidelines. With proper product knowledge, safe use, and regular maintenance, this product should bring years of satisfying service.

Every effort has been made to ensure the accuracy and completeness of the information in this manual, and we reserve the right to change, alter and/or improve the product and this document at any time without prior notice.

Since CPE/CET highly value how our products are designed, manufactured, operated and are serviced, and also highly value your safety and the safety of others, we would like you to take the time to review this product manual and other product materials thoroughly and be fully aware and knowledgeable of the assembly, operation, dangers and maintenance of the product before use. Fully familiarize yourself, and make sure others who plan on operating the product fully familiarize themselves too, with the proper safety and operation procedures before each use. Please always exercise common sense and always error on the side of caution when operating the product to ensure no accidents, property damage, or injury occurs. We want you to continue to use and be satisfied with your CPE/CET product for years to come.

Record the model and serial numbers as well as date and place of purchase for future reference. Have this information available when ordering parts and when making technical or warranty inquiries.

Champion Power Equipment Support
1-877-338-0999
Model Number
100221
Serial Number
Date of Purchase
Purchase Location
For Oil Type see 'Add Engine Oil' section. For Fuel Type see 'Add Fuel' section.

MANUAL CONVENTIONS

This manual uses the following symbols to help differentiate between different kinds of information. The safety symbol is used with a key word to alert you to potential hazards in operating and owning power equipment. Follow all safety messages to avoid or reduce the risk of serious injury or death.



DANGER indicates an imminently hazardous situation which, if not avoided, **will** result in death or serious injury.

MARNING

WARNING indicates a potentially hazardous situation which, if not avoided, *could* result in death or serious injury.

! CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, *may* result in minor or moderate injury.

CAUTION

CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, *may* result in property damage.

NOTE

If you have questions regarding your engine, we can help. Please call our help line at **1-877-338-0999**

MARNING

Read this manual thoroughly before operating your engine. Failure to follow instructions could result in serious injury or death.

↑ WARNING

The engine exhaust from this product contains chemicals known to the state of California to cause cancer, birth defects, or other reproductive harm.

A DANGER

Engine exhaust contains carbon monoxide, a colorless, odorless, poison gas. Breathing carbon monoxide will cause nausea, dizziness, fainting or death. If you start to feel dizzy or weak, get to fresh air immediately.

Operate engine outdoors only in a well ventilated area DO NOT operate the engine inside any building, including garages, basements, crawlspaces and sheds, enclosure or compartment, including the engine compartment of a recreational vehicle. DO NOT allow exhaust fumes to enter a confined area through windows, doors, vents or other openings. DANGER CARBON MONOXIDE, using an engine indoors CAN KILL YOU IN MINUTES.

A DANGER

Rotating parts can entangle hands, feet, hair, clothing and/or accessories. Traumatic amputation or severe laceration can result.

Keep hands and feet away from rotating parts. Tie up long hair and remove jewelry. Operate equipment with guards in place. DO NOT wear loose-fitting clothing, dangling drawstrings or items that could become caught.

A DANGER

Sparks can result in fire or electrical shock.

When servicing the engine:

Disconnect the spark plug wire and place it where it cannot contact the plug. DO NOT check for spark with the plug removed. Use only approved spark plug testers.

⚠ WARNING

Running engines produce heat. Severe burns can occur on contact. Combustible material can catch fire on contact.

DO NOT touch hot surfaces. Avoid contact with hot exhaust gases. Allow equipment to cool before touching. Maintain at least three feet of clearance on all sides to ensure adequate cooling. Maintain at least five feet of clearance from combustible materials.

⚠ WARNING

Rapid retraction of the starter cord will pull hand and arm towards the engine faster than you can let go. Unintentional startup can result in entanglement, traumatic amputation or laceration.

Broken bones, fractures, bruises or sprains could result.

When starting engine, pull the starter cord slowly until resistance is felt and then pull rapidly to avoid kickback.

⚠ CAUTION

Improper treatment or use of the engine can damage it, shorten its life and void your warranty.

Use the engine only for intended uses. Operate only on level surfaces. DO NOT expose engine to excessive moisture, dust, or dirt.

DO NOT allow any material to block the cooling slots. DO NOT use the engine if:

- Equipment sparks, smokes or emits flames
- Equipment vibrates excessively

⚠ DANGER

Fuel and fuel vapors are highly flammable and extremely explosive.

Fire or explosion can cause severe burns or death. Unintentional startup can result in entanglement, traumatic amputation or laceration.

When adding or removing fuel:

Turn the engine off and let it cool for at least two minutes before removing the fuel cap. Loosen the cap slowly to relieve pressure in the tank. Only fill or drain fuel outdoors in a well-ventilated area. DO NOT overfill the fuel tank. Always keep fuel away from sparks, open flames, pilot lights, heat and other sources of ignition. DO NOT light or smoke cigarettes.

When starting the engine:

DO NOT attempt to start a damaged engine. Make certain that the gas cap, air filter, spark plug, fuel lines and exhaust system are properly in place. Allow spilled fuel to evaporate fully before attempting to start the engine.

Make certain that the engine is resting firmly on level ground.

When transporting or servicing the engine:

Make certain that the fuel valve is in the off position and the fuel tank is empty. Disconnect the spark plug wire.


When storing the engine:

Store away from sparks, open flames, pilot lights, heat and other sources of ignition.

CONTROLS AND FEATURES

Read this owner's manual before operating your engine. Familiarize yourself with the location and function of the controls and features. Save this manual for future reference.

Replacement Engine

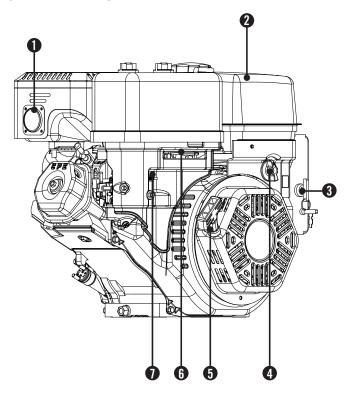


- (1) Muffler
- (2) Fuel Tank 1.6 (6.2 L) gallon capacity fuel tank.
- (3) Ignition Switch
- (4) Fuel Valve Knob Turn this valve to the "On" position to supply fuel to the engine.
- (5) Recoil Starter Used to start the engine.
- (6) Throttle Controls engine speed

- (7) Choke Lever Used to start engine
- (8) Air Cleaner Protects the engine by filtering dust and debris from the intake air.
- (9) Crank Shaft
- (10) Oil Filler Cap Check and fill engine oil level.
- (11) Oil Drain Bolt Remove to drain engine oil.

Parts Included

Your 100221 Gasoline Powered Engine ships with the following parts:

Other

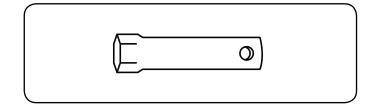

Add Engine Oil

! CAUTION

DO NOT attempt to crank or start the engine before it has been properly filled with the recommended type and amount of oil. Damage to the engine as a result of failure to follow these instructions will void your warranty.


NOTE

The recommended oil type is 10W-30 automotive oil.

- 1. Place the engine on a flat, level surface.
- 2. Remove oil fill cap/dipstick to add oil.
- Using a funnel add up to 1.2 qt. (1.1 L) of oil (not included) and replace oil fill cap/dipstick. DO NOT OVERFILL.
- 4. Check engine oil level daily and add as needed.

♥NOTE

Once oil has been added, a visual check should show oil about 1-2 threads from running out of the fill hole. If using the dipstick to check oil level, DO NOT screw in the dipstick while checking.

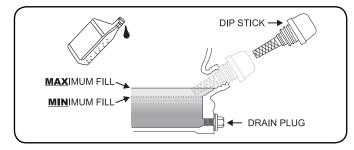

NOTE

Check oil often during the break-in period. Refer to the Maintenance section for recommended service intervals.


Add Engine Oil Cont'd.

CAUTION

The engine is equipped with a low oil shut-off sensor and will stop when the oil level in the crankcase falls below the threshold level.

NOTE

We consider the first 5 hours of run time to be the break-in period for the engine. During the break in period we recommend using standard automotive non-synthetic blended oils. After the break in period synthetic lubricant can be used but is not required. Adjusting throttle setting will increase/decrease engine speed helping to seat piston rings. Avoid bogging or lugging the engine down and avoid prolonged running at constant RPM. After the 5 hour break-in period, change the oil. Using synthetic lubricants does not increase the recommended oil change interval.

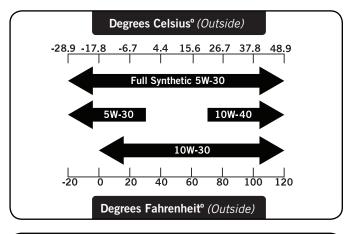


→ NOTE

Weather will affect engine oil and engine performance. Change the type of engine oil used based on weather conditions to suit the engine needs.

ASSEMBLY

Add Fuel

- 1. Use clean, fresh, regular unleaded fuel with a minimum octane rating of 85 and an ethanol content of less than 10% by volume.
- 2. DO NOT mix oil with fuel.
- 3. Clean the area around the fuel cap.
- 4. Remove the fuel cap.
- 5. Slowly add fuel to the tank. DO NOT OVERFILL. Fuel can expand after filling. A minimum of 1/4 in. (6.4 mm) of space left in the tank is required for fuel expansion, more than ½ in. (6.4 mm) is recommended. Fuel can be forced out of the tank as a result of expansion if it is overfilled, and can affect the stable running condition of the product. When filling the tank, it is recommended to leave enough space for the fuel to expand.

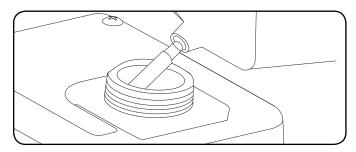

6. Screw on the fuel cap and wipe away any spilled fuel.

⚠ WARNING

Pouring fuel too fast through the fuel screen may result in blow back of fuel at the operator while filling.

(1) CAUTION

Use regular unleaded gasoline with a minimum octane rating of 85.

Do not mix oil and gasoline.

Fill tank to approximately ¼ in. (6.4 mm) below the top of the tank to allow for fuel expansion.

DO NOT pump gas directly into the tank at the gas station. Use an approved container to transfer the fuel to the tank.

DO NOT fill fuel tank indoors.

DO NOT fill fuel tank when the engine is running or hot.

DO NOT overfill the fuel tank.

DO NOT light cigarettes or smoke when filling the fuel tank.

Add Fuel Cont'd.

◯ NOTE


Our engines work well with 10% or less ethanol blend fuels. When using blended fuels there are some issues worth noting:

- Ethanol-gasoline blends can absorb more water than gasoline alone.
- These blends can eventually separate, leaving water or a watery goo in the tank, fuel valve and carburetor.
- With gravity-fed fuel supplies, this compromised fuel can be drawn into the carburetor and cause damage to the engine and/or potential hazards.
- There are only a few suppliers of fuel stabilizer that are formulated to work with ethanol blend fuels.
- Any damages or hazards caused by using improper fuel, improperly stored fuel, and/ or improperly formulated stabilizers, are not covered by manufacture's warranty.

It is advisable to always shut off the fuel supply, run the engine to fuel starvation and drain the tank when the equipment is not in use for more than 30 days.

Connect Battery (not included) (Figure A)

- 1. Connect the red (+) lead to the positive (+) terminal on the battery. Then connect the lead to the bolt on the back side of the starter solenoid.
- 2. Connect the black (-) lead to the negative (-) terminal on the battery. To ground the lead, connect to the bolt on the engine base.

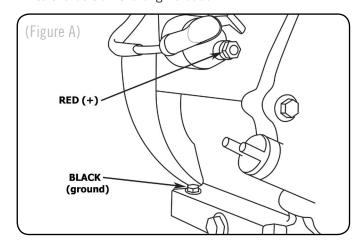


Starting the Engine

- 1. Make certain the engine is on a flat, level surface.
- 2. Turn the Fuel Valve to the "ON" position.(A)
- 3. Move the choke lever to the "CHOKE" position.(B)
- 4. Turn the ignition switch to the "ON" position.(C)
- 5. ELECTRIC START: Turn and hold the ignition switch to the "START" position. Release as the engine begins to roll over. If the engine fails to start within five seconds, release the switch and wait at least ten seconds before attempting to start the engine again.
- 6. RECOIL START: Pull the starter cord slowly until resistance is felt and then pull rapidly
- 7. Do not over-choke. As as soon as engine starts, move the choke lever to the "RUN" position. (B)

NOTE

Keep choke lever in "Choke" position for 2 pulls of the recoil starter. After first pull, move choke lever to the "Run" position for up to the next 3 pulls of the recoil starter. Too much choke leads to spark plug fouling/engine flooding due to the lack of incoming air. This will cause the engine not to start.

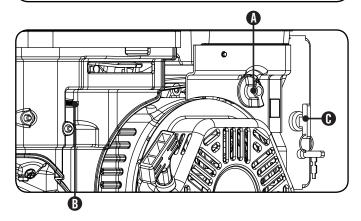

○ NOTE

If the engine starts but does not run make certain that the engine is on a flat, level surface. The engine is equipped with a low oil sensor that will prevent the engine from running when the oil level falls below a critical threshold.

Stopping the Engine

- 1. Turn the fuel knob to the "Off" position. (A)
- 2. Let the engine run until fuel starvation has stopped the engine. This usually takes a few minutes.
- 3. Turn the engine switch to the "Off" position. (C) **Important:** Always ensure that the Fuel Valve and the Engine Switch are in the "OFF" position when the engine is not in use.

NOTE

If the engine will not be used for a period of two (2) weeks or longer, please see the Storage section for proper engine and fuel storage.

Operation at High Altitude

The density of air at high altitude is lower than at sea level. Engine power is reduced as the air mass and air-fuel ratio decrease. Engine power and output will be reduced approximately 3½% for every 1000 feet of elevation above sea level. This is a natural trend and cannot be changed by adjusting the engine. At high altitudes increased exhaust emissions can also result due to the increased enrichment of the air fuel ratio. Other high altitude issues can include hard starting, increased fuel consumption and spark plug fouling. To alleviate high altitude issues other than the natural power loss, Champion Power Equipment can provide a high altitude carburetor main jet. The alternative main jet and installation instructions can be obtained by contacting Customer Support. Installation instructions are also available in the Technical Bulletin area of the Champion Power Equipment internet site.

The part number and recommended minimum altitude for the application of the high altitude carburetor main jet is listed in the table below.

In order to select the correct high altitude main jet it is necessary to identify the carburetor model. For this purpose, a code is stamped on the side of the carburetor. Select the correct main jet part number corresponding to the carburetor code found on your particular carburetor.

Carburetor Code	Main Jet	Part Number	Altitude
P27-1-Z	Standard	46.131017.00.Z	
P2/-1-Z	Altitude	46.131017.00.01.Z	
P27-1-H	Standard	46.131017.00.H	5000 Feet
	Altitude	46.131017.00.01.H	(1524 Meters)
	Standard	46.131017.00.Y	
P27-1-Y	Altitude	46.131017.00.01.Y	

⚠WARNING

Operation using the alternative main jet at elevations lower than the recommended minimum altitude can damage the engine. For operation at lower elevations, the standard main jet must be used. Operating the engine with the wrong engine configuration at a given altitude may increase its emissions and decrease fuel efficiency and performance.

MAINTENANCE AND STORAGE

The owner/operator is responsible for all periodic maintenance.

AWARNING

Never operate a damaged or defective engine.

AWARNING

Improper maintenance will void your warranty.



For service or parts assistance, contact our help line at 1-877-338-0999.

Complete all scheduled maintenance in a timely manner. Correct any issue before operating the engine.


Engine Maintenance

To prevent accidental starting, remove and ground spark plug wire before performing any service.

0il


Change oil when the engine is warm. Refer to the oil specification to select the proper grade of oil for your operating environment.

- 1. Remove the oil drain plug with a 15 mm socket and extension (not included).
- 2. Allow the oil to drain completely.
- 3. Replace the drain plug.
- 4. Remove oil fill cap/dipstick to add oil.
- 5. Using a funnel, add up to 1.2 qt. (1.1 L) of oil and replace oil fill cap/dipstick.
- 6. Dispose of used oil at an approved waste management facility.

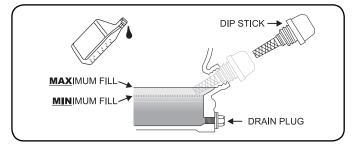

Spark Plugs

- 1. Remove the spark plug cable from the spark plug.
- 2. Use a spark plug socket to remove the plug.
- 3. Inspect the electrode on the plug. It must be clean and not worn to produce the spark required for ignition.
- 4. Make certain the spark plug gap is 0.7 0.8 mm or (0.028 0.031 in.).

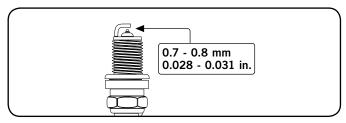

- 5. Refer to the spark plug recommendation chart when replacing the plug.
- 6. Carefully thread the plug into the engine.
- 7. Use a spark plug socket to firmly install the plug.
- 8. Attach the spark plug wire to the plug.

Air Filter

- 1. Using your fingers, unscrew the thumb screws of the top holes of the air filter cover.
- 2. Remove the plastic outer casing.
- 3. Remove the foam element.
- 4. Wash in liquid detergent and water. Squeeze thoroughly dry in a clean cloth.
- 5. Saturate in clean engine oil.
- 6. Squeeze in a clean, absorbent cloth to remove all excess oil.
- 7. Place the filter in the assembly.
- 8. Reattach the air filter cover and using your fingers, insert the thumb screws into the top and bottom holes of the air filter cover. Screw until tight. Be sure not to over tighten.

MAINTENANCE AND STORAGE

Cleaning

Use a damp cloth to clean exterior surfaces of the engine. Use a soft bristle brush to remove dirt and oil. Use an air compressor (25 PSI) to clear dirt and debris

from the engine.

① CAUTION

DO NOT use a garden hose to clean the engine.

Water can contaminate the fuel system and can enter the engine through the cooling slots and damage the engine.

Maintenance Schedule

Follow the service intervals indicated in the schedule below. Service your engine more frequently when operating in adverse conditions. Contact our help line at 1-877-338-0999 to locate the nearest Champion Power Equipment authorized service dealer for your engine maintenance needs.

Every 8 hours or daily		
Check oil level		
Clean around air intake and muffler		
First 5 hours		
Change oil		
Every 50 hours or every season		
Clean air filter		
Change oil if operating under heavy load or in hot environments		
Every 100 hours or every season		
Change oil		
Clean/Adjust spark plug		
Check/Adjust valve clearance*		
Clean spark arrester		
Clean fuel tank and filter*		
Every 250 hours		
Clean combustion chamber*		
Every 3 years		
Replace fuel line		

^{*}To be performed by knowledgeable, experienced owners or Champion Power Equipment certified dealers.

Storage

Refer to the Maintenance section for proper cleaning instructions.

Engine Stored for Less than 30 Days

- 1. Allow the engine to cool completely before storage.
- 2. Clean engine according to the Maintenance section.
- 3. To extend the fuel storage life add fuel stabilizer.
- 4. Turn the fuel valve to the off position.

Engines Stored for Over 30 Days

- 1. Run the engine with the fuel valve in the "Off" position until the engine stops.
- 2. The engine needs to cool completely before storage.
- 3. Clean engine according to the Maintenance section.
- 4. Drain all fuel completely from the fuel line and carburetor to prevent gum from forming.
- 5. Add a fuel stabilizer into the fuel tank.
- 6. Change the oil.
- 7. The fuel valve needs to be in the off position.
- 8. Remove the spark plug and pour about 1/2 ounce (14.8 ml) of oil into the cylinder. Crank the engine slowly to distribute the oil and lubricate the cylinder.
- 9. Reattach the spark plug.

AWARNING

Never store the engine inside next to appliances where there is a source of heat or open flame, spark or pilot light because they can ignite gasoline vapors.

DO NOT store an engine near fertilizer or any corrosive material.

Even with an empty gas tank, gasoline vapors could ignite.



Engine exhaust contains odorless and colorless <u>carbon monoxide</u> gas.

To avoid accidental or unintended ignition of your engine during periods of storage, the following precautions should be followed:

 When storing the engine for short or extended periods of time make sure that the Engine Switch and the Fuel Valve are set in the OFF position.

TROUBLESHOOTING

Problem	Cause	Solution
Engine will not stort	No fuel	Add fuel
Engine will not start	Faulty spark plug	Replace spark plug
Engine will not start;	Low oil level	Fill crankcase to the proper level Place engine on a flat, level surface
Engine starts but runs roughly	Choke in the wrong position	Adjust choke
	Spark plug wire loose	Attach wire to spark plug
	Out of fuel	Fill fuel tank
Engine shuts down during operation	Low oil level	Fill crankcase to the proper level. Place generator on a flat, level surface
Engine cannot supply enough power or overheating	Insufficient ventilation	Check for air restriction. Move to a well ventilated area
Engine gallops	Engine governor defective	Contact the help line

For further technical support:

Technical Service

Mon - Fri 8:30 AM - 5:00 PM (PST/PDT)

Toll Free: 1-877-338-0999

tech@championpowerequipment.com

Engine Specifications

_	Engine
_	PTO Rotation Counterclockwise
_	Ignition Mode TCI (transistorized)
_	Displacement
_	Torque (max) 16.6 ft-lb at 2800 RPM
_	Compression
_	Output Shaft \dots 1 in. x 3.5 in. (2.5 cm x 8.5 cm)
_	End Hole Tapped 7/16 in. 20 UNF
_	Fuel Capacity 1.6 gallons (6.2 L)
_	Gross Weight 84.2 lb. (38.2 kg)
_	Net Weight
_	Height
_	Width 19.4 in. (49.3 cm)
-	Length

Fuel


Fuel capacity is 1.6 gallons (6.2 L). Use regular unleaded gasoline with a minimum octane rating of 85 and an ethanol content of less than 10% by volume.

Oil

Use 10W-30 automotive oil.

Oil capacity is 1.2 qt. (1.1 L).

Please reference the following chart for recommended oil types for use in the engine.

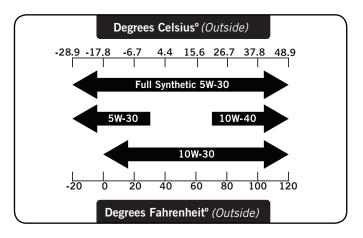



Weather will affect engine oil and engine performance. Change the type of engine oil used based on weather conditions to suit the engine needs.

Spark Plugs

OEM spark plug: NHSP F6RTC


Replacement spark plug: NGK BPR6ES or equivalent Make certain the spark plug gap is 0.7 - 0.8 mm or (0.028 - 0.031 in.).

Maintenance Valve Clearance


- Intake: 0.13 0.17 mm (0.005 0.007 in.)
- Exhaust: 0.18 0.22 mm (0.007 0.009 in.)

Note: Tech bulletin regarding the valve adjustment procedure is on www.championpowerequipment.com.

Keyway Shaft

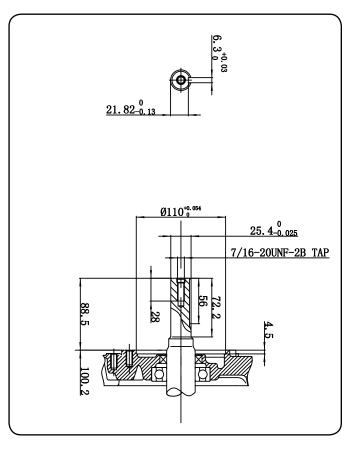

Parts Diagram

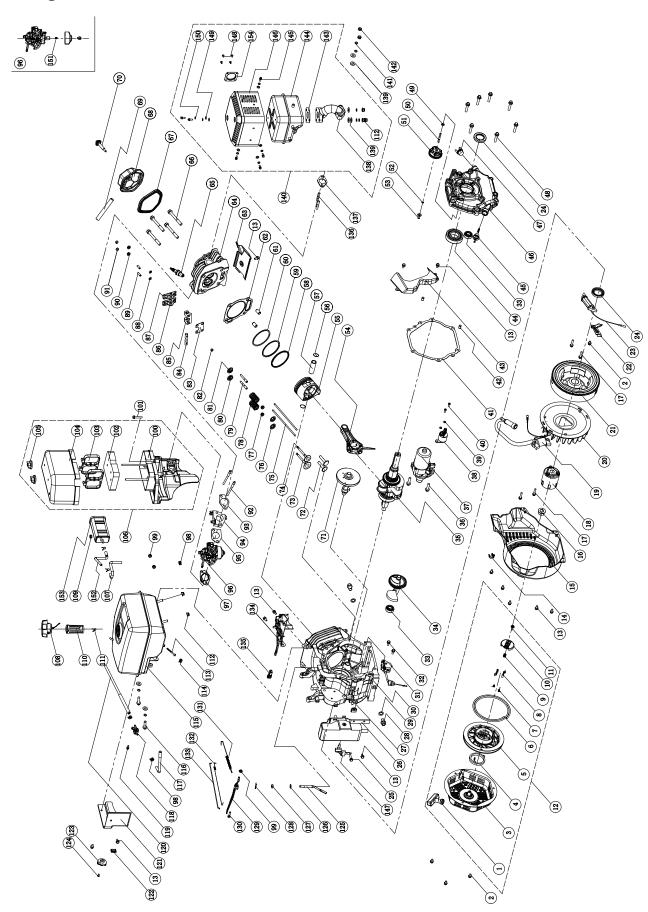

SPECIFICATIONS

Part	#	Part Number	Description	Otv
1.5789.0608	#	Part Number	Description	Qty
3				
5 2,10,003 Rope Ø5 × 1550 1 6 2,10,003 Rope Ø5 × 1550 1 7 45,060003,00 Spring, Ratchet 2 8 45,060002,00 Starter Ratchet, Steel 2 9 45,060007,00 Ratchet Guide 1 10 45,060007,00 Ratchet Guide 1 11 45,060008,00 Screw, Ratchet Guide 1 12 46,061000,00 Recoil Assembly 1 13 1,5789,0612 Flange Bolt M6 × 12 13 15 16,06100,00 Recoil Assembly 1 16 20,2007 Not M16 × 15 1 15 16,06010,00 Plailey, Starber 1 17 17,790,0629 Flange Bolt M6 × 29 4 48 46,12000,00 Palley, Starber 1 19 46,123000,03 Ignition Coil, Silicon Rubber 1 20 45,080001,00 Pooling Fan 1 24 21,1000 Plaile, Coil 1			· ·	_
6 2.10.003 Rope 65 x 1550 1 7 45.060003.00 Spring, Ratchet Steel 2 9 45.060009.00 Spring, Ratchet Guide 1 10 45.060009.00 Ratchet Guide 1 11 45.060009.00 Recola Kasembly 1 12 45.060000.00 Recola Assembly 1 13 1.5789.0612 Flange Bolt M6 x 12 13 14 2.05.003 Clamp Ø11.5 x 10 1 15 46.08010.00.48 Fan Cover, Yelfow 1 16 2.02.007 Nut M16 x 1.5 1 17 1.5789.0629 Fange Bolt M6 x 29 4 48 4.06000.03 Igntion Coil, Silicon Rubber 1 19 46.12300.03 Igntion Coil, Silicon Rubber 1 21 45.03000.00 Cooling Fan 1 24 2.11.007 Oli Seal 933 x 952 x 8 2 25 1.5789.0625 Fiange Bolt M6 x 25 1 26 12.5789.0625 Fiange Bo	4	45.060005.00	Spring, Recoil Starter	1
7 45.060003.00 Spring, Ratchet 2 8 45.060002.00 Starter Ratchet, Stedel 2 10 45.060007.00 Ratchet Guide 1 11 45.060007.00 Ratchet Guide 1 12 46.061000.00 Recoil Assembly 1 13 1.5789.0612 Flange Belt M6 × 12 13 14 2.05.003 Clamp Ø11.5 × 10 1 15 46.08100.00.04.8 Fan Cover, Yellow 1 16 2.02.007 Nt MI6 × 1.5 1 17 1.5789.0629 Flange Belt M6 × 29 4 48 5.06000.10 Palley, Starter 1 19 46.123000.03 Ignition Guil, Silicon Rubber 1 20 45.080001.00 Cooling Fan 1 24 45.12000.00 Palley, Starter 1 24 45.03000.00 Palley, Starter 1 25 45.12800.00 Palley, Starter 1 26 46.12800.00 Palley, Starter	_		 	
8 45.060002.00 Starter Ratchet, Steel 2 2 45.060002.00 Spring, Ratchet Guide 1 1 45.060008.00 Spring, Ratchet Guide 1 1 45.060008.00 Screw, Ratchet Guide 1 1 2 45.060008.00 Screw, Ratchet Guide 1 1 2 45.060008.00 Screw, Ratchet Guide 1 1 2 45.06000.00 Screw, Ratchet Guide 1 1 1 1 1 1 1 1 1	_			
10 45.060009.00 Spring, Ratchet Guide		 		
10				
12	10	45.060007.00		1
13 1.5789.0612	11			
14			'	
15				
16		 		
18				
19	17	1.5789.0629	Flange Bolt M6 × 29	4
20				
21			i	
22	_			
23 45.121000.00 Coil, Charging 1 24 2.11.007 Oil Seal 835 x 852 x 8 2 25 1.5789.0625 Flange Bolt Ms x 25 1 26 46.128000.00.48 Control Box Assembly, Yellow 1 27 45.030032.00 Sheath, Wire 1 28 2.08.039 Drain Bolt MI2 x 1.5 x 15 2 29 2.03.023 Washer Ø12.5 x Ø20 x 2, Drain Bolt 2 30 46.030100.01 Crankcase 1 31 45.127000.02 Oil Level Sensor 1 32 1.5789.0615 Flange Bolt M6 x 15 2 33 1.276.6202 Bearing 6202 2 2 2 2 2 34 47.05006.00 Weight Balancer 1 35 45.050100.09 Crankshaft, U 1 36 1.5789.0835 Flange Bolt M6 x 35 2 37 45.125100.00 Starter Motor Assembly 1 38 45.125100.00 Starter Motor Assembly </td <td></td> <td></td> <td></td> <td></td>				
24 2.11.007 Oil Seal Ø35 × Ø52 × 8 2 25 1.5789.0625 Flange Bolt M6 × 25 1 26 46.128000.00.48 Control Box Assembly, Yellow 1 27 45.030032.00 Sheath, Wire 1 28 2.08.039 Drain Bolt M12 × 1.5 × 15 2 30 46.030100.01 Crankcase 1 31 45.127000.02 Oil Level Sensor 1 31 45.127000.02 Oil Level Sensor 1 32 1.5789.0615 Flange Bolt M6 × 15 2 33 1.576.002 Bearing 6202 2 34 4.0580100.09 Crankshaft, U 1 36 1.5589.0835 Flange Bolt M8 × 35 2 37 45.125100.00 Starter Motor Assembly 1 38 45.125200.00 Relay, Starter 1 39 1.93.05 Lock Washer Ø5 2 40 1.16674.0516 Flange Bolt M5 × 16 2 41 46.030008.0 Gasket, Crankc		 	 	
26 46.128000.00.48 Control Box Assembly, Yellow 1 27 45.030032.00 Sheath, Wire 1 28 2.08.039 Drain Bolt MI2 × 1.5 × 15 2 29 2.03.023 Washer Ø12.5 × Ø20 × 2, Drain Bolt 2 30 46.030100.01 Crankcase 1 31 45.127000.02 Oli Level Sensor 1 32 1.5789.0615 Flange Bolt M6 × 15 2 33 1.276.6202 Bearing 6202 2 34 47.050006.00 Weight Balancer 1 35 45.050100.09 Crankshaft, U 1 36 1.5789.0835 Flange Bolt M8 × 35 2 37 45.125100.00 Relay, Starter 1 39 1.93.05 Lock Washer Ø5 2 40 1.16674.0516 Flange Bolt M5 × 16 2 41 46.030008.00 Gasket, Crankcase Cover 1 42 2.04.001 Dowel Pin Ø9 × 14 2 43 46.08060.00 Air Gu	_			
27 45.030032.00 Sheath, Wire 1 28 2.08.039 Drain Bolt M12 × 1.5 × 15 2 29 2.03.023 Washer Ø12.5 × Ø20 × 2, Drain Bolt 2 30 46.030100.01 Crankcase 1 31 45.127000.02 Oil Level Sensor 1 31 145.127000.02 Oil Level Sensor 1 32 1.5789.0615 Flange Bolt M6 × 15 2 33 1.276.6202 Bearing 6202 2 34 47.050006.00 Weight Balancer 1 35 45.050100.09 Crankshaft, U 1 36 1.5789.0835 Flange Bolt M8 × 35 2 37 45.125100.00 Starter Motor Assembly 1 38 45.12500.00 Relay, Starter 1 40 1.16674.0516 Flange Bolt M5 × 16 2 41 46.030008.00 Gassket, Crankcase Cover 1 42 2.04.001 Dowel Pin Ø9 × 14 2 42 2.04.001 Dowel Pin	25	1.5789.0625	Flange Bolt M6 × 25	1
28 2.08.039 Drain Bolt M12 × 1.5 × 15 2 29 2.03.023 Washer 912.5 × Ø20 × 2, Drain Bolt 2 30 46.030100.01 Crankcase 1 31 45.127000.02 Oil Level Sensor 1 32 1.5789.0615 Flange Bolt M6 × 15 2 33 1.276.6202 Bearing 6202 2 34 47.050006.00 Weight Balancer 1 35 45.050100.09 Crankshaft, U 1 36 1.5789.0835 Flange Bolt M8 × 35 2 37 45.125100.00 Starter Motor Assembly 1 38 45.125200.00 Relay, Starter 1 40 1.1674.0516 Flange Bolt M5 × 16 2 41 46.030008.00 Gasket, Crankcase Cover 1 42 2.04.001 Dowel Pin Ø9 × 14 2 43 46.080600.00 Air Guide, Right Side 1 44 1.276.6207 Bearing 6207 1 45 46.033000.01.48 O		 	 	
29 2.03.023 Washer Ø12.5 × Ø20 × 2, Drain Bolt 2 30 46.030100.01 Crankcase 1 31 45.12700.02 Oil Level Sensor 1 32 1.5789.0615 Flange Bolt M6 × 15 2 33 1.276.6202 Bearing 6202 2 34 47.050006.00 Weight Balancer 1 35 45.050100.09 Crankshaft, U 1 36 1.5789.0835 Flange Bolt M8 × 35 2 37 45.125100.00 Starter Motor Assembly 1 38 45.125200.00 Relay, Starter 1 40 1.16674.0516 Flange Bolt M5 × 16 2 41 46.030008.00 Gasket, Crankcase Cover 1 42 2.04.001 Dowel Pin Ø9 × 14 2 42 2.04.001 Dowel Pin Ø9 × 14 2 43 46.08060.00 Air Guide, Right Side 1 44 1.276.6207 Bearing ECO? 1 45 46.031000.01.48 Oil Dipsti				
30 46.030100.01 Crankcase 1 31 45.12700.02 Oil Level Sensor 1 32 1.5789.0615 Flange Bolt M6 x 15 2 33 1.276.6202 Bearing 6202 2 34 47.050006.00 Weight Balancer 1 35 45.050100.09 Crankshaft, U 1 36 1.5789.0835 Flange Bolt M8 x 35 2 37 45.125100.00 Starter Motor Assembly 1 38 45.125200.00 Relay, Starter 1 39 1.93.05 Lock Washer Ø5 2 40 1.16674.0516 Flange Bolt M5 x 16 2 41 46.030008.00 Gasket, Crankcase Cover 1 42 2.04.001 Dowel Pin Ø9 x 14 2 43 46.080600.00 Air Guide, Right Side 1 44 1.276.6207 Bearing 6207 1 45 46.031000.01.48 Oil Dipstick Assembly, Yellow 1 46 45.030007.01 Cover, Crankcase Cover 1 47 22.031000.01.48 Oil Filler Cap, Yellow 1 48 1.5789.0840.0.8 Flange Bolt M8 x 30 7 49 2.03.021.1 Washer Ø5 1 49 2.03.021.1 Washer Ø5 1 50 45.110013.00 Gear, Governor Gear 1 51 45.110010.00 Gear, Governor Gear 1 52 1.110011.00 Clip, Governor Gear 1 53 45.110012.00 Bushing, Governor Gear 1 54 47.050200.00 Piston 1 55 46.050005.00 Piston 1 56 2.09.004 Circlip Ø21 x Ø1 2 57 45.050005.00 Ring, Oil 1 58 46.050000.00 Ring, Oil 1 59 46.050005.00 Piston 1 50 46.050000.00 Ring, Oil 1 51 46.050000.00 Ring, Oil 1 52 2.15.002(FRTC) Spark Pillor 1 53 45.10012.00 Bushing, Governor Gear 1 54 47.050200.00 Connecting Rod 1 56 2.09.004 Circlip Ø21 x Ø1 2 57 45.050003.00 Ring, Oil 1 58 46.050003.00 Ring, Oil 1 59 46.050000.00 Ring, First Piston 1 60 46.05030.00 Ring, Oil 1 61 2.04.004 Dowel Pin Ø12 x 20 2 62 46.030009.01 Gasket, Cylinder Head 1 63 46.080400.00 Air Guider Head 1 64 46.020002.00 Gasket, Cylinder Head 1 65 2.15.002(FRTC) Spark Piller Fubro 1 64 46.020002.00 Gasket, Cylinder Head 1 65 2.15.002(FRTC) Spark Piller Fubro 1 71 46.04003.00 Bolt, Cylinder Head Cover 1 72 45.040013.00 Brashaft 1 73 45.040002.00 Valve, Intake 1 74 45.040015.00 Retainer, Valve Spring 2 75 45.040015.00 Retainer, Valve Spring 2 76 45.040015.00 Retainer, Valve Spring 2 77 45.040017.00 Oil Seal, Valve 2		 		
31 45.12700.02			i	
33 1.276.6202 Bearing 6202 2 34 47.050006.00 Weight Balancer 1 35 45.050100.09 Crankshaft, U 1 36 1.5789.0835 Flange Bolt M8 x 35 2 37 45.125100.00 Starter Motor Assembly 1 38 45.125200.00 Relay, Starter 1 39 1.93.05 Lock Washer Ø5 2 40 1.16674.0516 Flange Bolt M5 x 16 2 41 46.030008.00 Gasket, Crankcase Cover 1 42 2.04.001 Dowel Pin Ø9 x 14 2 43 46.086600.00 Air Guide, Right Side 1 44 1.276.6207 Bearing 6207 1 45 46.031000.01.48 Oil Dipstick Assembly, Yellow 1 46 45.030007.01 Cover, Crankcase 1 47 22.031000.01.48 Oil Filler Cap, Yellow 1 48 1.5789.0840.0.8 Flange Bolt M8 x 40 7 49 2.03.021.1 Washer Ø6.4 x Ø13 x 1, Black 1 50 45.110013.00 Shaft, Governor Gear 1 51 45.11010.00 Gear, Governor Gear 1 52 21.110011.00 Clip, Governor Gear 1 53 45.110012.00 Bushing, Governor Gear 1 54 45.050005.00 Piston 1 55 46.050005.00 Piston 1 56 2.09.004 Circlip Ø21 x Ø1 2 57 45.050003.00 Ring, Second Piston 1 60 46.050302.00 Ring, Second Piston 1 58 46.050302.00 Ring, Second Piston 1 59 46.050302.00 Ring, Second Piston 1 60 46.050301.00 Ring, First Piston 1 61 2.04.004 Dovel Pin Ø12 x 20 2 62 46.03009.01 Gasket, Cylinder Head 1 63 46.08040.00 Air Filange Bolt M10 x 80 4 64 46.01010.00 Gasket, Cylinder Head 1 65 2.15.002(F6RTC) Spark Plug F6RTC 1 66 2.08.014 Flange Bolt M10 x 80 4 67 46.020002.00 Gasket, Cylinder Head 1 69 45.020001.00 Bresher Tube 1 70 45.02000.00 Comesting Rod 1 71 46.04100.00 Gasket, Cylinder Head 0 72 45.040013.00 Bresher Tube 1 74 45.040010.00 Gasket, Cylinder Head Cover 1 75 46.040000.00 Gasket, Cylinder Head Cover 1 76 46.04000.00 Gasket, Cylinder Head Cover 1 77 46.04000.00 Cover, Cylinder Head Cover 1 78 46.040000.00 Ring, First Plug F6RTC 1 79 45.040001.00 Ring, First Plug F6RTC 1 70 45.04001.00 Ring, First Plug F6RTC 1 71 46.040005.00 Push Rod 2 72 45.040013.00 Lifter, Valve 2 73 45.040015.00 Relairer, Valve Spring 2 74 45.0400015.00 Push Rod 2 75 46.0400015.00 Push Rod 2 76 45.040015.00 Push Rod 2 77 45.040015.00 Push Rod 2 78 45.040015.00 Push Ro			 	
34 47.050006.00 Weight Balancer 1 35 45.050100.09 Crankshaft, U 1 36 1.5789.0835 Flange Bolt M8 × 35 2 37 45.125100.00 Starter Motor Assembly 1 38 45.125200.00 Relay, Starter 1 40 1.16674.0516 Flange Bolt M5 × 16 2 41 46.030008.00 Gasket, Crankcase Cover 1 42 2.04.001 Dowel Pin Ø9 x 14 2 43 46.080600.00 Air Guide, Right Side 1 44 1.276.6207 Bearing 6207 1 45 46.031000.01.48 Oil Pipistick Assembly, Yellow 1 46 45.030007.01 Cover, Crankcase 1 47 22.031000.01.48 Oil Filier Cap, Yellow 1 48 1.5789.0840.0.8 Flange Bolt M8 × 40 7 49 20.3.021.1 Washer Ø6.4 × Ø13 x 1, Black 1 50 45.110013.00 Shaft, Governor Gear 1 51 <	32	1.5789.0615	Flange Bolt M6 × 15	2
35 45.050100.09 Crankshaft, U 1 36 1.5789.0835 Flange Bolt M8 x 35 2 37 45.125100.00 Starter Motor Assembly 1 38 45.125200.00 Relay, Starter 1 39 1.93.05 Lock Washer Ø5 2 40 1.16674.0516 Flange Bolt M5 x 16 2 41 46.030008.00 Gasket, Crankcase Cover 1 42 2.04.001 Dowel Pin Ø9 x 14 2 43 46.080600.00 Air Guide, Right Side 1 41 1.276.6207 Bearing 6207 1 45 46.031000.01.48 Oil Dipstick Assembly, Yellow 1 46 45.030007.01 Cover, Crankcase 1 47 22.031000.01.48 Oil Flier Cap, Yellow 1 48 1.5789.0840.0.8 Flange Bolt M8 x 40 7 49 2.03.021.1 Washer Ø6.4 x Ø13 x 1, Black 1 50 45.110013.00 Shaft, Governor Gear 1 51 45.110100.00 Gear, Governor Gear 1 52 21.110011.00 Clip, Governor Gear 1 53 45.110012.00 Bushing, Governor Gear 1 54 47.050200.00 Connecting Rod 1 55 46.050005.00 Piston 1 56 2.09.004 Circlip Ø21 x Ø1 2 57 45.050003.00 Pin, Piston 1 58 45.050003.00 Pin, Piston 1 59 46.050302.00 Ring, Second Piston 1 50 46.050301.00 Ring, Second Piston 1 51 45.10010.00 Gasket, Cylinder Head 1 52 46.050005.00 Pin, Piston 1 53 45.10000.00 Ring, Second Piston 1 54 47.050200.00 Ring, Second Piston 1 56 2.09.004 Circlip Ø21 x Ø1 2 57 45.050003.00 Pin, Piston 1 58 45.050033.00 Ring, Oil 1 59 46.050302.00 Ring, Second Piston 1 60 46.050301.00 Ring, First Piston 1 61 2.04.004 Dowel Pin Ø12 x 20 2 62 46.030009.01 Gasket, Cylinder Head 1 63 46.080400.00 Air Guide, Lower 1 64 46.01010.00 Cylinder Head 1 65 2.15.002(F6RTC) Spark Plug F6RTC 1 68 46.021000.00 Bott, Cylinder Head 1 69 45.02010.00 Bott, Cylinder Head Cover 1 71 46.041000.00 Cassath 1 72 45.040013.00 Liffer, Valve 2 73 45.040013.00 Liffer, Valve 1 74 45.040005.00 Push Rod 2 75 45.040015.00 Retainer, Valve Spring 2 76 45.040015.00 Push Rod 2 77 45.040015.00 Retainer, Valve Spring 2 78 45.040015.00 Retainer, Valve Spring 2	33	1.276.6202	Bearing 6202	2
36 1.5789.0835 Flange Bolt M8 × 35 2 37 45.125100.00 Starter Motor Assembly 1 38 45.125200.00 Relay, Starter 1 39 19.3.05 Lock Washer Ø5 2 40 1.16674.0516 Flange Bolt M5 × 16 2 41 46.030008.00 Gasket, Crankcase Cover 1 42 2.04.001 Dowel Pin Ø9 × 14 2 43 46.080600.00 Air Guide, Right Side 1 44 1.276.6207 Bearing 6207 1 45 46.031000.01.48 Oil Dipstick Assembly, Yellow 1 46 45.030007.01 Cover, Crankcase 1 47 22.031000.01.48 Oil Filler Cap, Yellow 1 48 1.5789.0840.0.8 Flange Bolt M8 × 40 7 49 2.03.021.1 Washer Ø6.4 × Ø13 × 1, Black 1 50 45.110013.00 Shaft, Governor Gear 1 51 45.110010.00 Gear, Governor 1 52 2	_			
37 45.125100.00 Starter Motor Assembly 1 38 45.125200.00 Relay, Starter 1 39 1.93.05 Lock Washer Ø5 2 40 1.16674.0516 Flange Bolt M5 x 16 2 41 46.030008.00 Gasket, Crankcase Cover 1 42 2.04.001 Dowel Pin Ø9 x 14 2 43 46.080600.00 Air Guide, Right Side 1 44 1.276.6207 Bearing 6207 1 45 46.031000.01.48 Oil Dipstick Assembly, Yellow 1 46 45.030007.01 Cover, Crankcase 1 47 22.031000.01.48 Oil Filler Cap, Yellow 1 48 1.5789.0840.0.8 Flange Bolt M8 x 40 7 49 2.03.021.1 Washer Ø6.4 x Ø13 x 1, Black 1 50 45.110013.00 Shaft, Governor Gear 1 51 45.11010.00 Gear, Governor 1 52 21.110011.00 Clip, Governor Gear 1 53 45.110012.00 Bushing, Governor Gear 1 54 47.050200.00 Connecting Rod 1 55 46.050005.00 Piston 1 56 2.09.004 Circlip Ø21 x Ø1 2 57 45.050003.00 Pin, Piston 1 58 45.050303.00 Pin, Piston 1 59 46.050302.00 Ring, Oil 1 59 46.050302.00 Ring, Gill 1 50 46.050301.00 Ring, First Piston 1 51 2.04.004 Dovel Pin Ø12 x 20 2 52 46.030009.01 Gasket, Cylinder Head 1 53 46.080400.00 Air Guide, Lower 1 54 47.050200.00 Ring, First Piston 1 55 46.050301.00 Ring, First Piston 1 56 2.09.004 Cylinder Head 1 57 45.050003.00 Pin, Piston 1 58 45.050303.00 Ring, Oil 1 59 46.050301.00 Ring, First Piston 1 60 46.050301.00 Ring, First Piston 1 61 2.04.004 Dovel Pin Ø12 x 20 2 62 46.030009.01 Gasket, Cylinder Head 1 63 46.08040.00 Air Guide, Lower 1 64 46.01010.00 Cylinder Head 1 65 2.15.002(F6RTC) Spark Plug F6RTC 1 66 2.08.014 Flange Bolt M10 x 80 4 67 46.020002.00 Gasket, Cylinder Head 1 67 45.02001.00 Bolt, Cylinder Head 1 68 46.02100.00 Command Plus Relater Tube 1 70 45.02001.00 Bolt, Cylinder Head Cover 1 71 46.041000.00 Camshaft 1 72 45.040013.00 Lifter, Valve 2 73 45.040015.00 Plus Rod 2 74 45.0400015.00 Plus Rod 2 75 45.040015.00 Retainer, Valve Spring 2 76 45.040015.00 Retainer, Valve Spring 2 77 45.040017.00 Oil Seal, Valve 2				
38 45.125200.00 Relay, Starter 1 39 1.93.05 Lock Washer Ø5 2 40 1.16674.0516 Flange Bolt M5 × 16 2 41 46.030008.00 Gasket, Crankcase Cover 1 42 2.04.001 Dowel Pin Ø3 × 14 2 43 46.080600.00 Air Guide, Right Side 1 44 1.276.6207 Bearing 6207 1 45 46.031000.01.48 Oil Dipstick Assembly, Yellow 1 46 45.030007.01 Cover, Crankcase 1 47 22.031000.01.48 Oil Filler Cap, Yellow 1 48 1.5789.0840.0.8 Flange Bolt M8 × 40 7 49 2.03.021.1 Washer Ø6.4 × Ø13 × 1, Black 1 50 45.110013.00 Shaft, Governor Gear 1 51 45.110100.00 Gear, Governor Gear 1 51 45.110101.00 Cilp, Governor Gear 1 53 45.110012.00 Bushing, Governor Gear 1 54 47.050200.00 Connecting Rod 1 55 46.050005.00 Piston 1 56 2.09.004 Circlip Ø21 × Ø1 2 57 45.050030.00 Pin, Piston 1 58 45.050030.00 Pin, Piston 1 59 46.050302.00 Ring, Second Piston 1 60 46.050301.00 Ring, First Piston 1 61 2.04.004 Dowel Pin Ø12 × 20 2 62 46.030009.01 Gasket, Cylinder Head 1 63 46.080400.00 Air Giade, Lower 1 64 46.01010.00 Gasket, Cylinder Head 1 65 2.15.002(F6RTC) Spark Plug F6RTC 1 66 2.08.014 Flange Bolt M10 × 80 4 67 46.020002.00 Gasket, Cylinder Head 1 68 46.02100.00 Connecting Rod 1 70 45.0200.00 Gasket, Cylinder Head 1 67 46.020002.00 Gasket, Cylinder Head 1 68 46.02100.00 Connecting Rod 1 71 45.040013.00 Lifter, Valve 2 73 45.040013.00 Lifter, Valve 2 74 45.040013.00 Lifter, Valve 2 75 45.040015.00 Retainer, Valve Spring 2 76 45.040015.00 Retainer, Valve Spring 2 77 45.040017.00 Oil Seal, Valve 2		<u> </u>	-	
39 1.93.05 Lock Washer Ø5 2 40 1.16674.0516 Flange Bolt MS × 16 2 41 46.030008.00 Gasket, Crankcase Cover 1 42 2.04.001 Dowel Pin Ø9 × 14 2 43 46.080600.00 Air Guide, Right Side 1 44 1.276.6207 Bearing 6207 1 45 46.031000.01.48 Oil Dipstick Assembly, Yellow 1 46 45.0330007.01 Cover, Crankcase 1 47 22.031000.01.48 Oil Filler Cap, Yellow 1 48 1.5789.0840.0.8 Flange Bolt MS × 40 7 49 2.03.021.1 Washer Ø6.4 × Ø13 × 1, Black 1 50 45.110013.00 Shaft, Governor Gear 1 51 45.110010.00 Gear, Governor 1 52 21.110011.00 Clip, Governor Gear 1 53 45.110012.00 Bushing, Governor Gear 1 54 47.050200.00 Connecting Rod 1 55 <th< td=""><td></td><td></td><td><u> </u></td><td></td></th<>			<u> </u>	
41 46.030008.00 Gasket, Crankcase Cover 1 42 2.04.001 Dowel Pin Ø9 x 14 2 43 46.080600.00 Air Guide, Right Side 1 44 1.276.6207 Bearing 6207 1 45 46.031000.01.48 Oil Dipstick Assembly, Yellow 1 46 45.030007.01 Cover, Crankcase 1 47 22.031000.01.48 Oil Filler Cap, Yellow 1 48 1.5789.0840.0.8 Flange Bolt MS x 40 7 49 2.03.021.1 Washer Ø6.4 x Ø13 x 1, Black 1 50 45.110013.00 Shaft, Governor Gear 1 51 45.11010.00 Gear, Governor Gear 1 52 21.110011.00 Clip, Governor Gear 1 53 45.110012.00 Bushing, Governor Gear 1 54 47.050200.00 Connecting Rod 1 55 46.050005.00 Piston 1 56 2.09.004 Circlip Ø21 x Ø1 2 57 45.050003.00 Ring, Oil 1 58 45.050303.00 Ring, Oil 1 59 46.050301.00 Ring, First Piston 1 60 46.050301.00 Ring, First Piston 1 61 2.04.004 Dowel Pin Ø12 x 20 2 62 46.03009.01 Gasket, Cylinder Head 1 63 46.080400.00 Air Guide, Lower 1 64 46.010100.00 Gasket, Cylinder Head 1 65 2.15.002(F6RTC) Spark Plug FGRTC 1 66 2.08.014 Flange Bolt M10 x 80 4 67 46.020002.00 Gasket, Cylinder Head 1 69 45.02000.00 Gasket, Cylinder Head 1 69 45.020001.00 Bolt, Cylinder Head 1 67 46.020002.00 Gasket, Cylinder Head 1 67 46.020002.00 Gasket, Cylinder Head 1 68 46.021000.00 Cover, Cylinder Head 1 69 45.020001.00 Bolt, Cylinder Head 1 70 45.020001.00 Bolt, Cylinder Head 1 71 46.04100.00 Cover, Cylinder Head 1 72 45.040013.00 Lifter, Valve 2 73 45.040002.00 Valve, Intake 1 74 45.040015.00 Push Rod 2 75 45.040015.00 Retainer, Valve Spring 2 76 45.040015.00 Retainer, Valve Spring 2				
42 2.04.001 Dowel Pin Ø9 x 14 2 43 46.080600.00 Air Guide, Right Side 1 44 1.276.6207 Bearing 6207 1 45 46.031000.01.48 Oil Dipstick Assembly, Yellow 1 46 45.030007.01 Cover, Crankcase 1 47 22.031000.01.48 Oil Filler Cap, Yellow 1 48 1.5789.0840.0.8 Flange Bolt M8 x 40 7 49 2.03.021.1 Washer Ø6.4 x Ø13 x 1, Black 1 50 45.110013.00 Shaft, Governor Gear 1 51 45.110010.00 Gear, Governor 1 52 21.110011.00 Clip, Governor Gear 1 53 45.110012.00 Bushing, Governor Gear 1 54 47.050200.00 Connecting Rod 1 55 46.050005.00 Piston 1 56 2.09.004 Circlip Ø21 x Ø1 2 57 45.050003.00 Ring, Piston 1 58 45.050003.00	40	1.16674.0516	Flange Bolt M5 × 16	2
43 46.080600.00 Air Guide, Right Side 1 44 1.276.6207 Bearing 6207 1 45 46.031000.01.48 Oil Dipstick Assembly, Yellow 1 46 45.030007.01 Cover, Crankcase 1 47 22.031000.01.48 Oil Filler Cap, Yellow 1 48 1.5789.0840.0.8 Flange Bolt M8 × 40 7 49 2.03.021.1 Washer Ø6.4 × Ø13 × 1, Black 1 50 45.110013.00 Shaft, Governor Gear 1 51 45.110010.00 Gear, Governor 1 52 21.110011.00 Clip, Governor Gear 1 54 47.050200.00 Connecting Rod 1 54 47.050200.00 Connecting Rod 1 55 46.050005.00 Piston 1 56 2.99.004 Circlip Ø21 × Ø1 2 57 45.050003.00 Ring, Oil 1 58 45.050303.00 Ring, Sing, First Piston 1 60 46.050302.00				
44 1.276.6207 Bearing 6207 1 45 46.031000.01.48 Oil Dipstick Assembly, Yellow 1 46 45.030007.01 Cover, Crankcase 1 47 22.031000.01.48 Oil Filler Cap, Yellow 1 48 1.5789.0840.0.8 Flange Bolt M8 × 40 7 49 2.03.021.1 Washer Ø6.4 × Ø13 × 1, Black 1 50 45.110013.00 Shaft, Governor Gear 1 51 45.11010.00 Gear, Governor 1 52 21.110011.00 Clip, Governor Gear 1 53 45.110012.00 Bushing, Governor Gear 1 54 47.050200.00 Connecting Rod 1 55 46.050005.00 Piston 1 56 2.09.004 Circlip Ø21 × Ø1 2 57 45.050003.00 Ring, Piston 1 58 45.050303.00 Ring, Oil 1 59 46.050302.00 Ring, First Piston 1 60 46.050302.00 R				
45 46.031000.01.48 Oil Dipstick Assembly, Yellow 1 46 45.030007.01 Cover, Crankcase 1 47 22.031000.01.48 Oil Filler Cap, Yellow 1 48 1.5789.0840.0.8 Flange Bolt M8 x 40 7 49 2.03.021.1 Washer Ø6.4 x Ø13 x 1, Black 1 50 45.110013.00 Shaft, Governor Gear 1 51 45.11010.00 Gear, Governor 1 52 21.110011.00 Clip, Governor Gear 1 53 45.10012.00 Bushing, Governor Gear 1 54 47.050200.00 Connecting Rod 1 55 46.050005.00 Piston 1 56 2.09.004 Circlip Ø21 x Ø1 2 57 45.050303.00 Ring, Piston 1 58 45.050303.00 Ring, Sicond Piston 1 60 46.050301.00 Ring, Second Piston 1 61 2.04.004 Dowel Pin Ø12 x 20 2 62 46.030009.01				
46 45.030007.01 Cover, Crankcase 1 47 22.031000.01.48 Oil Filler Cap, Yellow 1 48 1.5789.0840.0.8 Flange Bolt M8 × 40 7 49 2.03.021.1 Washer Ø6.4 × Ø13 × 1, Black 1 50 45.110013.00 Shaft, Governor Gear 1 51 45.110010.00 Clip, Governor Gear 1 52 21.110011.00 Clip, Governor Gear 1 53 45.110012.00 Bushing, Governor Gear 1 54 47.050200.00 Connecting Rod 1 55 46.050005.00 Piston 1 56 2.09.004 Circlip Ø21 × Ø1 2 57 45.050003.00 Ring, Piston 1 58 45.050303.00 Ring, Second Piston 1 60 46.050301.00 Ring, First Piston 1 61 2.04.004 Dowel Pin Ø12 × 20 2 62 46.030009.01 Gasket, Cylinder Head 1 63 46.080400.00		-		
48 1.5789.0840.0.8 Flange Bolt M8 × 40 7 49 2.03.021.1 Washer Ø6.4 × Ø13 × 1, Black 1 50 45.110103.00 Shaft, Governor Gear 1 51 45.110100.00 Gear, Governor Gear 1 52 21.110011.00 Clip, Governor Gear 1 53 45.11010.00 Bushing, Governor Gear 1 54 47.050200.00 Connecting Rod 1 55 46.050005.00 Piston 1 56 2.09.004 Circlip Ø21 x Ø1 2 57 45.050003.00 Pin, Piston 1 58 45.050003.00 Ring, Oil 1 59 46.050302.00 Ring, Second Piston 1 60 46.050302.00 Ring, First Piston 1 61 2.04.004 Dowel Pin Ø12 x 20 2 62 46.03009.01 Gasket, Cylinder Head 1 63 46.080400.00 Air Guide, Lower 1 64 46.010100.00 Cylinder He	46			1
49 2.03.021.1 Washer Ø6.4 x Ø13 x 1, Black 1 50 45.110013.00 Shaft, Governor Gear 1 51 45.11010.00 Gear, Governor 1 52 21.110011.00 Clip, Governor Gear 1 53 45.110012.00 Bushing, Governor Gear 1 54 47.050200.00 Connecting Rod 1 55 46.050005.00 Piston 1 56 2.09.004 Circlip Ø21 x Ø1 2 57 45.050303.00 Pin, Piston 1 58 45.050303.00 Ring, Gil 1 59 46.050302.00 Ring, Second Piston 1 60 46.050301.00 Ring, First Piston 1 61 2.04.004 Dowel Pin Ø12 x 20 2 62 46.03009.01 Gasket, Cylinder Head 1 63 46.08400.00 Air Guide, Lower 1 64 46.010100.00 Cylinder Head 1 65 2.15.002(F6RTC) Spark Plug F6RTC	47	22.031000.01.48	Oil Filler Cap, Yellow	1
50 45.110013.00 Shaft, Governor Gear 1 51 45.110100.00 Gear, Governor 1 52 21.110011.00 Clip, Governor Gear 1 53 45.110012.00 Bushing, Governor Gear 1 54 47.050200.00 Connecting Rod 1 55 46.050005.00 Piston 1 56 2.09.004 Circlip Ø21 × Ø1 2 57 45.050003.00 Pin, Piston 1 58 45.050303.00 Ring, Oil 1 59 46.050302.00 Ring, Second Piston 1 60 46.050302.00 Ring, First Piston 1 61 2.04.004 Dowel Pin Ø12 × 20 2 62 46.030009.01 Gasket, Cylinder Head 1 63 46.080400.00 Air Guide, Lower 1 64 46.010100.00 Cylinder Head 1 65 2.15.002(FGRTC) Spark Plug FGRTC 1 66 2.08.014 Flange Bolt M10 × 80	48	1.5789.0840.0.8	Flange Bolt M8 × 40	7
51 45.110100.00 Gear, Governor 1 52 21.110011.00 Clip, Governor Gear 1 53 45.110012.00 Bushing, Governor Gear 1 54 47.050200.00 Connecting Rod 1 55 46.050005.00 Piston 1 56 2.09.004 Circlip Ø21 x Ø1 2 57 45.050003.00 Pin, Piston 1 58 45.050303.00 Ring, Oil 1 59 46.050302.00 Ring, Second Piston 1 60 46.050301.00 Ring, First Piston 1 61 2.04.004 Dowel Pin Ø12 x 20 2 62 46.030009.01 Gasket, Cylinder Head 1 63 46.080400.00 Air Guide, Lower 1 64 46.010100.00 Cylinder Head 1 65 2.15.002(F6RTC) Spark Plug F6RTC 1 66 2.08.014 Flange Bolt M10 x 80 4 67 46.020002.00 Gasket, Cylinder Head Cover			i	
52 21.110011.00 Clip, Governor Gear 1 53 45.110012.00 Bushing, Governor Gear 1 54 47.050200.00 Connecting Rod 1 55 46.050005.00 Piston 1 56 2.09.004 Circlip Ø21 x Ø1 2 57 45.050003.00 Pin, Piston 1 58 45.050303.00 Ring, Gil 1 59 46.050302.00 Ring, Second Piston 1 60 46.050301.00 Ring, First Piston 1 61 2.04.004 Dowel Pin Ø12 x 20 2 62 46.030009.01 Gasket, Cylinder Head 1 63 46.080400.00 Air Guide, Lower 1 64 46.010100.00 Cylinder Head 1 65 2.15.002(F6RTC) Spark Plug F6RTC 1 66 2.08.014 Flange Bolt M10 x 80 4 67 46.020002.00 Gasket, Cylinder Head Cover 1 68 46.021000.00 Cover, Cylinder Head<		<u> </u>		
53 45.110012.00 Bushing, Governor Gear 1 54 47.050200.00 Connecting Rod 1 55 46.050005.00 Piston 1 56 2.09.004 Circlip Ø21 x Ø1 2 57 45.050003.00 Pin, Piston 1 58 45.050303.00 Ring, Oil 1 59 46.050302.00 Ring, Second Piston 1 60 46.050301.00 Ring, First Piston 1 61 2.04.004 Dowel Pin Ø12 x 20 2 62 46.030009.01 Gasket, Cylinder Head 1 63 46.080400.00 Air Guide, Lower 1 64 46.010100.00 Cylinder Head 1 65 2.15.002(F6RTC) Spark Plug F6RTC 1 66 2.08.014 Flange Bolt M10 x 80 4 67 46.020002.00 Gasket, Cylinder Head Cover 1 68 46.021000.00 Cover, Cylinder Head 1 70 45.020001.00 Breather Tube				_
54 47.050200.00 Connecting Rod 1 55 46.050005.00 Piston 1 56 2.09.004 Circlip Ø21 x Ø1 2 57 45.050003.00 Pin, Piston 1 58 45.050303.00 Ring, Oil 1 59 46.050302.00 Ring, Second Piston 1 60 46.050301.00 Ring, First Piston 1 61 2.04.004 Dowel Pin Ø12 x 20 2 62 46.030009.01 Gasket, Cylinder Head 1 63 46.080400.00 Air Guide, Lower 1 64 46.010100.00 Cylinder Head 1 65 2.15.002(F6RTC) Spark Plug F6RTC 1 66 2.08.014 Flange Bolt M10 x 80 4 67 46.020002.00 Gasket, Cylinder Head Cover 1 68 46.021000.00 Cover, Cylinder Head Cover 1 69 45.020001.00 Breather Tube 1 70 45.020100.00 Bolt, Cylinder Head Cov				
56 2.09.004 Circlip Ø21 x Ø1 2 57 45.050003.00 Pin, Piston 1 58 45.050303.00 Ring, Oil 1 59 46.050302.00 Ring, Second Piston 1 60 46.050301.00 Ring, First Piston 1 61 2.04.004 Dowel Pin Ø12 x 20 2 62 46.030009.01 Gasket, Cylinder Head 1 63 46.08400.00 Air Guide, Lower 1 64 46.010100.00 Cylinder Head 1 65 2.15.002(F6RTC) Spark Plug F6RTC 1 66 2.08.014 Flange Bolt M10 x 80 4 67 46.020002.00 Gasket, Cylinder Head Cover 1 68 46.021000.00 Cover, Cylinder Head 1 69 45.02001.00 Breather Tube 1 70 45.020010.00 Bolt, Cylinder Head Cover 1 71 46.041000.00 Camshaft 1 72 45.0400013.00 Lifter, Valve <td></td> <td></td> <td> </td> <td></td>			 	
57 45.050003.00 Pin, Piston 1 58 45.050303.00 Ring, Oil 1 59 46.050302.00 Ring, Second Piston 1 60 46.050301.00 Ring, First Piston 1 61 2.04.004 Dowel Pin Ø12 x 20 2 62 46.030009.01 Gasket, Cylinder Head 1 63 46.080400.00 Air Guide, Lower 1 64 46.010100.00 Cylinder Head 1 65 2.15.002(F6RTC) Spark Plug F6RTC 1 66 2.08.014 Flange Bolt M10 x 80 4 67 46.020002.00 Gasket, Cylinder Head Cover 1 68 46.021000.00 Cover, Cylinder Head 1 70 45.020001.00 Breather Tube 1 70 45.020100.00 Bolt, Cylinder Head Cover 1 71 46.041000.00 Camshaft 1 72 45.040013.00 Lifter, Valve 2 73 45.040013.00 Valve, Intake </td <td></td> <td></td> <td></td> <td></td>				
58 45.050303.00 Ring, Oil 1 59 46.050302.00 Ring, Second Piston 1 60 46.050301.00 Ring, First Piston 1 61 2.04.004 Dowel Pin Ø12 x 20 2 62 46.030009.01 Gasket, Cylinder Head 1 63 46.080400.00 Air Guide, Lower 1 64 46.010100.00 Cylinder Head 1 65 2.15.002(F6RTC) Spark Plug F6RTC 1 66 2.08.014 Flange Bolt M10 x 80 4 67 46.020002.00 Gasket, Cylinder Head Cover 1 68 46.021000.00 Cover, Cylinder Head 1 69 45.020001.00 Breather Tube 1 70 45.020100.00 Bolt, Cylinder Head Cover 1 71 46.041000.00 Camshaft 1 72 45.040013.00 Lifter, Valve 2 73 45.040005.00 Valve, Intake 1 74 45.040005.00 Valve, Exhaus				
59 46.050302.00 Ring, Second Piston 1 60 46.050301.00 Ring, First Piston 1 61 2.04.004 Dowel Pin Ø12 x 20 2 62 46.030009.01 Gasket, Cylinder Head 1 63 46.080400.00 Air Guide, Lower 1 64 46.010100.00 Cylinder Head 1 65 2.15.002(F6RTC) Spark Plug F6RTC 1 66 2.08.014 Flange Bolt M10 x 80 4 67 46.020002.00 Gasket, Cylinder Head Cover 1 68 46.021000.00 Cover, Cylinder Head 1 69 45.020001.00 Breather Tube 1 70 45.020100.00 Bolt, Cylinder Head Cover 1 71 46.041000.00 Camshaft 1 72 45.040013.00 Lifter, Valve 2 73 45.040005.00 Valve, Intake 1 74 45.040005.00 Valve, Exhaust 1 75 46.040005.00 Push Rod			<u> </u>	
60 46.050301.00 Ring, First Piston 1 61 2.04.004 Dowel Pin Ø12 x 20 2 62 46.030009.01 Gasket, Cylinder Head 1 63 46.080400.00 Air Guide, Lower 1 64 46.010100.00 Cylinder Head 1 65 2.15.002(F6RTC) Spark Plug F6RTC 1 66 2.08.014 Flange Bolt M10 x 80 4 67 46.020002.00 Gasket, Cylinder Head Cover 1 68 46.021000.00 Cover, Cylinder Head 1 70 45.020100.00 Breather Tube 1 70 45.020100.00 Bolt, Cylinder Head Cover 1 71 46.041000.00 Camshaft 1 72 45.040013.00 Lifter, Valve 2 73 45.040002.00 Valve, Intake 1 74 45.040005.00 Valve, Exhaust 1 75 46.040005.00 Push Rod 2 76 45.040015.00 Retainer, Valve Spr				
61 2.04.004 Dowel Pin Ø12 x 20 2 62 46.030009.01 Gasket, Cylinder Head 1 63 46.080400.00 Air Guide, Lower 1 64 46.010100.00 Cylinder Head 1 65 2.15.002(F6RTC) Spark Plug F6RTC 1 66 2.08.014 Flange Bolt M10 x 80 4 67 46.020002.00 Gasket, Cylinder Head Cover 1 68 46.021000.00 Cover, Cylinder Head 1 70 45.020010.00 Breather Tube 1 70 45.020100.00 Bolt, Cylinder Head Cover 1 71 46.04100.00 Camshaft 1 72 45.040013.00 Lifter, Valve 2 73 45.040002.00 Valve, Intake 1 74 45.040005.00 Valve, Exhaust 1 75 46.040005.00 Push Rod 2 76 45.040015.00 Retainer, Valve Spring 2 77 45.040017.00 Oil Seal, Valve<				
63 46.080400.00 Air Guide, Lower 1 64 46.010100.00 Cylinder Head 1 65 2.15.002(F6RTC) Spark Plug F6RTC 1 66 2.08.014 Flange Bolt M10 x 80 4 67 46.020002.00 Gasket, Cylinder Head Cover 1 68 46.021000.00 Cover, Cylinder Head 1 69 45.020100.00 Breather Tube 1 70 45.020100.00 Bolt, Cylinder Head Cover 1 71 46.041000.00 Camshaft 1 72 45.040013.00 Lifter, Valve 2 73 45.04002.00 Valve, Intake 1 74 45.040006.00 Valve, Exhaust 1 75 46.040005.00 Push Rod 2 76 45.040015.00 Retainer, Valve Spring 2 77 45.040017.00 Oil Seal, Valve 2			-	
64 46.010100.00 Cylinder Head 1 65 2.15.002(F6RTC) Spark Plug F6RTC 1 66 2.08.014 Flange Bolt M10 x 80 4 67 46.020002.00 Gasket, Cylinder Head Cover 1 68 46.021000.00 Cover, Cylinder Head 1 69 45.020001.00 Breather Tube 1 70 45.020100.00 Bolt, Cylinder Head Cover 1 71 46.041000.00 Camshaft 1 72 45.040013.00 Lifter, Valve 2 73 45.040002.00 Valve, Intake 1 74 45.040006.00 Valve, Exhaust 1 75 46.040005.00 Push Rod 2 76 45.040015.00 Retainer, Valve Spring 2 77 45.040017.00 Oil Seal, Valve 2	62	46.030009.01	 	1
65 2.15.002(F6RTC) Spark Plug F6RTC 1 66 2.08.014 Flange Bolt M10 × 80 4 67 46.020002.00 Gasket, Cylinder Head Cover 1 68 46.021000.00 Cover, Cylinder Head 1 69 45.020001.00 Breather Tube 1 70 45.02100.00 Bolt, Cylinder Head Cover 1 71 46.041000.00 Camshaft 1 72 45.040013.00 Lifter, Valve 2 73 45.040002.00 Valve, Intake 1 74 45.040006.00 Valve, Exhaust 1 75 46.040005.00 Push Rod 2 76 45.040015.00 Retainer, Valve Spring 2 77 45.040017.00 Oil Seal, Valve 2				
66 2.08.014 Flange Bolt M10 x 80 4 67 46.020002.00 Gasket, Cylinder Head Cover 1 68 46.021000.00 Cover, Cylinder Head 1 69 45.02001.00 Breather Tube 1 70 45.020100.00 Bolt, Cylinder Head Cover 1 71 46.041000.00 Camshaft 1 72 45.040013.00 Lifter, Valve 2 73 45.040002.00 Valve, Intake 1 74 45.040006.00 Valve, Exhaust 1 75 46.040005.00 Push Rod 2 76 45.040015.00 Retainer, Valve Spring 2 77 45.040017.00 Oil Seal, Valve 2		 	 	
67 46.020002.00 Gasket, Cylinder Head Cover 1 68 46.021000.00 Cover, Cylinder Head 1 69 45.020001.00 Breather Tube 1 70 45.020100.00 Bolt, Cylinder Head Cover 1 71 46.041000.00 Camshaft 1 72 45.040013.00 Lifter, Valve 2 73 45.040002.00 Valve, Intake 1 74 45.040006.00 Valve, Exhaust 1 75 46.040005.00 Push Rod 2 76 45.040015.00 Retainer, Valve Spring 2 77 45.040017.00 Oil Seal, Valve 2				
68 46.021000.00 Cover, Cylinder Head 1 69 45.02001.00 Breather Tube 1 70 45.020100.00 Bolt, Cylinder Head Cover 1 71 46.041000.00 Camshaft 1 72 45.040013.00 Lifter, Valve 2 73 45.040002.00 Valve, Intake 1 74 45.040006.00 Valve, Exhaust 1 75 46.040005.00 Push Rod 2 76 45.040015.00 Retainer, Valve Spring 2 77 45.040017.00 Oil Seal, Valve 2				
70 45.020100.00 Bolt, Cylinder Head Cover 1 71 46.041000.00 Camshaft 1 72 45.040013.00 Lifter, Valve 2 73 45.040002.00 Valve, Intake 1 74 45.040006.00 Valve, Exhaust 1 75 46.040005.00 Push Rod 2 76 45.040015.00 Retainer, Valve Spring 2 77 45.040017.00 Oil Seal, Valve 2			i	
71 46.041000.00 Camshaft 1 72 45.040013.00 Lifter, Valve 2 73 45.040002.00 Valve, Intake 1 74 45.040006.00 Valve, Exhaust 1 75 46.040005.00 Push Rod 2 76 45.040015.00 Retainer, Valve Spring 2 77 45.040017.00 Oil Seal, Valve 2	69	45.020001.00	Breather Tube	1
72 45.040013.00 Lifter, Valve 2 73 45.040002.00 Valve, Intake 1 74 45.040006.00 Valve, Exhaust 1 75 46.040005.00 Push Rod 2 76 45.040015.00 Retainer, Valve Spring 2 77 45.040017.00 Oil Seal, Valve 2			 	
73 45.040002.00 Valve, Intake 1 74 45.040006.00 Valve, Exhaust 1 75 46.040005.00 Push Rod 2 76 45.040015.00 Retainer, Valve Spring 2 77 45.040017.00 Oil Seal, Valve 2		 		
74 45.040006.00 Valve, Exhaust 1 75 46.040005.00 Push Rod 2 76 45.040015.00 Retainer, Valve Spring 2 77 45.040017.00 Oil Seal, Valve 2				
75 46.040005.00 Push Rod 2 76 45.040015.00 Retainer, Valve Spring 2 77 45.040017.00 Oil Seal, Valve 2		 		
76 45.040015.00 Retainer, Valve Spring 2 77 45.040017.00 Oil Seal, Valve 2			 	
		 	 	2
78 45.040003.00 Spring, Valve 2	77	45.040017.00	Oil Seal, Valve	2
	78	45.040003.00	Spring, Valve	2

"	Deat Manakan	Bernstellen	01
#	Part Number	Description	Qty
79 80	23.040010.00 45.040001.00	Bolt, Rocker Arm Retainer, Intake Valve Spring	1
81	45.040007.00	Retainer, Intake Valve Spring Retainer, Exhaust Valve Spring	1
82	45.040008.00	Rotator, Exhaust Valve	1
83	46.040004.00	Guide Plate, Push Rod	1
84	46.040016.00	Shaft, Rocker Arm	1
85 86	46.040201.00 46.040009.00	Retainer, Rocker Arm Rocker Arm, Intake Valve	1
87	46.040003.00	Rocker Arm, Exhaust Valve	1
88	1.97.1.06	Washer Ø6	2
89	22.040012.00	Screw, Valve Adjustment	2
90	1.6177.1.06	Flange Nut M6	2
91 92	21.040021.00 2.01.013	Nut M6 × 0.5, Lock	2
93	46.130002.20	Stud Bolt M6 × M8 × 131 Gasket, Insulator	1
94	45.130001.00	Insulator, Carburetor	1
95	46.130003.20	Gasket, Carburetor	1
96	46.131000.00	Carburetor	1
	46.131000.04		
97 98	45.130004.00 2.06.007	Gasket, Air Cleaner Clip Ø8 × b6	3
99	1.6177.06	Flange Nut, M6	3
100	46.091100.01	Base, Air Cleaner	1
101	1.5789.0633	Flange Bolt M6 × 33	1
102	46.091003.02	Element, Air Cleaner	1
103	46.091102.02	Supporter, Air Cleaner	2
104	46.091200.02	Cover, Air Cleaner	1
105	46.091600.01 46.091000.02	Screw Cap, Air Cleaner Cover Air Cleaner Assembly	1
107	46.070013.00	Pipe, Air Cleaner	1
108	24.070100.02	Fuel Tank Cap	1
109	2.12.001	Buffer Ø7.5 × 7.5	1
110	46.070300.00	Fuel Filter, Fuel Tank	1
111	2.06.006	Clamp Ø7 × Ø1	3
112	1.6187.1.08 111.070300.01	Nut M8 Fuel Filter, Fuel Pipe	5 1
114	2.06.018	Clip Ø10.5 × b8	1
115	46.071000.01.2	Fuel Tank, Black	1
116	1.5789.0832	Flange Bolt M8 × 32	2
117	46.070011.00	Fuel Pipe, Fuel Tank To Fuel Valve	1
118	24.070400.00	Fuel Valve	1
118 119	24.070400.00 1.16674.0512.2	Fuel Valve Flange Bolt M5 × 12	1
118	24.070400.00 1.16674.0512.2 46.070011.01	Fuel Valve Flange Bolt M5 × 12 Pipe, Fuel Valve To Carburetor	1
118 119 120	24.070400.00 1.16674.0512.2	Fuel Valve Flange Bolt M5 × 12	1 1 1
118 119 120 121	24.070400.00 1.16674.0512.2 46.070011.01 46.070010.00	Fuel Valve Flange Bolt M5 x 12 Pipe, Fuel Valve To Carburetor Veil, Fuel Tank	1 1 1
118 119 120 121 122	24.070400.00 1.16674.0512.2 46.070011.01 46.070010.00 24.070023.00	Fuel Valve Flange Bolt M5 × 12 Pipe, Fuel Valve To Carburetor Veil, Fuel Tank Plug, Rectangular	1 1 1 1 1 1
118 119 120 121 122 123 124 125	24.070400.00 1.16674.0512.2 46.070011.01 46.070010.00 24.070023.00 24.070001.00 1.818.0412 45.110001.00	Fuel Valve Flange Bolt M5 x 12 Pipe, Fuel Valve To Carburetor Veil, Fuel Tank Plug, Rectangular Fuel Valve Knob Bolt M4 x 12 Shaft, Governor Arm	1 1 1 1 1 1 1
118 119 120 121 122 123 124 125 126	24.070400.00 1.16674.0512.2 46.070011.01 46.070010.00 24.070023.00 24.070001.00 1.818.0412 45.110001.00 2.03.019	Fuel Valve Flange Bolt M5 × 12 Pipe, Fuel Valve To Carburetor Veil, Fuel Tank Plug, Rectangular Fuel Valve Knob Bolt M4 × 12 Shaft, Governor Arm Washer Ø8.2 × Ø17 × 0.8	1 1 1 1 1 1 1 1 1
118 119 120 121 122 123 124 125 126	24.070400.00 1.16674.0512.2 46.070011.01 46.070010.00 24.070023.00 24.070001.00 1.818.0412 45.110001.00 2.03.019 2.11.006	Fuel Valve Flange Bolt M5 × 12 Pipe, Fuel Valve To Carburetor Veil, Fuel Tank Plug, Rectangular Fuel Valve Knob Bolt M4 × 12 Shaft, Governor Arm Washer Ø8.2 × Ø17 × 0.8 Oil Seal Ø7 × Ø14 × 5	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
118 119 120 121 122 123 124 125 126	24.070400.00 1.16674.0512.2 46.070011.01 46.070010.00 24.070023.00 24.070001.00 1.818.0412 45.110001.00 2.03.019	Fuel Valve Flange Bolt M5 × 12 Pipe, Fuel Valve To Carburetor Veil, Fuel Tank Plug, Rectangular Fuel Valve Knob Bolt M4 × 12 Shaft, Governor Arm Washer Ø8.2 × Ø17 × 0.8	1 1 1 1 1 1 1 1 1
118 119 120 121 122 123 124 125 126 127	24.070400.00 1.16674.0512.2 46.070011.01 46.070010.00 24.070023.00 24.070001.00 1.818.0412 45.110001.00 2.03.019 2.11.006 45.110008.00	Fuel Valve Flange Bolt M5 × 12 Pipe, Fuel Valve To Carburetor Veil, Fuel Tank Plug, Rectangular Fuel Valve Knob Bolt M4 × 12 Shaft, Governor Arm Washer Ø8.2 × Ø17 × 0.8 Oil Seal Ø7 × Ø14 × 5 Pin, Shaft	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
118 119 120 121 122 123 124 125 126 127 128	24.070400.00 1.16674.0512.2 46.070011.01 46.070010.00 24.070023.00 24.070001.00 1.818.0412 45.110001.00 2.03.019 2.11.006 45.110008.00 45.110003.00 2.08.040 45.110007.00	Fuel Valve Flange Bolt M5 × 12 Pipe, Fuel Valve To Carburetor Veil, Fuel Tank Plug, Rectangular Fuel Valve Knob Bolt M4 × 12 Shaft, Governor Arm Washer Ø8.2 × Ø17 × 0.8 Oil Seal Ø7 × Ø14 × 5 Pin, Shaft Arm, Governor	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
118 119 120 121 122 123 124 125 126 127 128 129 130	24.070400.00 1.16674.0512.2 46.070011.01 46.070010.00 24.070023.00 24.070001.00 1.818.0412 45.110001.00 2.03.019 2.11.006 45.110008.00 45.110003.00 2.08.040 45.110007.00 45.110005.00	Fuel Valve Flange Bolt M5 × 12 Pipe, Fuel Valve To Carburetor Veil, Fuel Tank Plug, Rectangular Fuel Valve Knob Bolt M4 × 12 Shaft, Governor Arm Washer Ø8.2 × Ø17 × 0.8 Oil Seal Ø7 × Ø14 × 5 Pin, Shaft Arm, Governor Bolt M6 × 21, Governor Arm Spring, Governor Spring, Throttle Return	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
118 119 120 121 122 123 124 125 126 127 128 129 130 131	24.070400.00 1.16674.0512.2 46.070011.01 46.070010.00 24.070023.00 24.070001.00 1.818.0412 45.110001.00 2.03.019 2.11.006 45.110008.00 45.110003.00 2.08.040 45.110007.00 45.110005.00 45.110005.00	Fuel Vaive Flange Bolt M5 × 12 Pipe, Fuel Valve To Carburetor Veil, Fuel Tank Plug, Rectangular Fuel Valve Knob Bolt M4 × 12 Shaft, Governor Arm Washer Ø8.2 × Ø17 × 0.8 Oil Seal Ø7 × Ø14 × 5 Pin, Shaft Arm, Governor Bolt M6 × 21, Governor Arm Spring, Governor Spring, Throttle Return Rod, Governor	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
118 119 120 121 122 123 124 125 126 127 128 129 130 131 132 133	24.070400.00 1.16674.0512.2 46.070011.01 46.070010.00 24.070023.00 24.070001.00 1.818.0412 45.110001.00 2.03.019 2.11.006 45.110008.00 45.110003.00 2.08.040 45.110007.00 45.110005.00 45.110005.00 45.110006.00 46.080300.01	Fuel Valve Flange Bolt M5 × 12 Pipe, Fuel Valve To Carburetor Veil, Fuel Tank Plug, Rectangular Fuel Valve Knob Bolt M4 × 12 Shaft, Governor Arm Washer Ø8.2 × Ø17 × 0.8 Oil Seal Ø7 × Ø14 × 5 Pin, Shaft Arm, Governor Bolt M6 × 21, Governor Arm Spring, Governor Spring, Throttle Return Rod, Governor Air Guide, Upper	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
118 119 120 121 122 123 124 125 126 127 128 129 130 131	24.070400.00 1.16674.0512.2 46.070011.01 46.070010.00 24.070023.00 24.070001.00 1.818.0412 45.110001.00 2.03.019 2.11.006 45.110008.00 45.110003.00 2.08.040 45.110007.00 45.110005.00 45.110005.00	Fuel Vaive Flange Bolt M5 × 12 Pipe, Fuel Valve To Carburetor Veil, Fuel Tank Plug, Rectangular Fuel Valve Knob Bolt M4 × 12 Shaft, Governor Arm Washer Ø8.2 × Ø17 × 0.8 Oil Seal Ø7 × Ø14 × 5 Pin, Shaft Arm, Governor Bolt M6 × 21, Governor Arm Spring, Governor Spring, Throttle Return Rod, Governor	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
118 119 120 121 122 123 124 125 126 127 128 129 130 131 132 133 134	24.070400.00 1.16674.0512.2 46.070011.01 46.070010.00 24.070023.00 24.07001.00 1.818.0412 45.110001.00 2.03.019 2.11.006 45.110008.00 45.110003.00 2.08.040 45.110005.00 45.110005.00 45.110005.00 46.080300.01 24.111008.01	Fuel Valve Flange Bolt M5 × 12 Pipe, Fuel Valve To Carburetor Veil, Fuel Tank Plug, Rectangular Fuel Valve Knob Bolt M4 × 12 Shaft, Governor Arm Washer Ø8.2 × Ø17 × 0.8 Oil Seal Ø7 × Ø14 × 5 Pin, Shaft Arm, Governor Bolt M6 × 21, Governor Arm Spring, Governor Spring, Throttle Return Rod, Governor Air Guide, Upper Sheath, Grip	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
118 119 120 121 122 123 124 125 126 127 128 129 130 131 132 133 134	24.070400.00 1.16674.0512.2 46.070011.01 46.070010.00 24.070023.00 24.070001.00 1.818.0412 45.110001.00 2.03.019 2.11.006 45.110003.00 2.08.040 45.110005.00 45.110005.00 46.080300.01 24.111008.01 2.01.005	Fuel Valve Flange Bolt M5 × 12 Pipe, Fuel Valve To Carburetor Veil, Fuel Tank Plug, Rectangular Fuel Valve Knob Bolt M4 × 12 Shaft, Governor Arm Washer Ø8.2 × Ø17 × 0.8 Oil Seal Ø7 × Ø14 × 5 Pin, Shaft Arm, Governor Bolt M6 × 21, Governor Arm Spring, Governor Spring, Throttle Return Rod, Governor Air Guide, Upper Sheath, Grip Stud Bolt M8 × 49	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
118 119 120 121 122 123 124 125 126 127 128 129 130 131 132 133 134 135 136 137	24.070400.00 1.16674.0512.2 46.070011.01 46.070010.00 24.070023.00 24.070001.00 1.818.0412 45.110001.00 2.03.019 2.11.006 45.110008.00 45.110003.00 2.08.040 45.110005.00 45.110005.00 45.110006.00 46.080300.01 24.111008.01 2.01.005 46.10001.07 46.101001.05 1.848.08	Fuel Vaive Flange Bolt M5 × 12 Pipe, Fuel Valve To Carburetor Veil, Fuel Tank Plug, Rectangular Fuel Valve Knob Bolt M4 × 12 Shaft, Governor Arm Washer Ø8.2 × Ø17 × 0.8 Oil Seal Ø7 × Ø14 × 5 Pin, Shaft Arm, Governor Bolt M6 × 21, Governor Arm Spring, Governor Spring, Throttle Return Rod, Governor Air Guide, Upper Sheath, Grip Stud Bolt M8 × 49 Gasket, Exhaust Pipe Exhaust Pipe Washer Ø8	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
118 119 120 121 122 123 124 125 126 127 128 129 130 131 132 133 134 135 136 137 138	24.070400.00 1.16674.0512.2 46.070011.01 46.070010.00 24.070023.00 24.070001.00 1.818.0412 45.110001.00 2.03.019 2.11.006 45.110008.00 45.110003.00 2.08.040 45.110005.00 46.080300.01 24.111008.01 2.01.005 46.101001.05 1.848.08 46.101000.05.2	Fuel Vaive Flange Bolt M5 × 12 Pipe, Fuel Valve To Carburetor Veil, Fuel Tank Plug, Rectangular Fuel Valve Knob Bolt M4 × 12 Shaft, Governor Arm Washer Ø8.2 × Ø17 × 0.8 Oil Seal Ø7 × Ø14 × 5 Pin, Shaft Arm, Governor Bolt M6 × 21, Governor Arm Spring, Governor Spring, Throttle Return Rod, Governor Air Guide, Upper Sheath, Grip Stud Bolt M8 × 49 Gasket, Exhaust Pipe Exhaust Pipe Washer Ø8 Muffler Assembly, Black	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
118 119 120 121 122 123 124 125 126 127 128 129 130 131 132 133 134 135 136 137 138 139 140 141	24.070400.00 1.16674.0512.2 46.070011.01 46.070010.00 24.070023.00 24.07001.00 1.818.0412 45.110001.00 2.03.019 2.11.006 45.110008.00 45.110008.00 45.110005.00 45.110006.00 46.080300.01 24.111008.01 2.01.005 46.10001.07 46.101001.05 1.848.08 46.101000.05.2 1.93.08	Fuel Valve Flange Bolt M5 × 12 Pipe, Fuel Valve To Carburetor Veil, Fuel Tank Plug, Rectangular Fuel Valve Knob Bolt M4 × 12 Shaft, Governor Arm Washer Ø8.2 × Ø17 × 0.8 Oil Seal Ø7 × Ø14 × 5 Pin, Shaft Arm, Governor Bolt M6 × 21, Governor Arm Spring, Governor Spring, Throttle Return Rod, Governor Air Guide, Upper Sheath, Grip Stud Bolt M8 × 49 Gasket, Exhaust Pipe Exhaust Pipe Washer Ø8 Muffler Assembly, Black Lock Washer Ø8	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
118 119 120 121 122 123 124 125 126 127 128 129 130 131 132 133 134 135 136 137 138	24.070400.00 1.16674.0512.2 46.070011.01 46.070010.00 24.070023.00 24.070001.00 1.818.0412 45.110001.00 2.03.019 2.11.006 45.110008.00 45.110003.00 2.08.040 45.110005.00 46.080300.01 24.111008.01 2.01.005 46.101001.05 1.848.08 46.101000.05.2	Fuel Vaive Flange Bolt M5 × 12 Pipe, Fuel Valve To Carburetor Veil, Fuel Tank Plug, Rectangular Fuel Valve Knob Bolt M4 × 12 Shaft, Governor Arm Washer Ø8.2 × Ø17 × 0.8 Oil Seal Ø7 × Ø14 × 5 Pin, Shaft Arm, Governor Bolt M6 × 21, Governor Arm Spring, Governor Spring, Throttle Return Rod, Governor Air Guide, Upper Sheath, Grip Stud Bolt M8 × 49 Gasket, Exhaust Pipe Exhaust Pipe Washer Ø8 Muffler Assembly, Black	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
118 119 120 121 122 123 124 125 126 127 128 129 130 131 132 133 134 135 136 137 138 139 140 141	24.070400.00 1.16674.0512.2 46.070011.01 46.070010.00 24.070023.00 24.07001.00 1.818.0412 45.110001.00 2.03.019 2.11.006 45.110008.00 45.110003.00 2.08.040 45.110005.00 45.110005.00 45.110005.00 46.080300.01 24.111008.01 2.01.005 46.10001.05 18.848.08 46.101000.05.2 1.93.08 1.6175.08	Fuel Valve Flange Bolt M5 × 12 Pipe, Fuel Valve To Carburetor Veil, Fuel Tank Plug, Rectangular Fuel Valve Knob Bolt M4 × 12 Shaft, Governor Arm Washer Ø8.2 × Ø17 × 0.8 Oil Seal Ø7 × Ø14 × 5 Pin, Shaft Arm, Governor Bolt M6 × 21, Governor Arm Spring, Governor Spring, Throttle Return Rod, Governor Air Guide, Upper Sheath, Grip Stud Bolt M8 × 49 Gasket, Exhaust Pipe Exhaust Pipe Washer Ø8 Muffler Assembly, Black Lock Washer Ø8 Nut M8	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
118 119 120 121 122 123 124 125 126 127 128 129 130 131 132 133 134 135 136 137 138 139 140 141 142	24.070400.00 1.16674.0512.2 46.070011.01 46.070010.00 24.070023.00 24.07001.00 1.818.0412 45.110001.00 2.03.019 2.11.006 45.110008.00 45.110007.00 45.110005.00 45.110005.00 46.080300.01 24.111008.01 2.01.005 46.101001.05 1.848.08 46.101000.05.2 1.93.08 1.6175.08 46.101002.05	Fuel Valve Flange Bolt M5 × 12 Pipe, Fuel Valve To Carburetor Veil, Fuel Tank Plug, Rectangular Fuel Valve Knob Bolt M4 × 12 Shaft, Governor Arm Washer Ø8.2 × Ø17 × 0.8 Oil Seal Ø7 × Ø14 × 5 Pin, Shaft Arm, Governor Bolt M6 × 21, Governor Arm Spring, Governor Spring, Throttle Return Rod, Governor Air Guide, Upper Sheath, Grip Stud Bolt M8 × 49 Gasket, Exhaust Pipe Exhaust Pipe Washer Ø8 Muffler Assembly, Black Lock Washer Ø8 Nut M8 Washer, Muffler	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
118 119 120 121 122 123 124 125 126 127 128 129 130 131 132 133 134 135 136 137 138 139 140 141 142 143 144 145 146	24.070400.00 1.16674.0512.2 46.070011.01 46.070010.00 24.070023.00 24.07001.00 1.818.0412 45.110001.00 2.03.019 2.11.006 45.110008.00 45.110008.00 45.110005.00 45.110006.00 46.080300.01 24.111008.01 2.01.005 46.101001.05 1.848.08 46.101000.05.2 1.93.08 1.6175.08 46.101002.05 46.10100.05 1.16674.0510 46.101202.05	Fuel Vaive Flange Bolt M5 × 12 Pipe, Fuel Valve To Carburetor Veil, Fuel Tank Plug, Rectangular Fuel Valve Knob Bolt M4 × 12 Shaft, Governor Arm Washer Ø8.2 × Ø17 × 0.8 Oil Seal Ø7 × Ø14 × 5 Pin, Shaft Arm, Governor Bolt M6 × 21, Governor Arm Spring, Governor Spring, Throttle Return Rod, Governor Air Guide, Upper Sheath, Grip Stud Bolt M8 × 49 Gasket, Exhaust Pipe Exhaust Pipe Washer Ø8 Muffler Assembly, Black Lock Washer Ø8 Nut M8 Washer, Muffler Muffler Flange Bolt M5 × 10 Muffler Protector	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
118 119 120 121 122 123 124 125 126 127 128 129 130 131 132 133 134 135 136 137 138 139 140 141 142 143 144 145 146 147	24.070400.00 1.16674.0512.2 46.070011.01 46.070010.00 24.070023.00 24.070001.00 1.818.0412 45.110001.00 2.03.019 2.11.006 45.110008.00 45.110005.00 45.110006.00 46.080300.01 24.111008.01 2.01.005 46.101001.05 1.848.08 46.101001.05 1.848.08 46.101000.05 46.101001.05 1.848.08 46.101002.05 46.10100.05 1.16674.0510 46.10100.05 1.16674.0510 46.101202.05 9.3600.000	Fuel Vaive Flange Bolt M5 × 12 Pipe, Fuel Valve To Carburetor Veil, Fuel Tank Plug, Rectangular Fuel Valve Knob Bolt M4 × 12 Shaft, Governor Arm Washer Ø8.2 × Ø17 × 0.8 Oil Seal Ø7 × Ø14 × 5 Pin, Shaft Arm, Governor Bolt M6 × 21, Governor Arm Spring, Governor Spring, Throttle Return Rod, Governor Air Guide, Upper Sheath, Grip Stud Bolt M8 × 49 Gasket, Exhaust Pipe Exhaust Pipe Washer Ø8 Muffler Assembly, Black Lock Washer Ø8 Nut M8 Washer, Muffler Muffler Flange Bolt M5 × 10 Muffler Protector Key, Control Box	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
118 119 120 121 122 123 124 125 126 127 128 129 130 131 132 133 134 135 136 137 138 140 141 142 143 144 145 146 147 148	24.070400.00 1.16674.0512.2 46.070011.01 46.070010.00 24.070023.00 24.07001.00 1.818.0412 45.110001.00 2.03.019 2.11.006 45.110008.00 45.110008.00 45.110005.00 45.110006.00 46.080300.01 24.111008.01 2.01.005 46.101001.05 1.848.08 46.101000.05 1.848.08 46.101000.05 1.675.08 46.101002.05 46.10100.05 1.16674.0510 46.10120.05 9.3600.000 1.818.0406	Fuel Vaive Flange Bolt M5 × 12 Pipe, Fuel Valve To Carburetor Veil, Fuel Tank Plug, Rectangular Fuel Valve Knob Bolt M4 × 12 Shaft, Governor Arm Washer Ø8.2 × Ø17 × 0.8 Oil Seal Ø7 × Ø14 × 5 Pin, Shaft Arm, Governor Bolt M6 × 21, Governor Arm Spring, Governor Spring, Throttle Return Rod, Governor Air Guide, Upper Sheath, Grip Stud Bolt M8 × 49 Gasket, Exhaust Pipe Washer Ø8 Muffler Assembly, Black Lock Washer Ø8 Nut M8 Washer, Muffler Muffler Flange Bolt M5 × 10 Muffler Protector Key, Control Box Screw M4 × 6	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
118 119 120 121 122 123 124 125 126 127 128 129 130 131 132 133 134 135 136 137 138 139 140 141 142 143 144 145 146 147 148 149	24.070400.00 1.16674.0512.2 46.070011.01 46.070010.00 24.070023.00 24.070001.00 1.818.0412 45.110001.00 2.03.019 2.11.006 45.110008.00 45.110005.00 45.110006.00 46.080300.01 24.111008.01 2.01.005 46.101001.05 1.848.08 46.101001.05 1.848.08 46.101000.05 46.101001.05 1.848.08 46.101002.05 46.10100.05 1.16674.0510 46.10100.05 1.16674.0510 46.101202.05 9.3600.000	Fuel Valve Flange Bolt M5 × 12 Pipe, Fuel Valve To Carburetor Veil, Fuel Tank Plug, Rectangular Fuel Valve Knob Bolt M4 × 12 Shaft, Governor Arm Washer Ø8.2 × Ø17 × 0.8 Oil Seal Ø7 × Ø14 × 5 Pin, Shaft Arm, Governor Bolt M6 × 21, Governor Arm Spring, Governor Spring, Throttle Return Rod, Governor Air Guide, Upper Sheath, Grip Stud Bolt M8 × 49 Gasket, Exhaust Pipe Exhaust Pipe Washer Ø8 Muffler Assembly, Black Lock Washer Ø8 Nut M8 Washer, Muffler Muffler Flange Bolt M5 × 10 Muffler Protector Key, Control Box Screw M4 × 6 Washer Ø5	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
118 119 120 121 122 123 124 125 126 127 128 129 130 131 132 133 134 135 136 137 138 139 140 141 142 143 144 145 146 147 148 149 150	24.070400.00 1.16674.0512.2 46.070011.01 46.070010.00 24.070023.00 24.07001.00 1.818.0412 45.110001.00 2.03.019 2.11.006 45.110008.00 45.110005.00 45.110005.00 45.110005.00 45.110005.00 46.080300.01 24.111008.01 2.01.005 46.101001.05 1.848.08 46.101000.05 46.101000.05 46.101000.05 1.848.08 46.101000.05 46.101000.05 46.101000.05 1.848.08	Fuel Vaive Flange Bolt M5 × 12 Pipe, Fuel Valve To Carburetor Veil, Fuel Tank Plug, Rectangular Fuel Valve Knob Bolt M4 × 12 Shaft, Governor Arm Washer Ø8.2 × Ø17 × 0.8 Oil Seal Ø7 × Ø14 × 5 Pin, Shaft Arm, Governor Bolt M6 × 21, Governor Arm Spring, Governor Spring, Throttle Return Rod, Governor Air Guide, Upper Sheath, Grip Stud Bolt M8 × 49 Gasket, Exhaust Pipe Washer Ø8 Muffler Assembly, Black Lock Washer Ø8 Nut M8 Washer, Muffler Muffler Flange Bolt M5 × 10 Muffler Protector Key, Control Box Screw M4 × 6	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
118 119 120 121 122 123 124 125 126 127 128 129 130 131 132 133 134 135 136 137 138 139 140 141 142 143 144 145 146 147 148 149	24.070400.00 1.16674.0512.2 46.070011.01 46.070010.00 24.070023.00 24.07001.00 1.818.0412 45.110001.00 2.03.019 2.11.006 45.110008.00 45.110008.00 45.110005.00 45.110005.00 45.110005.00 46.080300.01 24.111008.01 2.01.005 46.101001.05 1.848.08 46.101000.05 46.101000.05 1.16674.0510 46.101000.05 1.16674.0510 46.101002.05 9.3600.000 1.818.0406 1.848.05 1.859.05	Fuel Valve Flange Bolt M5 × 12 Pipe, Fuel Valve To Carburetor Veil, Fuel Tank Plug, Rectangular Fuel Valve Knob Bolt M4 × 12 Shaft, Governor Arm Washer Ø8.2 × Ø17 × 0.8 Oil Seal Ø7 × Ø14 × 5 Pin, Shaft Arm, Governor Bolt M6 × 21, Governor Arm Spring, Governor Spring, Throttle Return Rod, Governor Air Guide, Upper Sheath, Grip Stud Bolt M8 × 49 Gasket, Exhaust Pipe Exhaust Pipe Washer Ø8 Muffler Assembly, Black Lock Washer Ø8 Nut M8 Washer, Muffler Muffler Flange Bolt M5 × 10 Muffler Protector Key, Control Box Screw M4 × 6 Washer Ø5 Lock Washer Ø5	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
118 119 120 121 122 123 124 125 126 127 128 129 130 131 132 133 134 135 136 137 138 139 140 141 142 143 144 145 146 147 148 149 150 151 150 151 150 151 150 151 150 150	24.070400.00 1.16674.0512.2 46.070011.01 46.070010.00 24.070023.00 24.070001.00 1.818.0412 45.110001.00 2.03.019 2.11.006 45.110008.00 45.110008.00 45.110005.00 45.110006.00 46.080300.01 24.111008.01 2.01.005 46.101001.05 1.848.08 46.101000.05 1.6674.0510 46.101002.05 46.101002.05 46.101002.05 1.16674.0510 46.101202.05 9.3600.000 1.818.0406 1.848.05 1.859.05 46.131017.00 46.131017.00.01 46.070014.00	Fuel Vaive Flange Bolt M5 × 12 Pipe, Fuel Valve To Carburetor Veil, Fuel Tank Plug, Rectangular Fuel Valve Knob Bolt M4 × 12 Shaft, Governor Arm Washer Ø8.2 × Ø17 × 0.8 Oil Seal Ø7 × Ø14 × 5 Pin, Shaft Arm, Governor Bolt M6 × 21, Governor Arm Spring, Governor Spring, Throttle Return Rod, Governor Air Guide, Upper Sheath, Grip Stud Bolt M8 × 49 Gasket, Exhaust Pipe Exhaust Pipe Washer Ø8 Muffler Assembly, Black Lock Washer Ø8 Nut M8 Washer, Muffler Muffler Flange Bolt M5 × 10 Muffler Protector Key, Control Box Screw M4 × 6 Washer Ø5 Main Jet, Standard Main Jet, Altitude Pipe, Fuel Tank To Carbon Canister	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
118 119 120 121 122 123 124 125 126 127 128 129 130 131 132 133 134 135 136 137 138 139 140 141 142 143 144 145 146 147 148 149 150 151	24.070400.00 1.16674.0512.2 46.070011.01 46.070010.00 24.070023.00 24.07001.00 1.818.0412 45.110001.00 2.03.019 2.11.006 45.110008.00 45.110008.00 45.110005.00 45.110005.00 45.110005.00 46.080300.01 24.111008.01 2.01.005 46.101001.05 1.848.08 46.101002.05 46.101002.05 46.101002.05 46.101002.05 46.101002.05 46.101002.05 9.3600.000 1.818.0406 1.848.05 1.848.05 1.848.05 1.848.05 1.848.05 1.859.05 46.131017.00 46.131017.00.01	Fuel Vaive Flange Bolt M5 × 12 Pipe, Fuel Valve To Carburetor Veil, Fuel Tank Plug, Rectangular Fuel Valve Knob Bolt M4 × 12 Shaft, Governor Arm Washer Ø8.2 × Ø17 × 0.8 Oil Seal Ø7 × Ø14 × 5 Pin, Shaft Arm, Governor Bolt M6 × 21, Governor Arm Spring, Governor Spring, Throttle Return Rod, Governor Air Guide, Upper Sheath, Grip Stud Bolt M8 × 49 Gasket, Exhaust Pipe Exhaust Pipe Washer Ø8 Muffler Assembly, Black Lock Washer Ø8 Nut M8 Washer, Muffler Muffler Flange Bolt M5 × 10 Muffler Protector Key, Control Box Screw M4 × 6 Washer Ø5 Lock Washer Ø5 Main Jet, Standard Main Jet, Altitude	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1

WARRANTY*

CHAMPION POWER EQUIPMENT 2 YEAR LIMITED WARRANTY

Warranty Qualifications

Champion Power Equipment (CPE) will register this warranty upon receipt of your Warranty Registration Card and a copy of your sales receipt from one of CPE's retail locations as proof of purchase. Please submit your warranty registration and your proof of purchase within ten (10) days of the date of purchase.

Repair/Replacement Warranty

CPE warrants to the original purchaser that the mechanical and electrical components will be free of defects in material and workmanship for a period of two years (parts and labor) from the original date of purchase and 180 days (parts and labor) for commercial and industrial use. Transportation charges on product submitted for repair or replacement under this warranty are the sole responsibility of the purchaser. This warranty only applies to the original purchaser and is not transferable.

Do Not Return The Unit To The Place Of Purchase

Contact CPE's Technical Service and CPE will troubleshoot any issue via phone or e-mail. If the problem is not corrected by this method, CPE will, at its option, authorize evaluation, repair or replacement of the defective part or component at a CPE Service Center. CPE will provide you with a case number for warranty service. Please keep it for future reference. Repairs or replacements without prior authorization, or at an unauthorized repair facility, will not be covered by this warranty.

Warranty Exclusions

This warranty does not cover the following repairs and equipment:

Normal Wear

Products with mechanical and electrical components need periodic parts and service to perform well. This warranty does not cover repair when normal use has exhausted the life of a part or the equipment as a whole.

Installation, Use and Maintenance

This warranty will not apply to parts and/or labor if the product is deemed to have been misused, neglected, involved in an accident, abused, loaded beyond the product's limits, modified, installed improperly or connected incorrectly to any electrical component. Normal maintenance is not covered by this warranty and is not required to be performed at a facility or by a person authorized by CPE.

Other Exclusions

This warranty excludes:

- Cosmetic defects such as paint, decals, etc.
- Wear items such as filter elements, o-rings, etc.
- Accessory parts such as starting batteries, and storage covers.
- Failures due to acts of God and other force majeure events beyond the manufacturer's control.
- Problems caused by parts that are not original Champion Power Equipment parts.

When applicable, this warranty does not apply to products used for prime power in place of a utility.

Limits of Implied Warranty and Consequential Damage

Champion Power Equipment disclaims any obligation to cover any loss of time, use of this product, freight, or any incidental or consequential claim by anyone from using this product. THIS WARRANTY AND THE ATTACHED U.S. EPA, CARB and/or ECCC EMISSION CONTROL SYSTEM WARRANTIES (WHEN APPLICABLE) ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

A unit provided as an exchange will be subject to the warranty of the original unit. The length of the warranty governing the exchanged unit will remain calculated by reference to the purchase date of the original unit.

This warranty gives you certain legal rights which may change from state to state or province to province. Your state or province may also have other rights you may be entitled to that are not listed within this warranty.

Contact Information

Address

Champion Power Equipment, Inc. Customer Service 12039 Smith Ave. Santa Fe Springs, CA 90670 USA www.championpowerequipment.com

Customer Service

Mon-Fri~8:30~AM-5:00~PM~(PST/PDT)

Toll Free: 1-877-338-0999

info@championpowerequipment.com

Fax no.: 1-562-236-9429

Technical Service

Mon - Fri 8:30 AM - 5:00 PM (PST/PDT)

Toll Free: 1-877-338-0999

tech@championpowerequipment.com 24/7 Tech Support: 1-562-204-1188

^{*}Except as otherwise stipulated in any of the following enclosed Emission Control System Warranties (when applicable) for the Emission Control System: U.S. Environment Protection Agency (EPA), California Air Resources Board (CARB) and/or Environment and Climate Change Canada (ECCC).

Champion Power Equipment, Inc. (CPE), The United States Environment Protection Agency (U.S. EPA.) and the California Air Resources Board (CARB) Emission Control System Warranty

Your Champion Power Equipment (CPE) engine complies with both the U.S. EPA and state of California Air Resources Board (CARB) emission regulations.

YOUR WARRANTY RIGHTS AND OBLIGATIONS:

The US EPA, California Air Resources Board, and CPE are pleased to explain the Federal and California Emission Control Systems Warranty on your 2017 small off-road engine and engine powered equipment. In California, new, small off-road engines and new equipment that use small off-engines must be designed, built and equipped to meet the State's stringent anti smog standards. In the other states, new engines and equipment must be designed, built and equipped, at the time of sale, to meet U.S. EPA regulations for small non-road engines. CPE warrants the emission control system on your small off-road engine and equipment for the period of time listed below, provided there has been no abuse, neglect, unapproved modification, or improper maintenance of your equipment.

Your emission control system may include parts such as the carburetor, fuel-injection system, the ignition system, catalytic converter and fuel lines. Also included may be hoses, belts, connectors and other emission related assemblies. Where a warrantable condition exits, CPE will repair your small off-road engine at no cost to you including diagnosis, parts and labor. For engines less than or equal to 80cc, only the fuel tank and fuel line is subject to the evaporative emission control warranty requirements of this section.

MANUFACTURER'S EMISSION CONTROL SYSTEM WARRANTY COVERAGE:

This emission control system is warranted for two years, subject to provisions set forth below. If, during the warranty period, emission related part on your engine is defective in materials or workmanship, the part will be repaired or replaced by CPE.

OWNER WARRANTY RESPONSIBILITIES:

As the small off-road engine owner, you are responsible for the performance of the required maintenance listed in your Owner's Manual. CPE recommends that you retain all your receipts covering maintenance on your small off-road engine, but CPE cannot deny warranty solely for the lack of receipts or for your failure to ensure the performance of all scheduled maintenance.

As the small off-road engine owner, you should however be aware that CPE may deny you warranty coverage if your small, off-road engine or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

You are responsible for presenting your small off-road engine to an Authorized CPE service outlet or alternate service outlet as described in (3)(f.) below, CPE dealer or CPE, Santa Fe Springs, Ca. as soon as a problem exists. The warranty repairs should be completed in a reasonable amount of time, not to exceed 30 days.

If you have any questions regarding your warranty rights and responsibilities, you should contact:

Champion Power Equipment, Inc.
Customer Service
12039 Smith Ave.
Santa Fe Springs, CA 90670
1-877-338-0999
tech@championpowerequipment.com

EMISSION CONTROL SYSTEM WARRANTY

The following are specific provisions relative to your Emission Control System (ECS) Warranty Coverage.

1. APPLICABILITY: This warranty shall apply to 1995 and later model year California small off-road engines (for other states, 1997 and later model year engines). The ECS Warranty Period shall begin on the date the new engine or equipment is delivered to its original, end-use purchaser, and shall continue for 24 consecutive months thereafter.

2. GENERAL EMISSIONS WARRANTY COVERAGE

CPE warrants to the original, end-use purchaser of the new engine or equipment and to each subsequent purchaser that each of its small off-road engines is:

- a. Designed, built and equipped so as to conform to U.S. EPA emissions standards for spark-ignited engines at or below 19 kilowatts and all applicable regulations adopted by the California Air Resources Board and
- b. Free from defects in materials and workmanship that cause the failure of a warranted part to be identical in all material respects to the part as described in the engine manufacturer's application for certification for a period of two years.

3. THE WARRANTY ON EMISSION-RELATED PARTS WILL BE INTERPRETED AS FOLLOWS:

- a. Any warranted part that is not scheduled for replacement as required maintenance in the Owners Manual shall be warranted for the ECS Warranty Period. If any such part fails during the ECS Warranty Period, it shall be repaired or replaced by CPE according to Subsection "d" below. Any such part repaired or replaced under the ECS Warranty shall be warranted for any remainder of the ECS Warranty Period.
- b. Any warranted, emissions-related part which is scheduled only for regular inspection as specified in the Owners Manual shall be warranted for the ECS Warranty Period. A statement in such written instructions to the effect of "repair or replace as necessary", shall not reduce the ECS Warranty Period. Any such part repaired or replaced under the ECS Warranty shall be warranted for the remainder of the ECS Warranty Period.
- c. Any warranted, emissions-related part which is scheduled for replacement as required maintenance in the Owner's Manual shall be warranted for the period of time prior to the first scheduled replacement point for that part. If the part fails prior to the first scheduled replacement, the part shall be repaired or replaced by CPE according to Subsection "d" below. Any such emissions-related part repaired or replaced under the ECS Warranty, shall be warranted for the remainder of the ECS Warranty Period prior to the first scheduled replacement point for such emissions-related part.
- d. Repair or replacement of any warranted, emissions-related part under this ECS Warranty shall be performed at no charge to the owner at a CPE Authorized Service Outlet.
- e. The owner shall not be charged for diagnostic labor which leads to the determination that a part covered by the ECS Warranty is in fact defective, provided that such diagnostic work is performed at a CPE Authorized Service Outlet.
- f. CPE shall pay for covered emissions warranty repairs at non-authorized service outlets under the following circumstances:
- i. The service is required in a population center with a population over 100,000 according to U.S. Census 2000 without a CPE Authorized Service Outlet AND
- ii. The service is required more than 100 miles from a CPE Authorized Service Outlet. The 100 mile limitation does not apply in the following states: Alaska, Arizona, Colorado, Hawaii, Idaho, Montana, Nebraska, Nevada, New Mexico, Oregon, Texas, Utah and Wyoming.
- g. CPE shall be liable for damages to other original engine components or approved modifications proximately caused by a failure under warranty of an emission-related part covered by the ECS Warranty.
- h. Throughout the ECS Warranty Period, CPE shall maintain a supply of warranted emission-related parts sufficient to meet the expected demand for such emission-related parts.
- i. Any CPE Authorized and approved emission-related replacement part may be used in the performance of any ECS Warranty maintenance or repair and will be provided without charge to the owner. Such use shall not reduce CPE's warranty obligation.
- j. Unapproved add-on or modified parts may not be used to modify or repair a CPE engine. Such use voids this ECS Warranty and shall be sufficient grounds for disallowing an ECS Warranty claim. CPE shall not be liable hereunder for failures of any warranted parts of a CPE engine caused by the use of such an unapproved add-on or modified part.

EMISSION-RELATED PARTS INCLUDE THE FOLLOWING: (using those portions of the list applicable to the engine)

Systems covered by this warranty	Parts Description
Fuel Metering System	Fuel regulator, Carburetor and internal parts
Air Induction System	Air cleaner, Intake manifold
Ignition System	Spark plug and parts, Magneto ignition system
Exhaust System	Exhaust manifold, catalytic converter
Miscellaneous Parts	Tubing, Fittings, Seals, Gaskets, and Clamps associated with these listed systems.
Evaporative Emissions	Fuel Tank, Fuel Cap, Fuel Line, Fuel Line Fittings, Clamps, Pressure Relief Valves, Control Valves, Control Solenoids, Electronic Controls, Vacuum Control Diaphragms, Control Cables, Control Linkages, Purge Valves, Vapor Hoses, Liquid/Vapor Separator, Carbon Canister, Canister Mounting Brackets, Carburetor Purge Port Connector

TO OBTAIN WARRANTY SERVICE:

You must take your CPE engine or the product on which it is installed, along with your warranty registration card or other proof of original purchase date, at your expense, to any Champion Power Equipment dealer who is authorized by Champion Power Equipment, Inc. to sell and service that CPE product during his normal business hours. Alternate service locations defined in Section (3)(f.) above must be approved by CPE prior to service. Claims for repair or adjustment found to be caused solely by defects in material or workmanship will not be denied because the engine was not properly maintained and used.

If you have any questions regarding your warranty rights and responsibilities, or to obtain warranty service, please write or call Customer Service at Champion Power Equipment, Inc.

Champion Power Equipment, Inc. 12039 Smith Ave. Santa Fe Springs, CA 90670 1-877-338-0999 Attn.: Customer Service tech@championpowerequipment.com