

# OPERATOR'S MANUAL MODEL #100274 2,000 LB. (907 KG) UTILITY WINCH



# **ACTIVATE YOUR WARRANTY**

by registering your product: championpowerequipment.com

SERIAL NO.









or visit championpowerequipment.com

**READ AND SAVE THIS MANUAL.** This manual contains important safety precautions which should be read and understood before operating the product. Failure to do so could result in serious injury. This manual should remain with the product.

Specifications, descriptions and illustrations in this manual are as accurate as known at the time of publication, but are subject to change without notice.

5097-M-OP REV 20240522



TABLE OF CONTENTS		Operation	9
Introduction	2	Inspection	9
Introduction	. <b>J</b>	Connecting a Load	10
Safety Definitions	. 3	General Tips for Safe Operation	10
		Manual Operation	11
Important Safety Instructions	. 4	Winching Techniques	11
Controls and Features	. 6	Maintenance	12
Utility Winch	. 6	Cleaning	12
Assembly	. 7	Lubrication	
Contents of the Box		Cable Assembly Replacement	12
Utility Winch Location		Storage	12
Mounting the Winch Permanently	. 7	Specifications	12
Adapter Plate	. 7	-	
Battery Connections	. 8	Performance Specifications	
Temporarily Wiring the Winch	. 8	Dimensions	13
Remote Control	. 9	Troubleshooting	14

# **♥**IFOR PARTS BREAKDOWN

Search by model number at championpowerequipment.com

# INTRODUCTION

Congratulations on your purchase of a Champion Power Equipment (CPE) product. CPE designs, builds, and supports all of our products to strict specifications and guidelines. With proper product knowledge, safe use, and regular maintenance, this product should bring years of satisfying service.

Every effort has been made to ensure the accuracy and completeness of the information in this manual at the time of publication, and we reserve the right to change, alter and/or improve the product and this document at any time without prior notice.

Since CPE highly values how our products are designed, manufactured, operated and are serviced, and also highly value your safety and the safety of others, we would like you to take the time to review this product manual and other product materials thoroughly and be fully aware and knowledgeable of the assembly, operation, dangers and maintenance of the product before use. Fully familiarize yourself, and make sure others who plan on operating the product fully familiarize themselves too, with the proper safety and operation procedures before each use. Please always exercise common sense and always err on the side of caution when operating the product to ensure no accident, property damage, or injury occurs. We want you to continue to use and be satisfied with your CPE product for years to come.

When contacting CPE about parts and/or service, you will need to supply the complete model and serial numbers of your product. Transcribe the information found on your product's nameplate label to the table below.

# CPE TECHNICAL SUPPORT TEAM 1-877-338-0999 MODEL NUMBER 100274 SERIAL NUMBER DATE OF PURCHASE PURCHASE LOCATION

# **SAFETY DEFINITIONS**

The purpose of safety symbols is to attract your attention to possible dangers. The safety symbols, and their explanations, deserve your careful attention and understanding. The safety warnings do not by themselves eliminate any danger. The instructions or warnings they give are not substitutes for proper accident prevention measures.

#### **A** DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

#### **A** WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

#### **A** CAUTION

CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

#### NOTICE

NOTICE indicates information considered important, but not hazard-related (e.g., messages relating to property damage or physical injury).

# IMPORTANT SAFETY INSTRUCTIONS

#### **A** WARNING

Read this manual thoroughly before operating your winch . Failure to follow instructions could result in damage, serious injury or death .

#### **A** WARNING

Do not exceed the rated capacity.

#### **A** DANGER

Do not use this winch for lifting or moving people or animals.

#### **A** DANGER

Keep yourself and others a safe distance to the side of the rope when under tension.

#### **A** DANGER

Never step over a rope or near a rope under load.

#### **A WARNING**

The wire cable may break before the motor stalls. For heavy loads at or near rated capacity, use a pulley block/snatch block to reduce the load on the wire cable.

#### **A** WARNING

Winch is NOT waterproof and is NOT for use underwater. DO NOT mount in a location that could have the winch submerged in water.

#### **A WARNING**

Do not use any vehicle to aid or help the winch pull any loads.

#### **A** WARNING

Do not use the winch to secure an item(s) for transport.

#### **A** WARNING

Disconnect the winch from power source when not in use.

#### **A WARNING**

Never leave an item(s) attached to the wire cable, hook, or loaded when not in use.

#### **A** WARNING

Do not use for overhead lifting.

#### **A** CAUTION

Use gloves to protect hands when handling the hook or cable. Never let the cable slide through your hands.

#### **A** CAUTION

Do not wrap the cable around any object and hook it back onto itself.

#### **A** DANGER

Do not install or have crank handle installed if the winch is connected to a power source.

#### **A** DANGER

Do not operate if cable is worn, frayed or appears damaged. Replace cable before use.

#### **A** WARNING

When re-spooling the cable, ensure that the cable spools in the over-wind position with the cable entering the drum from the top, not the bottom.

To re-spool correctly, and while wearing gloves, keep a slight load on the cable while pushing the remote button to retract the cable. Do not let your hands get within 12 in. (30.5 cm) of the winch while re-spooling. Turn off the winch and repeat the procedure until a few inches of cable are left before the stop bracket. Keep hands clear of the winch, cable and slight load which winch is under power.

#### **A** DANGER

Do not anchor or mount winch in any overhead position. Overhead use not recommended.

#### **A** DANGER

Do not lift any loads over people, animals, or property that cannot be damaged. Falling loads may result in property damage, injury or death.

#### **A WARNING**

Use only supplied or manufacturer replacement power cables. Do not connect other cables to a power source and winch, as this may damage the winch and power source.

#### **A WARNING**

Any support structure the winch will be mounted to must be designed to withstand any load or forces that the load and winch may apply to the structure. All mounting hardware must also be able to withstand all load weights and forces.

#### **A** CAUTION

Duration of winching pulls should be kept as short as possible.

If the motor becomes uncomfortably hot to the touch, stop winching immediately and let it cool down for a few minutes. Do not pull for more than one minute at or near the rated load.

#### **A** CAUTION

If the motor stalls, do not maintain power to the winch.

Utility winches are designed and made for intermittent use and should not be used in constant duty applications.

#### **A** CAUTION

Never disengage clutch under load. Only engage or disengage clutch before connection of loads.

#### **A** DANGER

Do not use damaged or broken equipment.

Before each use inspect the winch and equipment for any damage to the following:

- Winch
- Wire cable
- Hook
- Battery or Remote cables

If any of the above items or any other items appear to be damaged or broken, then replace or fix before use.

#### **A** WARNING


Never operate a damaged or malfunctioning winch.

If winch appears damaged or is malfunctioning,
disconnect power source and disconnect load.

# **CONTROLS AND FEATURES**

Read this operator's manual before operating your winch. Familiarize yourself with the location and function of the controls and features. Save this manual for future reference.

# **Utility Winch**

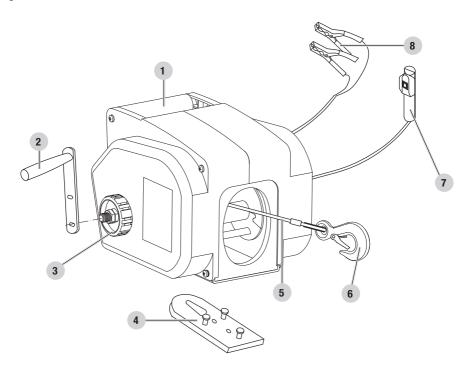

- 1. **Carry Handle** Can be used to carry the winch when not mounted or in use.
- 2. **Crank Handle** Used to manually retract or extend wire cable.
- 3. Clutch Used to engage or disengage wire cable.
- 4. Adapter Plate Used to temporarily mount winch.
- 5. Wire Cable
- Hook Used to secure wire cable to load.
- 7. **Remote Control** Used to retract wire cable.
- Battery Cables Used to connect the winch to 12V automotive battery.

# **ASSEMBLY**

#### Contents of the Box

This CPE utility winch comes with the wire cable and hook already attached. The box will also contain the remote control, battery cables, adapter plate and crank handle. Please make sure to remove all contents from the box before assembly or operation.

### **Utility Winch Location**

When choosing an anchor (permanent or temporary) for the utility winch location please keep these safety points in mind.

- The winch area must not be accessible to children or animals. Loads may be very heavy and property damage, injury or death may occur if distractions are present.
- Make sure the winch is not installed on any support structure that is located overhead.
- The winch should be located in an area that has enough clearance on all sides of it, to avoid any accidental breaking of the wire cable.
- Do not choose an area where the winch can or will be submerged in water.
- Do not winch at any angle. Winching at any angle can damage the wire cable and winch.

#### **A** DANGER

Do not use the winch handle to anchor the winch at any time.

# **Mounting the Winch Permanently**

This CPE utility winch can be securely mounted to a fixed anchor point before operation. Mounting hardware is not included. Mounting hardware must be strong enough to withstand all loads and forces imposed on it and the winch. Anchor point must also be strong enough to withstand all forces imposed on it from the loads and winch.

- 1. Find a secure and suitable anchor.
- Using the holes at the bottom of the winch frame, take a marker and mark "spot" holes on the anchor.

- Measure each hole on the winch frame and choose the correct drill bit for each one.
- 4. Drill through all "spot" holes in the anchor.
- Secure winch to anchor through all holes using rated bolts, washers, and nuts able to withstand any loads and forces imposed on them by the loads and winch.
- 6. Make sure all bolts and nuts are tightened.

#### **A** CAUTION

Always double check anchor before drilling to ensure there are no hidden compartments or panels that may be damaged or cause structural damage by drilling.

#### NOTICE

If a mounting channel (not included) is used, make sure it is rated to take any load weight or force the winch and loads may impose on it.

#### NOTICE


The length of bolts needed for mounting will vary based on the thickness of the anchor used. Measure anchor accordingly.

# **Adapter Plate**

The adapter plate can be used to temporarily mount the winch to any 2 in. (5.1 cm) ball hitch receiver.

- Align the keyslot holes on the bottom of the winch over the mounting bolts already on the adapter plate. (A)
- Place the winch onto the adapter plate, keyslot holes over the bolts and then slide the plate until the winch is secure on the bolts. (B)

3. Place the adapter plate hole over any 2 in. (5.1 cm) ball hitch, making sure it is secure.

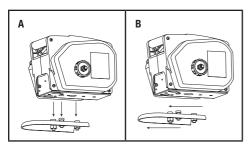

#### **A** WARNING

Do not use adapter plate and/or winch to tow any vehicle, boat or other object.

#### **A WARNING**

Before attaching winch to the adapter plate, make sure all bolts and nuts on the plate are tightened and secure.

# **Battery Connections**

Before wiring the winch to any battery powered source, please heed these safety warnings.

#### **A** DANGER

Never use or connect the battery cables or winch to a damaged battery or one with signs of corrosion.

#### **A WARNING**

Use only a 12V automotive or equivalent battery to supply power to the winch.

#### **A** WARNING

When working with batteries always make sure to use eye protection, gloves and safety gear, and never lean directly over the battery.

#### **A** WARNING

Do not place the battery cables near any moving or rotating parts, heat, or water.

#### **A** CAUTION

Make sure the battery cables are tied up at all times and are not left to "dangle" or hang.

#### **A** DANGER

Never use the winch if it does not have a safe and proper ground. Any metal that is coated or painted is not a proper ground.

# **Temporarily Wiring the Winch**

Your utility winch can be temporarily wired to a 12V battery.

- Find a safe location for the winch so the battery cables will not be pinched, cut or damaged.
- Remove the protective plastic covering on the winch that covers the socket that houses the male ends.
- Plug in the female ends of the battery cable into the socket. (A)
- Route the battery cables from the winch location to the battery location, securing them along an anchor or frame.
- Use the Red positive (+) battery clamp and attach the clamp to the Red positive (+) terminal of the battery.
- Use the Black negative (-) battery clamp from the wire and attach the clamp to a bare metal part of the frame of the vehicle or another bare metal part not on the battery or winch, to create a secure and safe electrical ground.

#### **A** WARNING


Never leave the battery clamps hooked up to a live battery. Always disconnect battery clamps from battery when not in use.

#### **A** CAUTION

Battery clamps may become hot during use. Please exercise caution when touching or removing them after they have been hooked up to a battery.

#### NOTICE

The female plug end of the battery cables will only fit into the socket one way. (A)

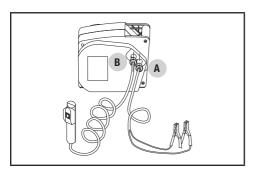

#### **Remote Control**

Your utility winch comes with a handheld wired remote control. The remote control is easy to connect. Once the winch has been connected to a battery and properly grounded, remove the plastic protective piece on the winch. Next take the male ends of the remote control cord and plug them into the female end connectors in the winch. (B) Test the remote by using the clutch to manually extend out some wire cable and then winching the wire cable in about 1 to 2 in. (2.5 to 5.1 cm).

#### **P** NOTICE

The male plug end of the remote cable will only fit into the socket one way. (B)


## NOTICE

The remote will only retract in the wire cable onto the spool. It will not extend out the wire cable.


# **OPERATION**

# Inspection

Before use of the utility winch, always inspect the winch, power connections, wire cable, load connections, and winch area for any possible damage or hazards. Never connect a load to or operate a winch, if it or any of it's parts appear to be worn or damaged.

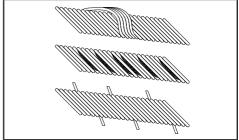

Always check the wire cable for any wear, fraying or damage. Only wire cable in good condition should be used. If the wire cable appears worn, frayed or damaged, DO NOT connect any load to or use, replace immediately.

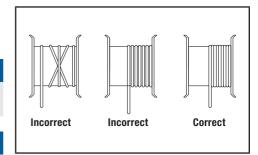

Inspect the wire cable to make sure it is spooled correctly. The wire cable should not be overlapping on itself, have space between the rolls or slack in it. If the wire cable is spooled incorrectly do not connect a load to it or use it until the wire cable has been re-spooled correctly.

#### NOTICE

It is highly recommended that random inspections also be done during operation.

# **Connecting a Load**

During connection of a load and operation of the winch. the user should keep hands and fingers clear of pinch points, moving parts, the wire cable and hook. Lose clothing and iewelry should not be worn, and long hair should be tied back while connecting a load and operation. Gloves and safety googles should be worn at all times when connecting or winching a load. The cable should never be allowed to slide through the users hands. The user should only grab the hook, using a hook strap (not included) when loading/unloading an item. Never grab the wire cable directly. Attach the load to the hook using only rated equipment, such as slings. chains or winching shackles. Connection to the hook must be completely secure to prevent any accidental disconnection. Make sure the connection device is properly seated in the base of the hook and that the safety clasp closes fully.

#### **A** CAUTION

If the wire cable becomes kinked or twisted during operation stop use immediately.

Once a load has been properly connected, drape a blanket or jacket over the wire cable approximately 5 to 6 ft. (1.5 to 1.8 m) from the hook. In the event of a broken cable it will dampen the snap back. Make sure and do a test. Winch the load 1 to 2 in. (2.5 to 5.1 cm) and pause a moment to inspect all connections and that the equipment can handle the load.

#### **A** WARNING

Do not exceed rated load capacity, even while testing a load.

# **General Tips for Safe Operation**

Your 100274 utility winch is rated at a 2000 lb. (907 kg) max standard rated pull, 5000 lb. (2268 kg) max rated marine pull and 6000 lb. (2722 kg) max rated rolling pull. Overloads can damage the winch, motor, wire cable, and/or create a possible hazard for property damage, injury or death.

For loads over 1000 lb. (454 kg) standard, 2500 lb. (1134 kg) marine, 3000 lb. (1361 kg) rolling, the use of a snatch block/pulley system (not included) to double the wire cable line must be used. This will aid in two ways:

- reduce the number or cable layers on the drum, as well as.
- reduce the load on the wire cable by as much as 50%.

When doubling the line back to the winch, run the wire cable through the snatch block and attach the hook to a suitable anchor. Make sure the safety clasp on the hook closes before operation.

Get to know your winch before you actually need to use it. We recommend that you set up a few test runs to familiarize yourself with rigging techniques, the sounds your winch makes under various loads, the way the cable spools on the drum, etc.

Inspect the wire cable and equipment before each use. A frayed or damaged cable shall be replaced immediately. Use only manufacturer's identical replacement cable with the exact specifications.


Inspect the winch installation and bolts to ensure that all bolts are tight before each operation. Store the winch indoors and in a place that it will not be damaged.

Any winch that appears to be damaged in any way, is found to be worn, or operates abnormally MUST BE REMOVED FROM SERVICE UNTIL REPAIRED. It is recommended that the necessary repairs be made by a manufacturer's authorized repair facility.

Only attachments and/or adapters supplied by the manufacturer are to be used.

# **Manual Operation**

If the winch is not hooked up to a battery, the wire cable can be manually retract or extend by releasing the clutch and using the hand crank. Always keep tension on the wire cable. Rotating the clutch will allow the user to access the winch cable manually. (A) Disengage the clutch by turning it counterclockwise. This will allow the user to extend out the wire cable. Use a hook strap (not included) on the hook when extending out the cable. Once the hook has been attached to the load, and the safety clasp fully closed, the hand crank can be attached to the winch. Remove the outer nut on the bolt in the center of the clutch. (B) Only remove the outer nut. leave the inner nut on the bolt. Place the hand crank on the bolt, then reinsert and tighten the outer nut onto the bolt. When manual winching is done, engage the clutch by turning it clockwise. Once the clutch has been engaged. remove the hand crank.

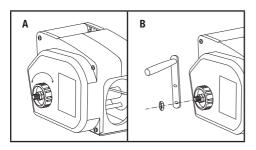

#### **A** DANGER

Do not install or have hand crank installed if the winch is connected to a power source.

#### **A WARNING**

Do not use the hand crank to try and assist the winch while it is operating electronically.

#### **A** CAUTION

If hand crank is installed on the winch, do not pull wire cable out at any time.

# **Winching Techniques**

- Take time to assess your winch area, and make sure it is free of any debris and other possible hazards and distractions.
- Take time to assess your situation and plan your winch
- Put on safety goggles to protect your eyes, gloves to protect your hands, tie back any long hair and remove jewelry.
- Inspect winch, power cords and wire cable for excessive wear or damage.
- Double check your anchors and make sure all connections are secure.
- Attach the battery cables to a battery and properly ground the connection.
- Test the winch without a load connected. Make sure the wire cable extends and retracts properly without any problems.
- 8. Connect desired load using only properly rated winching slings, chains or shackles.
- Once a load has been properly connected, drape a blanket or jacket over the wire cable approximately 5 to 6 ft. (1.5 to 1.8 m) from the hook. In the event of a broken cable it will dampen the snap back.
- 10. Make sure hook clasp is closed fully.
- Clear the area. Make sure all operators and bystanders stand clear and that no one is directly above, underneath, or to the direct side of the load or wire cable.
- Begin winching. Be sure that the wire cable is winding evenly and tightly around the drum. Avoid shock loads; keep the wire cable under tension.
- The winch is meant for intermittent use. Winch for a short time and then let the motor rest if needed before restarting.
- If the winch must be stopped, with a load connected to it, support anchors should be placed until the winch is going again.
- The winching operation is complete once the load is on stable ground and/or has anchors for support placed under it.
- 16. Disconnect the wire cable from the anchor, but still maintain tension.

- 17. Rewind the wire cable. Make sure that any wire already on the drum has spooled tightly and neatly. If not, extend out the wire and re-spool from the point where the cable is tight.
- 18. Keep your hands clear of the winch drum, wire cable, and hook as the cable is retracted in.
- 19. Secure the hook and hook strap.
- 20. Clean and inspect connections and mounting hardware for next winching operation.

#### **A** DANGER

Users and bystanders must keep a minimum distance of 12 in. (30.5 cm) at all times from the winch and load. If the wire cable breaks serious injury or death could occur if the broken cable "whips" around. More distance is advised as the cable length increases.

#### **A** WARNING

Support anchors are highly recommended if a load can not be placed on stable ground. Make sure the support anchors can withstand the full weight of the load being anchored.

#### **A WARNING**

Maintain at least 4 wraps (coils) of cable on the drum during operation. Operating with fewer than 4 warps of cable on the drum can cause the cable to pull off the drum

# **MAINTENANCE**

The owner/operator is responsible for all periodic maintenance.

#### **A** WARNING

Never operate a damaged or defective winch.

#### **A** WARNING

Improper maintenance will void your warranty.

Complete all scheduled maintenance in a timely manner. Correct any issue before operating the winch.

#### NOTICE

For service or parts assistance, contact our help line at 1-877-338-0999

#### Cleaning

Use a damp cloth to clean the exterior surfaces of the winch. Use a soft bristle brush to remove excess dirt and oil. Use an air compressor (25 PSI) to clear dirt and small debris from the wire cable spool and other tight places.

#### **A** CAUTION

DO NOT spray water directly on the winch or wire cable. DO NOT wipe the wire cable with the damp cloth. Use only compressed air to clean the wire cable.

#### Lubrication

All moving parts within the Utility winch having been Lubricated using high temperature lithium grease at the factory. No internal lubrication is required. Lubricate cable assembly periodically using a light penetrating oil.

# **Cable Assembly Replacement**

It is recommended that any wire cable or spool modifications be performed by a manufacturer's authorized repair facility, and that only manufacturer-supplied parts be used.

# **STORAGE**

It is recommended the utility winch is stored indoors, in a clean dry place, free from sunlight and moisture.

- Make sure the winch is properly cleaned before storage.
- Make sure the wire rope is retracted onto the spool as much as it can be without damage.
- Make sure to tie up all cords.
- Store in a place that moisture can not damage the winch.
- Store in place that excess dust or debris can not damage the winch.

# **SPECIFICATIONS**

# **Performance Specifications**

Max Rated Standard Pull	2000 lb. (907 kg)
Max Rated Marine Pull	5000 lb. (2268 kg)
Max Rated Rolling Pull	6000 lb. (2722 kg)
Max Boat Size	18 ft. (5.5 m)
Motor	Hp/ 0.2 Kw. 12V DC

# **Dimensions**

Cable 1/5 in. (D) x 30 ft. (L)	[5.1 mm (D) x 9.1 m (L)]
Battery Cable 20 ft.	(6 m) (L) Positive Lead,
20 ft.	(6 m) (L) Negative Lead
Net Weight	23.4 lb. (10.6 kg)
Height	7.5 in. (19.1 cm)
Width	10 in. (25.4 cm)
Length	9.5 in. (24.1 cm)

Line Speed and Motor Current (First Layer)						
Line Pull	LB	0	500	1000	1500	2000
	KG	0	227	454	680	907
Line Speed (12V DC)	FPM	4.5	3.6	2.9	2.3	1.7
	MPM	1.4	1.1	0.9	0.7	0.5
Max Current	А	3	6	11	17	21
Running Time*	Minutes	1	1	1	1	1
Cooling Time**	Minutes	5	5	5	5	5

<sup>\*</sup> If the motor becomes uncomfortably hot to the touch, stop winching immediately and let it cool down for 5 minutes. Do not pull for more than one minute at or near the rated load.

<sup>\* \*</sup>Electric winches are designed and made for intermittent use and should not be used in constant duty applications.

Line Pull and Cable Capacity Per Layer						
Line of Cable		1	2	3	4	5
Max Pulling Capacity	LB	2000	1520	1226	1027	884
per layer	KG	907	689	556	466	401
Cable Capacity per	FT	4.7	10.8	18.4	27.5	30
layer	M	1.4	3.3	5.6	8.4	9.1

# **TROUBLESHOOTING**

Problem	Cause	Solution		
	No electrical power	Make sure battery cables are connected to a live 12V automotive battery or equivalent and to the winch		
Motor does not turn on.	Pinched battery cable	Check all battery cable connections and make sure nothing is resting on top of, or pinching the battery cables		
	Defective remote control	Replace remote control		
Motor runs slowly or without normal power.	Insufficient current or voltage	The voltage supply is weak. Check to make sure voltage supply is 12V		
Motor overheating.	Winch running time is too long	Allow winch to cool down		

#### For further technical support:

Technical Support Team
Toll Free 1-877-338-0999
support@championpowerequipment.com

# **WARRANTY\***

CHAMPION POWER EQUIPMENT 2 YEAR I IMITED WARRANTY

# **Warranty Qualifications**

To register your product for warranty and FREE lifetime call center technical support please visit:

https://www.championpowerequipment.com/register

To complete registration you will need to include a copy of the purchase receipt as proof of original purchase. Proof of purchase is required for warranty service. Please register within ten (10) days from date of purchase.

# **Repair/Replacement Warranty**

CPE warrants to the original purchaser that the mechanical and electrical components will be free of defects in material and workmanship for a period of two years (parts and labor) from the original date of purchase and 180 days (parts and labor) for commercial and industrial use. Transportation charges on product submitted for repair or replacement under this warranty are the sole responsibility of the purchaser. This warranty only applies to the original purchaser and is not transferable.

# Do Not Return The Unit To The Place Of Purchase

Contact CPE's Technical Service and CPE will troubleshoot any issue via phone or e-mail. If the problem is not corrected by this method, CPE may, at its option, authorize other means of repair and/or replacement.

# **Warranty Exclusions**

This warranty does not cover the following repairs and equipment:

#### **Normal Wear**

Products with mechanical and electrical components need periodic parts and service to perform well. This warranty does not cover repair when normal use has exhausted the life of a part or the equipment as a whole.

#### Installation, Use and Maintenance

This warranty will not apply to parts and/or labor if the product is deemed to have been misused, neglected, involved in an accident, abused, loaded beyond the product's limits, modified, installed improperly or connected incorrectly to any electrical component. Normal maintenance is not covered by this warranty and is not required to be performed at a facility or by a person authorized by CPE.

#### Other Exclusions

This warranty excludes:

- Cosmetic defects such as paint, decals, etc.
- Wear items such as winch cable, etc.
- Accessory parts such as storage covers.
- Failures due to acts of God and other force majeure events beyond the manufacturer's control.
- Problems caused by parts that are not original Champion Power Equipment parts.

# Limits of Implied Warranty and Consequential Damage

Champion Power Equipment disclaims any obligation to cover any loss of time, use of this product, freight, or any incidental or consequential claim by anyone from using this product. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICIJI AR PURPOSE.

A unit provided as an exchange will be subject to the warranty of the original unit. The length of the warranty governing the exchanged unit will remain calculated by reference to the purchase date of the original unit.

This warranty gives you certain legal rights which may change from state to state or province to province. Your state or province may also have other rights you may be entitled to that are not listed within this warranty.

# **Contact Information**

#### Address

Champion Power Equipment, Inc. 6370 S Pioneer Way, Unit 101 Las Vegas, NV 89113 USA www.championpowerequipment.com

#### **Customer Service**

Toll Free: 1-877-338-0999 info@championpowerequipment.com

Fax no.: 1-562-236-9429

#### **Technical Service**

Toll Free: 1-877-338-0999

tech@championpowerequipment.com

EMERGENCY 24 HOUR SUPPORT: 1-562-204-1188