




Champion Power Equipment, Inc., Santa Fe Springs, CA USA

MODEL #100641

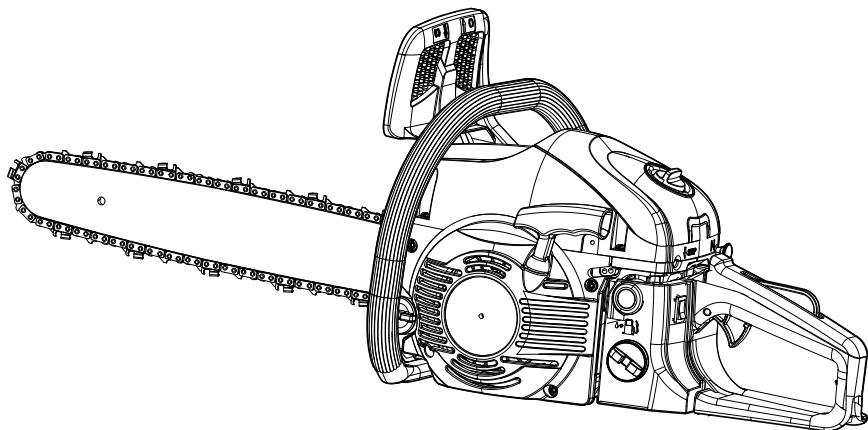

PARTS INFORMATION

CHAINSAW

SERIAL NUMBER RANGE: ALL



To order replacement parts please visit:
shop.championpowerequipment.com
or call **1-877-338-0999**.

TABLE OF CONTENTS


Chainsaw Parts Diagram **3**

Chainsaw Parts List **4**

Engine Parts Diagram **6**

Engine Parts List **7**

CHAINSAW PARTS DIAGRAM

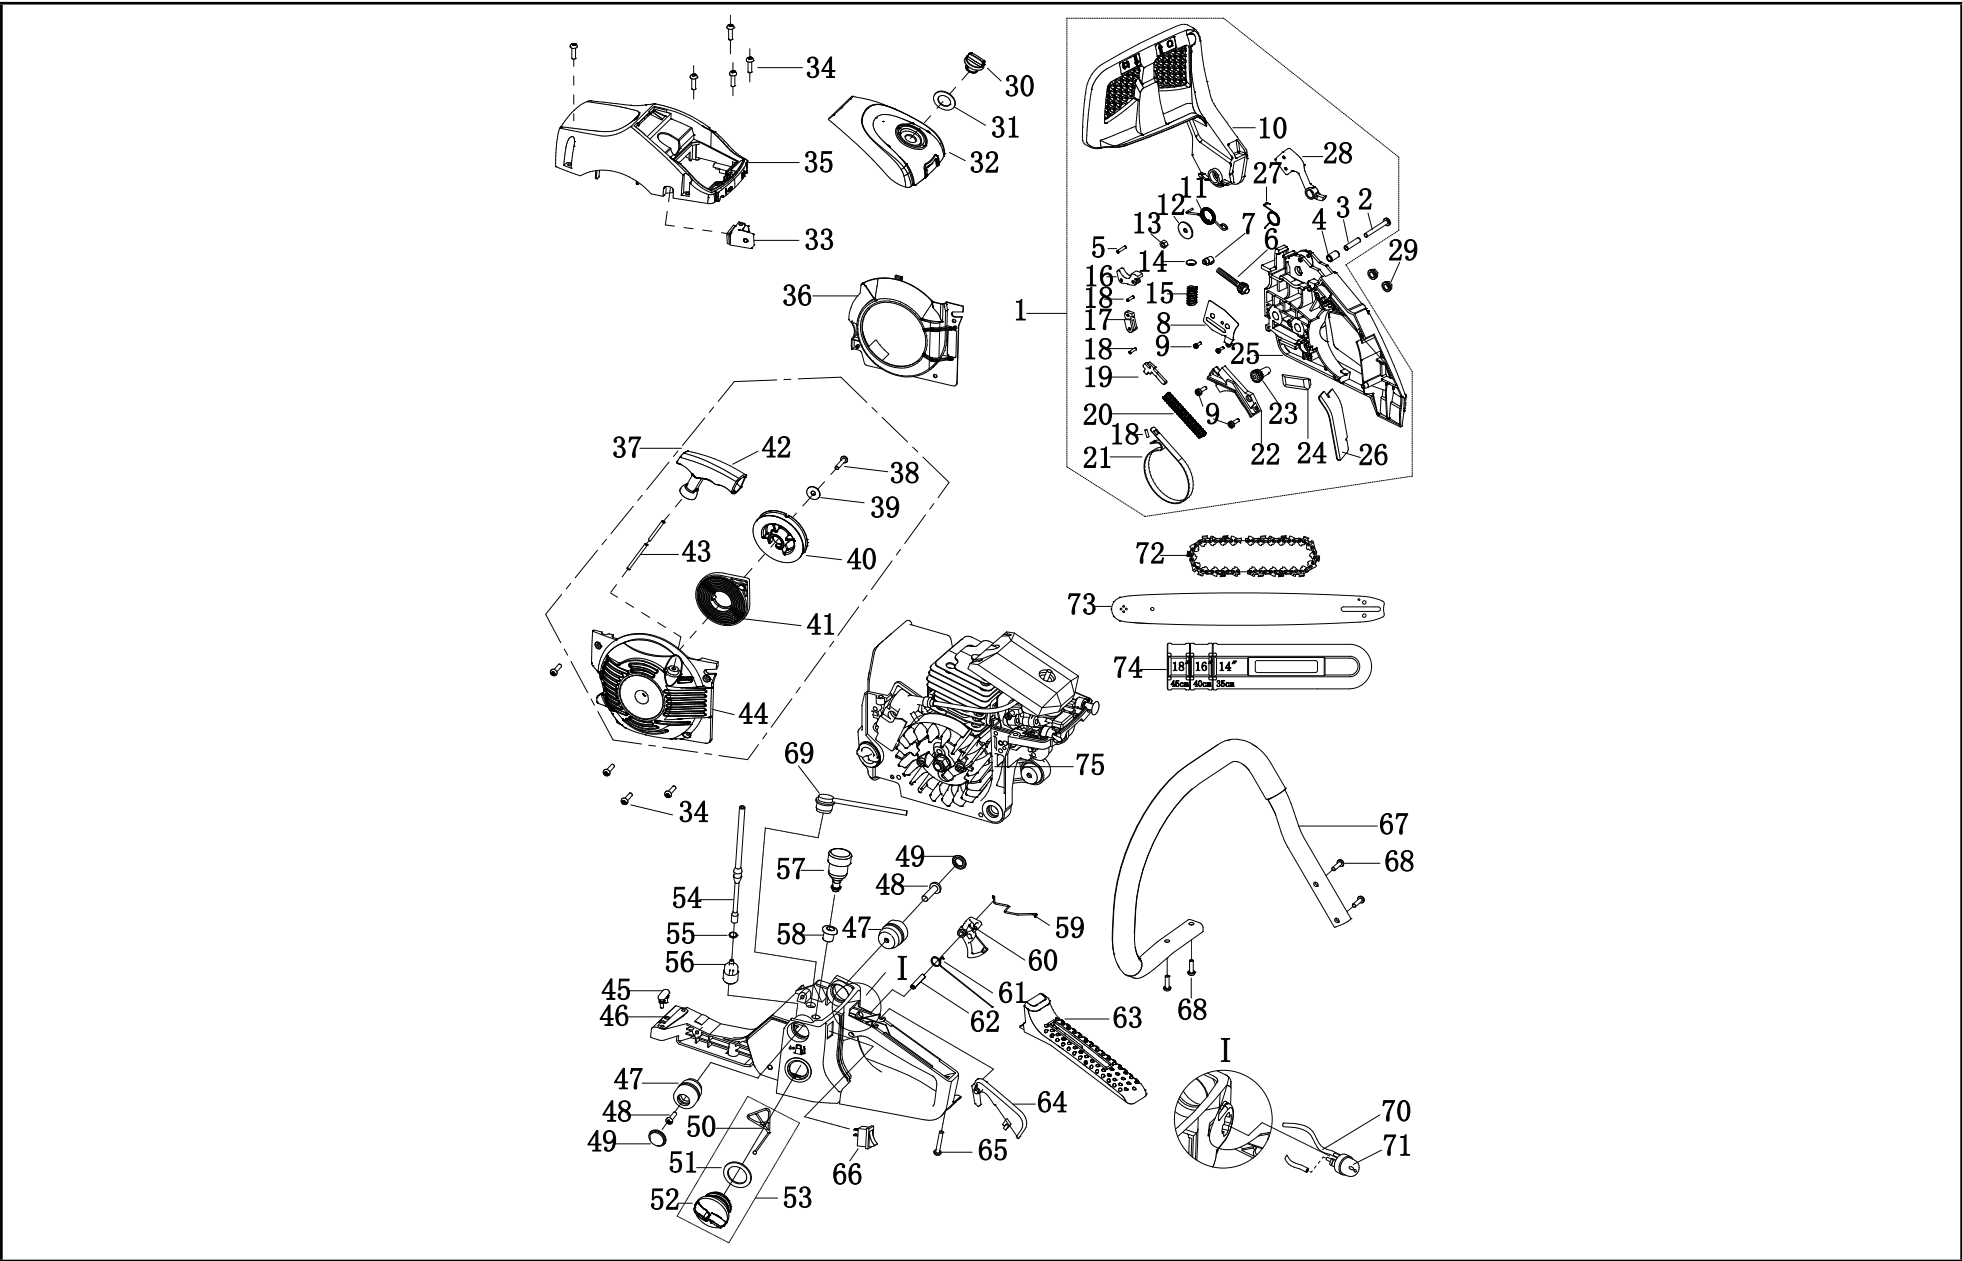


CHAINSAW PARTS LIST

#	Part Number	Description	Qty.
1	A45.1112.0000	Chain brake assembly	1
2	A38.0312.0015	Screw M5 x 40	1
3	A38.0312.0012	Shield Pipe	1
4	A38.0312.0011	Pipe	1
5	01.05.0171	Pin Ø3 x 14	1
6	A45.0112.0021	Tightener Screw	1
7	A45.0112.0022	Tension Block	1
8	A45.0112.0011	Tensioner Cover Plate	1
9	01.01.3131	Tapping Screw St4.2 x 9.5	4
10	A45.1112.0001	Front Damper	1
11	A38.0312.0008	Brake Torsion Rod Spring	1
12	A38.0312.0005	Washer Ø5.2 x Ø20 x 1.2	1
13	01.03.0113	Nut M5	1
14	A38.0312.0006	Spring Base	1
15	A38.0312.0005	Front Damper Spring	1
16	A38.0312.0004-18	Main Lever	1
17	A38.0312.0003-18	Secondary Pull-Rod	1
18	01.05.0161	Pin Ø3 x 9	3
19	A45.0112.0014	Brake Control Rod	1
20	A45.0112.0009	Brake Spring	1
21	A45.0412.0005	Brake Strap	1
22	A45.0412.0003	Brake Spring Cover Plate	1
23	A45.0112.0023	Tension Gear	1
24	A45.0101.0019	Chain Guide Block	1
25	A45.1112.0100-10	Right Cover	1
26	03.01.2.146	Dust Shield	1
27	A38.0312.0007	Heavy Block Spring	1
28	A38.0312.0200	Heavy Block	1

#	Part Number	Description	Qty.
29	01.03.0052	Nut M8	2
30	A45.0113.0100	Air Filter Lock Nut	1
31	A45.0113.0005	Lock Nut Washer Ø15 x Ø26 x 1	1
32	A45.0413.0001	Air Filter Cover	1
33	A45.0100.0005	Idle Adjusting Guide Set	1
34	01.01.3111	Screw M5 x 16	9
35	12.01.0239	Upper Cover Assembly	1
36	A45.0400.0001	Guide Flow Cover	1
37	A45.0410.0000	Starter Assembly	1
38	01.01.4111	Tapping Screw M4.8 x 14	1
39	01.04.0161	Washer Ø5	1
40	A45.0110.0001	Starter Plate	1
41	A45.0110.0004	Coil Spring	1
42	A62.0110.0002	Start Handle	1
43	A45.0110.0006	Start Grip	1
44	A45.0410.0100	Starter Housing	1
45	A45.0111.0001	Shock Rubber	1
46	A45.0111.0500	Base	1
47	A45.0111.0100	Shock Rubber Gland	2
48	A50.0100.0001	Screw	2
49	A45.0100.0002	Dust Cover	2
50	A38.0311.0302	Anti-Drop Plate	1
51	A38.0311.0303	O Sealing Ø24.7 x 3.55	1
52	A45.1111.0301	Fuel Cap	1
53	A45.1111.0300	Fuel Cap Assembly	1
54	A45.0111.0002	Fuel Tube	1
55	A45.0111.0008	Fuel Tube Circlip	1
56	A45.0111.0300	Petrol Filter Components	1

#	Part Number	Description	Qty.
57	A45.0111.0200	Balancer	1
58	A38.0311.0006	Balancer Root	1
59	A45.0101.0029	Throttle Rod	1
60	A45.0111.0004	Trigger	1
61	A45.0111.0005	Trigger Torsion Rod Spring	1
62	01.05.0181	Pin Ø6 x 24	1
63	A45.1111.0001	Handle Cover	1
64	A45.0111.0006	Trigger Control Rack	1
65	01.01.4122	Tapping Screw St4.2 x 22	1
66	02.05.92	Extinction Switch	1
67	05.01.06.0062	Front Handle Assembly	1
68	01.01.3031	Tapping Screw St4.8 x 16	4
69	A45.0111.0011	Scavenge Nozzle	1
70	03.01.2.153	Pump Tube	1
71	A38.0311.0100	Purge Bulb	1
72	A45.0115.0400	18"Saw Chain	1
73	A45.0115.0100	18"Guide Bar	1
74	A45.0115.0001	18"Scabbard	1
75	12.01.1270	Engine Assembly 45CC	1

ENGINE PARTS DIAGRAM

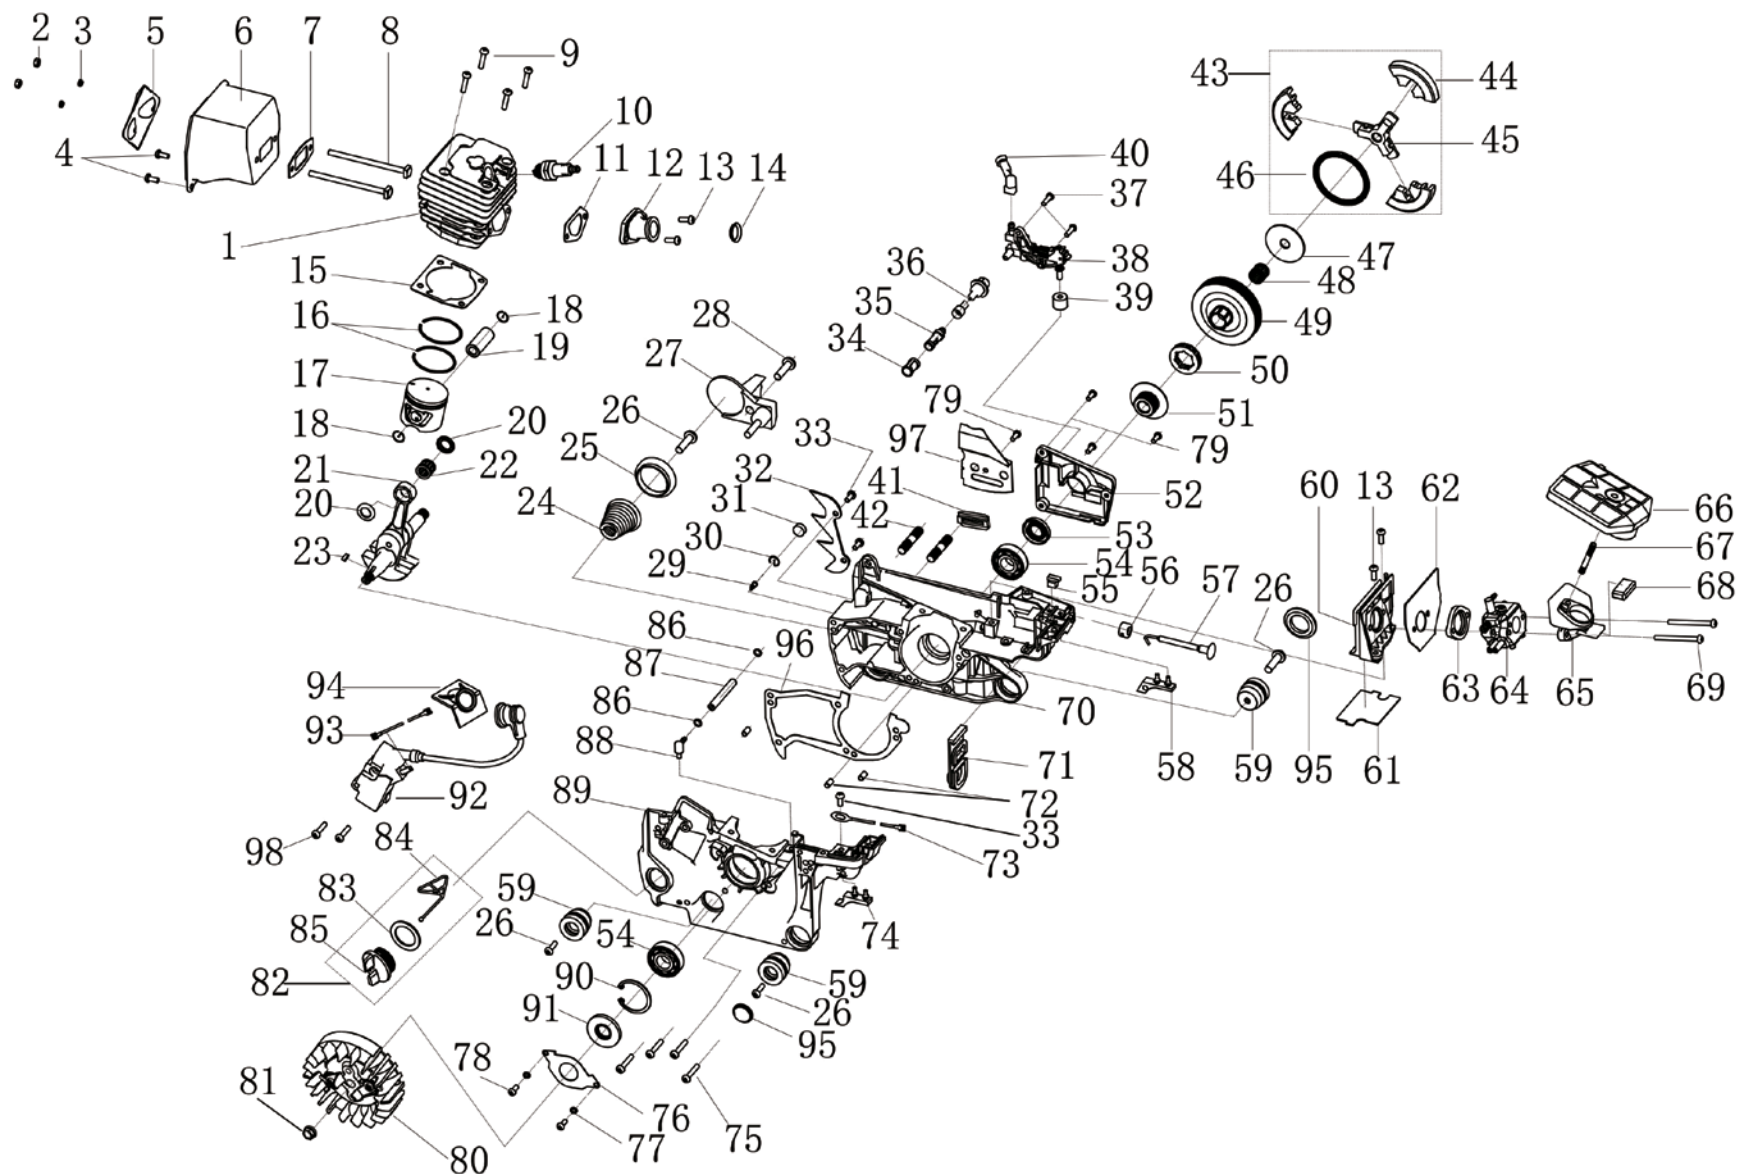

ENGINE PARTS LIST

#	Part Number	Description	Qty.
1	A45.0101.0002	Cylinder	1
2	01.03.0091	Nut M5	2
3	01.04.0091	Lock Washer Ø5	2
4	01.01.6113	Screw M5 x 14	2
5	A45.0105.0001	Muffler Cover Plate	1
6	A45.0105.0200	Muffler Body	1
7	A45.0101.0006	Muffler Sealing Plate	1
8	A45.0101.0028	Muffler Connecting Screw	2
9	01.01.6201	Screw M5 x 20	4
10	A45.0106.0500	Spark Plug	1
11	A45.0101.0004	Inlet Pipe Sealing Gasket	1
12	A45.0101.0400	Admitting Pipe	1
13	01.01.3181	Screw M5 x 12	4
14	A45.0101.0020	Hold Coil	1
15	A45.0101.0005	Cylinder Sealing Gasket	1
16	A45.0103.0001	Piston Ring	2
17	A45.0103.0300	Piston	1
18	A45.0103.0003	Piston Pin Circlip	2
19	A45.0103.0002	Piston Pin	1
20	A45.0103.0004	Needle Bearing Ring	2
21	A45.0103.0100	Crank Shaft Components	1
22	A45.0103.0200	Needle Bearing Ø11 x Ø15 x 12.5	1
23	A45.0101.0036	Semicircular Key 3 x 3.7 x 10	1
24	A45.0100.0004	Conical Spring Base	1
25	A45.0100.0003	Conical Spreader Base	1
26	01.01.3031	Tapping Screw St4.8 x 16	4
27	A45.0100.0100	Chain Shield	1
28	01.01.3111	Screw M5 x 16	1
29	A45.0102.0202	Aeration Jet	1
30	A45.0102.0203	Aeration Jet Circlip	1

#	Part Number	Description	Qty.
31	A45.0101.0026	Sponge Transition Block	1
32	A45.0101.0024	Pinion Rack	1
33	01.01.3101	Screw M5 x 10	3
34	A45.0114.0302	Oil Filter Screen	1
35	A45.0114.0301	Oil Filter	1
36	A45.0114.0001	Oil Tube	1
37	01.01.3071	Screw M4 x 14	2
38	A45.0114.0100	Oil Pump	1
39	A45.0101.0027	Sponge Transition Coil	1
40	A45.0114.0002	Nozzle	1
41	A45.0101.0019	Chain Guide Block	1
42	01.02.1061	Double-Screw Bolt Aym8-M8 x 41-8.8	2
43	A45.0101.0300	Clutch	1
44	A45.0101.0302	Shoe Block	3
45	A45.0101.0301	Retainer	1
46	A45.0101.0303	Clutch Spring	1
47	A45.0101.0022	Clutch Adjusting Washer	1
48	A45.0101.1300	Needle Bearing Ø12 x Ø15 x 14.5	1
49	A45.0101.0033	Clutch Shell	1
50	A45.0101.0030	Hexagonal Hole Washer	1
51	A45.0101.0900	Worm	1
52	A45.0101.0018	Cover Plate	1
53	A45.0101.1200	Oil Seal Ø15 x Ø28 x Ø4.5	1
54	01.05.1260	Bearing 6202D Grade 15 x 35 x 11	2
55	A45.0101.0014	Cushion Block	1
56	A45.0101.0013	Choke Rod Fixation Root	1
57	A45.0101.0700	Choke Rod	1
58	A45.0101.0016	Right Shock Block	1
59	A45.0101.1000	Shock Seat	3
60	A45.0101.0500	Air Intake Tube Support	1

#	Part Number	Description	Qty.
61	A45.0101.0009	Tie Plate	1
62	A45.0101.0008	Sealing Plate Of Air Intake Support	1
63	A45.0101.0017	Air Intake Tube Flange	1
64	06.08.02.893A	Carburetor	1
65	A45.0101.0601	Air Intake Socket	1
66	A45.1104.0000	Air Filter	1
67	01.02.1081	Double-Screw Bolt Gm5-M5 x 38	1
68	A45.0101.0010	Cushion Of Air Intake Socket	1
69	01.01.3021	Screw M5 x 50	2
70	A45.0102.0201	Right Case	1
71	A45.0101.0011	Dust Plate	1
72	01.05.0071	Pin Ø5 x 10	3
73	A38.0306.0400	Earth Wire	1
74	A45.0101.0015	Left Shock Block	1
75	01.01.6203	Screw M5 x 25	5
76	A45.0101.0023	Oil Shield	1
77	01.04.0191	Washer Ø4	2
78	01.01.3091	Screw M4 x 8	2
79	01.01.3061	Screw M4 x 10	4
80	A45.0106.0900	Magneto Rotor	1
81	01.03.0073	Nut M8 x 1	1
82	A45.1101.0800	Oil Cap Assembly	1
83	A45.0101.0802	O Sealing Ø20 x 30 x 2	1
84	A38.0311.0302	Anti-Drop Plate	1
85	A45.1101.0801	Oil Cap	1
86	A45.0102.0103	Suction Tube Circlip	2
87	03.01.2.154	Suction Tube 2.5 x 6 x 115	1
88	A45.0102.0300	Suction Jet	1
89	A45.0102.0101-3	Left Case	1
90	01.04.1011	Shield Ring 35	1
91	A45.0101.1100	Oil Seal Ø15 x Ø35 x 4.5	1
92	A45.0106.1000-3	Igniter	1

#	Part Number	Description	Qty.
93	A45.0106.0600	Extinction Conductor	1
94	A45.1106.0001	Igniter Cap	1
95	A45.0100.0007	Dust Cover	2
96	A45.0102.0001	Case Body Sealing Plate	1
97	A45.0101.0021	Damper	1
98	01.01.6103	Screw M5 x 20	2