


Resetting the Maintenance Hour Meter


The maintenance hour meter counts down 100 hours. Once completed the 100-hour maintenance, refer to below to reset the hour meter.


Refer to the scheduled maintenance chart for specific maintenance.


1. Locate the aXis CONTROLLER.

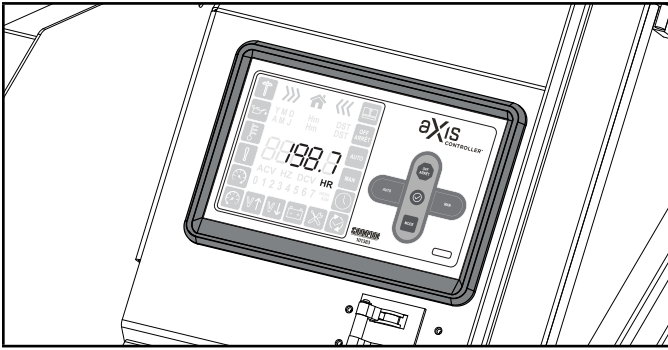


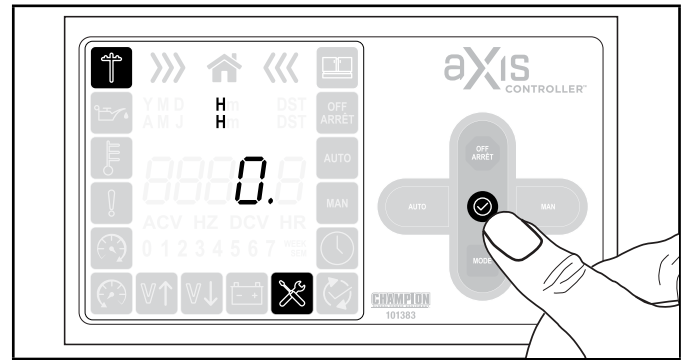
2. Press OFF to take the generator off standby allowing you to enter setting mode.

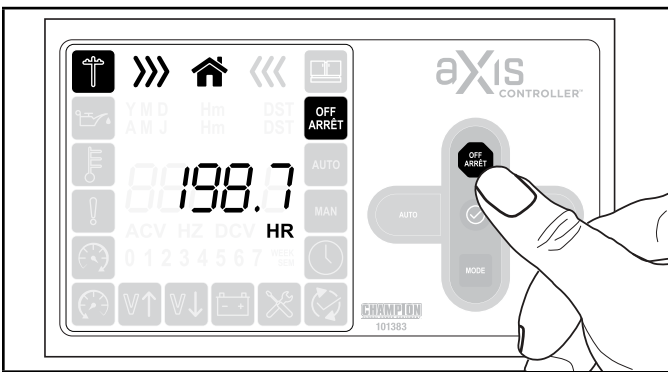


3. Press and hold  for five (5) seconds to enter setting mode.

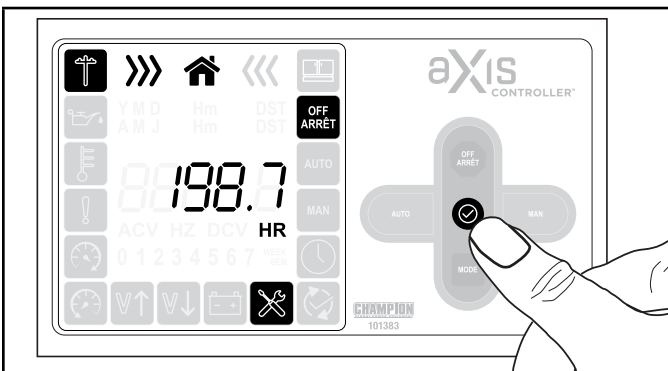


4. Cycle through until you reach maintenance hours (H) by pressing the  button. Look for the maintenance icon to be highlighted, lower right. Example shows 0 hours left for maintenance. Time for reset the count down clock.



5. Press and hold AUTO button for approximately 5 seconds or until you see hour meter reset to 100. Release button.

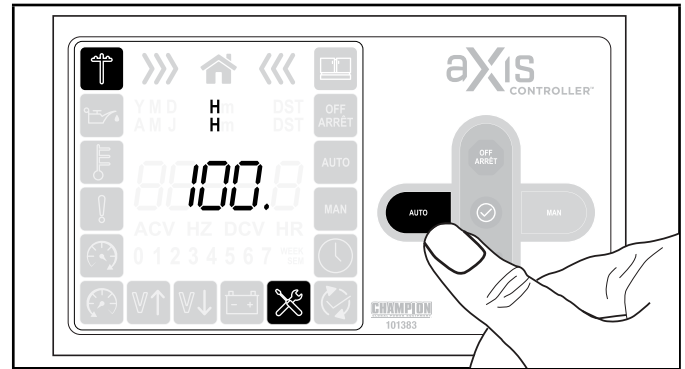

6. You have now reset the maintenance hour meter to 100 hours and can press OFF to exit.

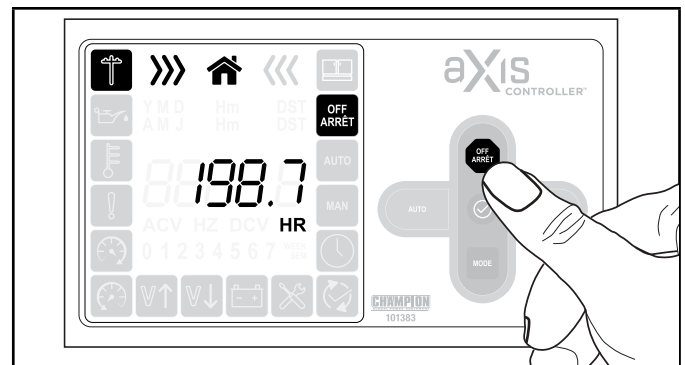

7. Press AUTO once and the system goes in standby mode.

