




Champion Power Equipment, Inc.

MODEL #201592

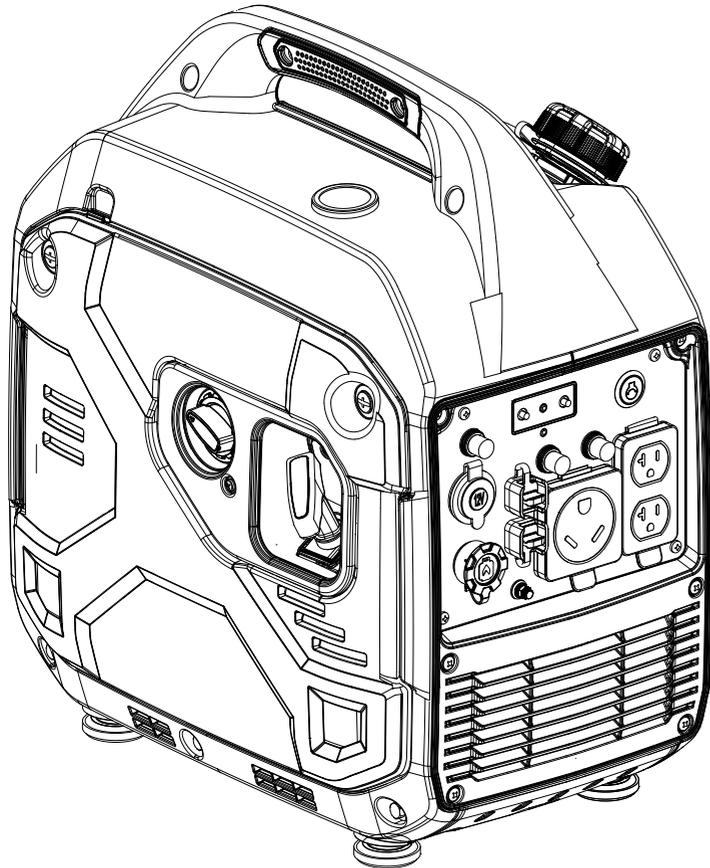

PARTS INFORMATION

4000W DUAL FUEL ELECTRIC START INVERTER GENERATOR

SERIAL NUMBER RANGE: ALL



To order replacement parts please visit:
shop.championpowerequipment.com
or call **1-877-338-0999**.

TABLE OF CONTENTS

Inverter Parts Diagram	3
Inverter Parts List	4
Engine Parts Diagram	6
Engine Parts List	7
Cylinder Head Parts Diagram	9
Cylinder Head Parts List	10
Carburetor Parts Diagram	11
Carburetor Parts List	12
Fuel Tank Parts Diagram	13
Fuel Tank Parts List	14
Control Panel Parts Diagram	15
Control Panel Parts List	16
Housing Assembly Parts Diagram	17
Housing Assembly Parts List	18
Wiring Diagram	19

INVERTER PARTS DIAGRAM

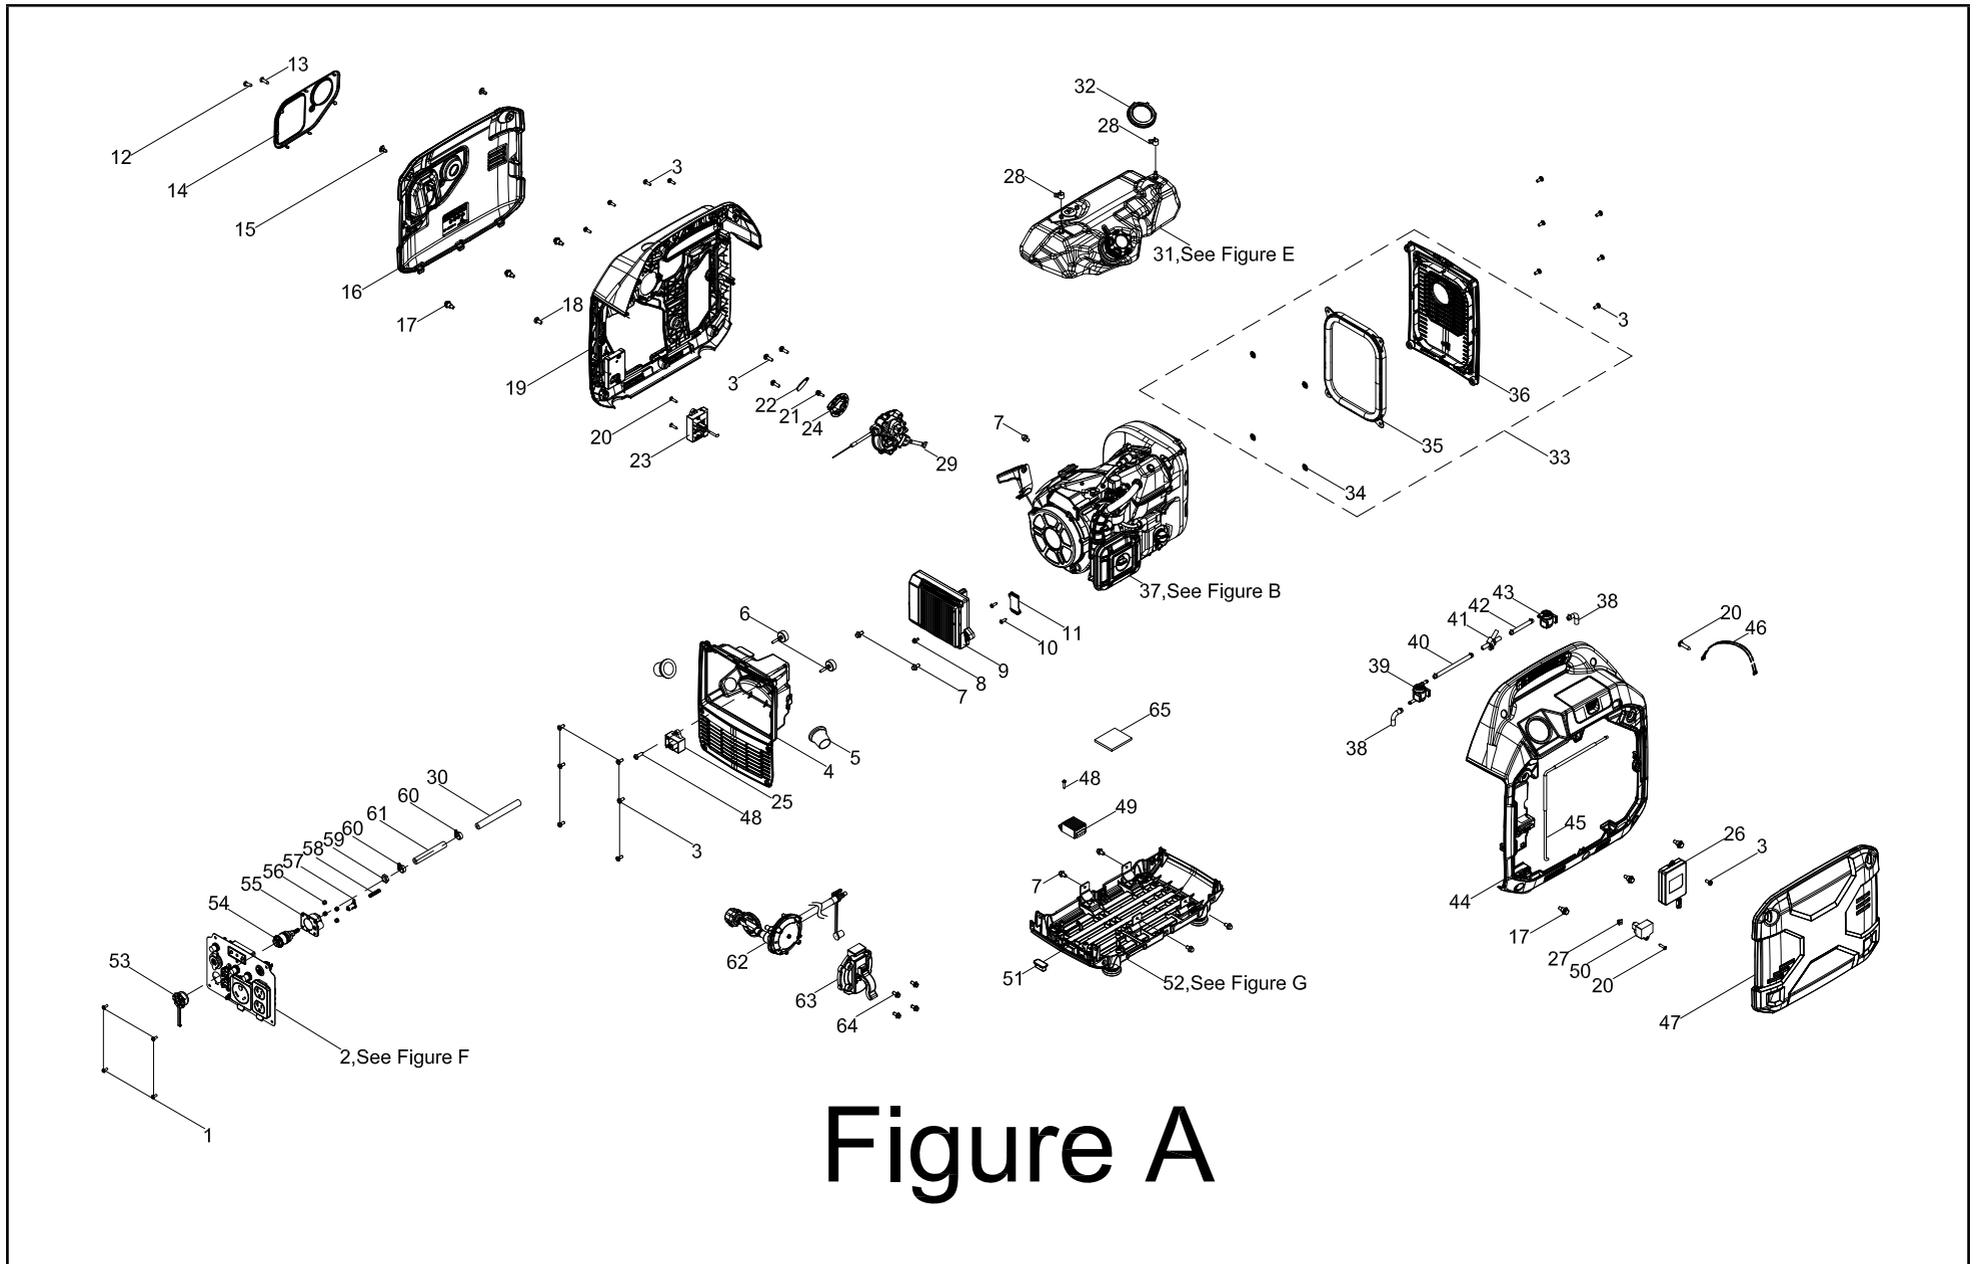


Figure A

INVERTER PARTS LIST

#	Part Number	Description	Qty.
1	100010946-0009	Screw M4 x 10	4
2	100811409	Panel Assembly, See Figure F	1
3	100033079-0003	Screw M5 x 16	20
4	100822090	Panel Bed	1
5	100711831	Wire Jacket	2
6	100716670	Bumper Pad	2
7	100011570-0001	Big Flange Bolt M6 x 12	7
8	100011247-0004	Flange Bolt M5 x 8	1
9	100815135	Inverter, 120V 60Hz	1
10	100032967-0002	Self-tapping Screw, ST4.2 x 16	2
11	100158096	Clip Base	1
12	100733485-0002	Self-tapping Screw, ST4.2 x 13	1
13	100032967-0005	Self-tapping Screw, ST4.2 x 16	1
14	100796683-0001	Appearance Protect	1
15	100072713-0002	Bolt	2
16	100818534-0001	Left Cover Board Assembly	1
17	100081994	Shaft Locating Bolt	6
18	100010953-0004	Screw M5 x 10	1
19	100797056-0001	Housing Assembly, Left Handle	1
20	100011002-0004	Self-tapping Screw, ST4.2 x 19	4
21	100137684-0003	Flange Bolt M4 x 16	1
22	100715786-0002	Cover, Fuel Switch Handle	1
23	5.1830.022	CO Shutdown Module	1
24	100796806	Oil Switch Knob	1
25	100715460-0001	Fuel Solenoid Valve Controller	1
26	100811413	Battery	1
27	100716666	Clamp	1
28	100005148	Clamp 1, Ø8	2
29	100811408	Switch Assembly	1
30	100789922	Protective Jacket	1

#	Part Number	Description	Qty.
31	100797397	Fuel Tank Assembly, See Figure E	1
32	100008887	Lock Nut	1
33	100727377-0001	Service Window	1
34	100087972	Retainer Ring	4
35	100158130	O-ring Seal	1
36	100716698	Rear Panel, Muffler	1
37	1ZC7DC039	Engine, See Figure B	1
38	100161875-0001	Fuel Tube 2	2
39	100158094	Roll Over Valve	1
40	100716692	Fuel Tube 3	1
41	100160310	Fuel Tee Pipe	1
42	100716690	Fuel Tube 4	1
43	100158092	Roll Over Valve	1
44	100727373-0003	Housing Assembly, Right Handle	1
45	100786920	Fuel Tube 5	1
46	100000563	Tape	1
47	100818532-0001	Right Cover Board Assembly	1
48	100100457-0001	Screw M4 x 16	2
49	100765371-0001	Rectifier Bridge, Capacitance	1
50	100807784	Charger	1
51	100072710	Rubber Damper	1
52	100797396	Switch Box Base Kit, See Figure G	1
53	100158478-0001	Protector Cover, Quick Connector	1
54	100157219-0001	Self-locking Quick Connector, Female	1
55	100157218-0001	Mounting Seat, Self-locking Quick Connector	1
56	100011065-0005	Flange Nut M4	4
57	100157217-0001	Sliding Block, Mounting Seat	1
58	100157221-0001	Spring, Mounting Seat	1
59	100160807-0001	Nut M12	1
60	100759576	Clamp, Fuel Hose	2

#	Part Number	Description	Qty.
61	100797101	Gas Hose	1
62	100817488-0001	LPG Hose with Regulator	1
63	100715007	Mounting Cover, Gas Pressure Valve	1
64	100011570-0009	Flange Bolt M6 x 12, GB16674	4
65	100822593	Cotton	1

ENGINE PARTS DIAGRAM

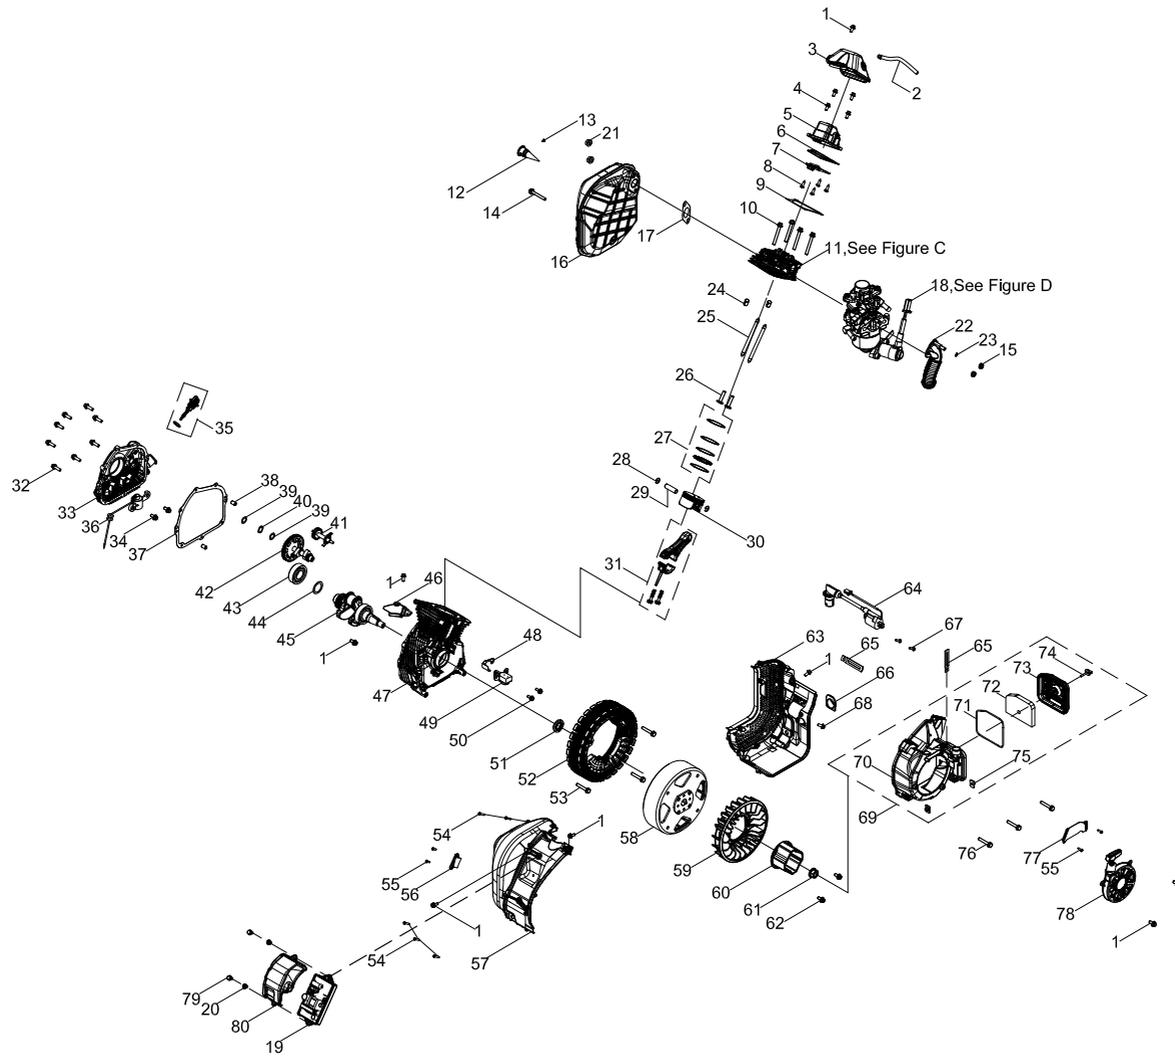


Figure B

ENGINE PARTS LIST

#	Part Number	Description	Qty.
1	100011570-0001	Big Flange Bolt M6 x 12	9
2	100088413	Breather Tube	1
3	100158098	Cylinder Head Cover Gasket	1
4	100031968-0002	Big Flange Bolt M6 x 20	4
5	100157081	Cylinder Head Cover Assembly	1
6	100158111	Gasket, Cylinder Cover	1
7	100158112	Inner Cover, Valve Cover	1
8	100005133	Cross Screw M3 x 6	4
9	100158122	Gasket, Cylinder Head Cover	1
10	100002464-0001	Flange Bolt M8 x 60	4
11	100797890	Cylinder Head Assembly - See Figure C	1
12	100085794	Spark Arrester Assembly	1
13	100011000-0001	Self-tapping Screw ST4.2 x 9.5	1
14	100011280-0004	Flange Bolt M6 x 75, GB5789	1
15	100011452-0003	Flange Nut M6	2
16	100765699	Exhaust Muffler Assembly	1
17	100751828	Gasket, Muffler	1
18	100821978	Carburetor kit - See Figure D	1
19	100811412	Electric Starter	1
20	100007688	Bush	2
21	100011452-0013	Lock Nut M6, Flange	2
22	100158121	Air Filter Hose	1
23	100005150	Clamp 2	1
24	100010558	Dowel Pin Ø10 x 16	2
25	100760593	Push Rod	2
26	100004262	Lifter, Valve	2
27	100726599	Piston Ring Set	1
28	100003220	Circlip	2
29	100722061	Wrist Pin	1
30	100781541	Piston	1

#	Part Number	Description	Qty.
31	100782826	Connecting Rod	1
32	100818697-0001	Big Flange Bolt M6 x 25	8
33	100157091	Cover, Crankcase	1
34	100031967-0007	Big Flange Bolt M6 x 16	2
35	100084322-0003	Oil Dipstick Assembly, Black	1
36	100786588-0001	Oil Level Sensor	1
37	100821248	Gasket, Crankcase Cover	1
38	100010549	Dowel Pin Ø8 x 12	2
39	100158680	Washer Ø14.2 x 0.5 x Ø21	2
40	100162210	Washer, 14.2 x 21 x 2	1
41	100724647	Oil Thrower Gear	1
42	100813811	Camshaft	1
43	100072204	Bearing, 6205E	1
44	100010527-0001	Washer Ø25.4 x 1 x Ø34	1
45	100786015	Crankshaft	1
46	100797058	Shroud 1	1
47	100157087	Crankcase	1
48	100720770	Shroud 2	1
49	100765358-0001	Trigger	1
50	100055591-0006	Small Flange Bolt M6 x 12	2
51	100017644	Oil Seal Ø25 x Ø41.25 x 6	1
52	100811411	Stator Assembly	1
53	100076844-0001	Small Flange Bolt M6 x 38	3
54	100011004-0001	Self-tapping Screw ST4.2 x 25	5
55	100032967-0002	Self-tapping Screw ST4.2 x 16	4
56	100158099	Idle Spring	1
57	100158229	Rear Air Guide	1
58	100791898	Rotor Assembly, Permanent Magneto	1
59	100158114	Cooling Fan	1
60	100157090	Pulley, Starter	1

#	Part Number	Description	Qty.
61	100011462-0001	Flange Nut M14 x 1.5	1
62	100011571-0001	Big Flange Bolt M6 x 14	2
63	100158107	Front Air Guide	1
64	100765357	Ignition Coil	1
65	100000656	Wire Clip C	2
66	100784921	Oil Seal	1
67	100093250-0004	Self-tapping Screw ST4.8 x 20	2
68	100715178-0001	Big Flange Bolt M6 x 45	1
69	100813805	Fan Cover Assembly	1
70	100818912	Fan Cover	1
71	100158177	Gasket, Air Filter	1
72	100158179	Air Filter Element	1
73	100818913	Air Filter Cover	1
74	100158176	Bolt	1
75	100072994	Step Nut	2
76	100011274-0002	Flange Bolt M6 x 45, GB5789	3
77	100158097	Clip Base 1	1
78	100717807-0001	Recoil Starter Assembly	1
79	100011267-0003	Bolt M6 x 22	2
80	100716705	Cover	1

CYLINDER HEAD PARTS DIAGRAM

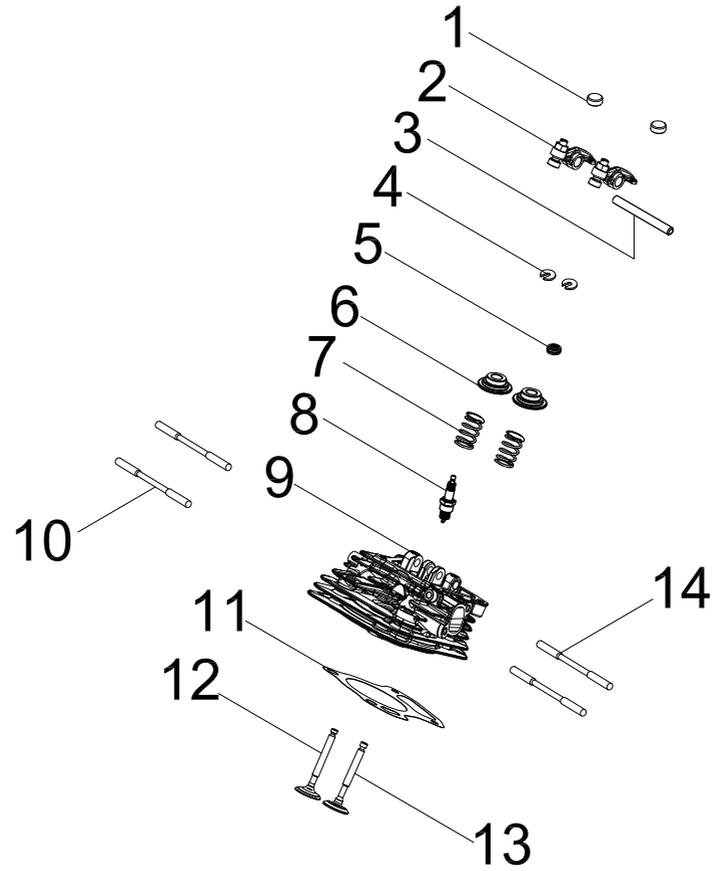


Figure C

CYLINDER HEAD PARTS LIST

#	Part Number	Description	Qty.
1	100760592	Valve Adjust Cap, Exhaust	2
2	100760595	Rocker Arm Assembly	2
3	100158127	Shaft, Rocker Arm	1
4	100075055	Valve Collet	2
5	100758247	Oil Drip Pan	1
6	100075056	Valve Spring Seat	2
7	100159357	Spring Valve	2
8	100097810	Spark Plug(E6RTC)	1
9	100756934	Cylinder Head	1
10	100051258-0001	Stud Bolt M6 x 82	2
11	100158124	Gasket, Cylinder Head	1
12	100760591	Valve Exhaust	1
13	100760590	Valve Intake	1
14	100010348	Stud Bolt M6 x 87	2

CARBURETOR PARTS DIAGRAM

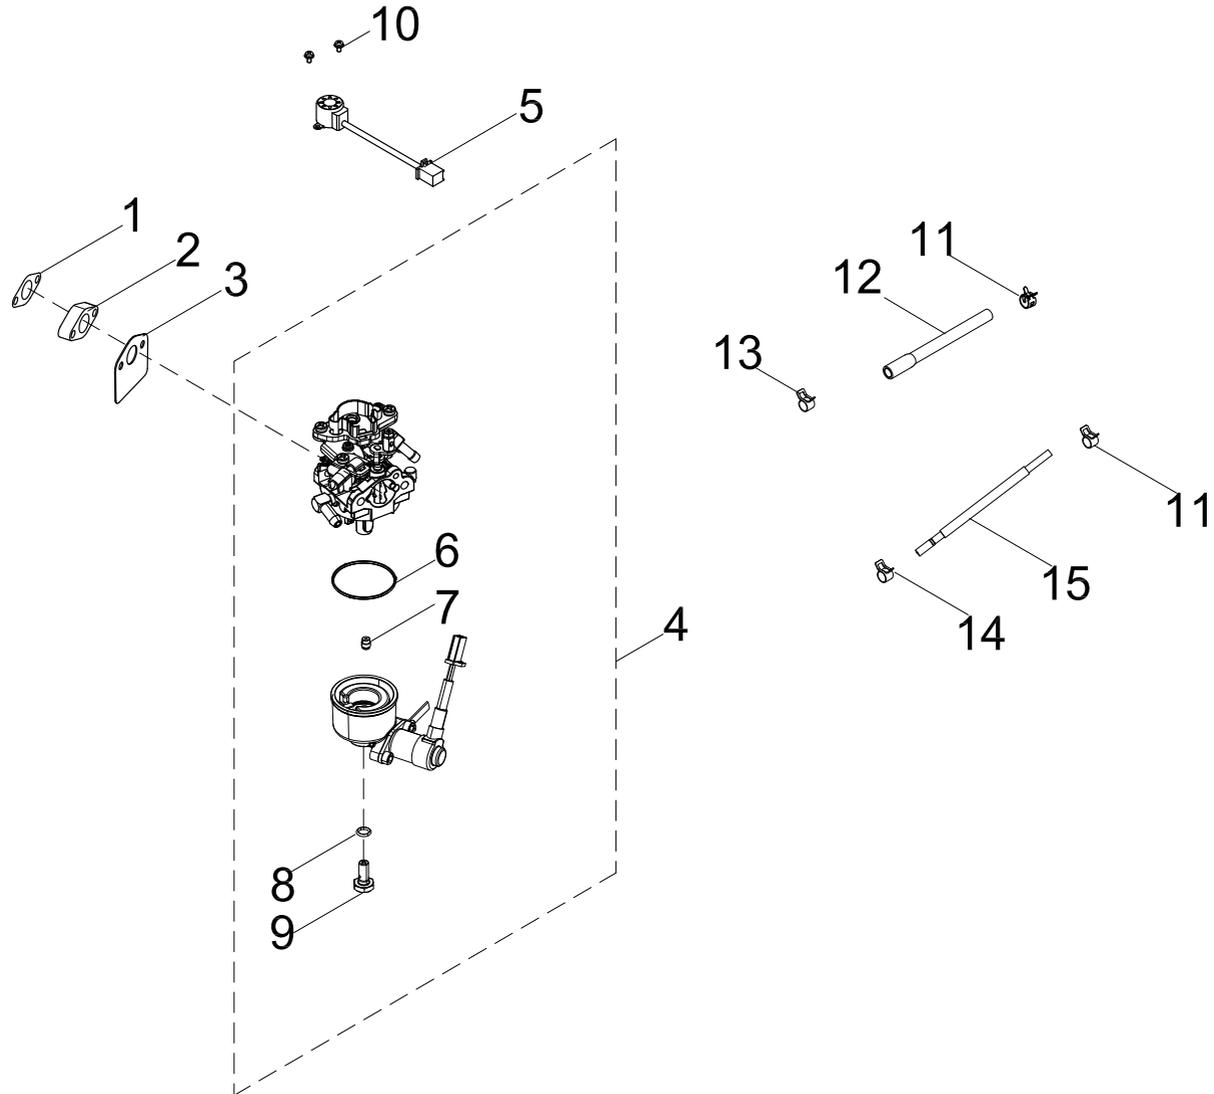


Figure D

CARBURETOR PARTS LIST

#	Part Number	Description	Qty.
1	100158108	Gasket, Insulator	1
2	100158118	Insulator, Carburetor	1
3	100158117	Gasket, Carburetor	1
4	100820488	Carburetor	1
5	100061512	Stepper Motor	1
6	100790304	Fuel Bowl O-Ring	1
7	100056226	Main Jet Standard (67)	1
	100030033	Main Jet Altitude 1000-3000m(65)	/
8	100715796	Fuel Bowl Mounting Bolt Gasket	1
9	100715797	Fuel Bowl Mounting Bolt	1
10	100031942-0002	Flange Bolt M3 x 6	2
11	100771620	Clamp Ø8.5	2
12	100798440	Fuel Tube 1	1
13	100005159	Clamp 2, Ø10.5 x 8	1
14	100090871	Clamp 1, Ø9.7 x 8	1
15	100798439	Fuel Tube	1

FUEL TANK PARTS DIAGRAM

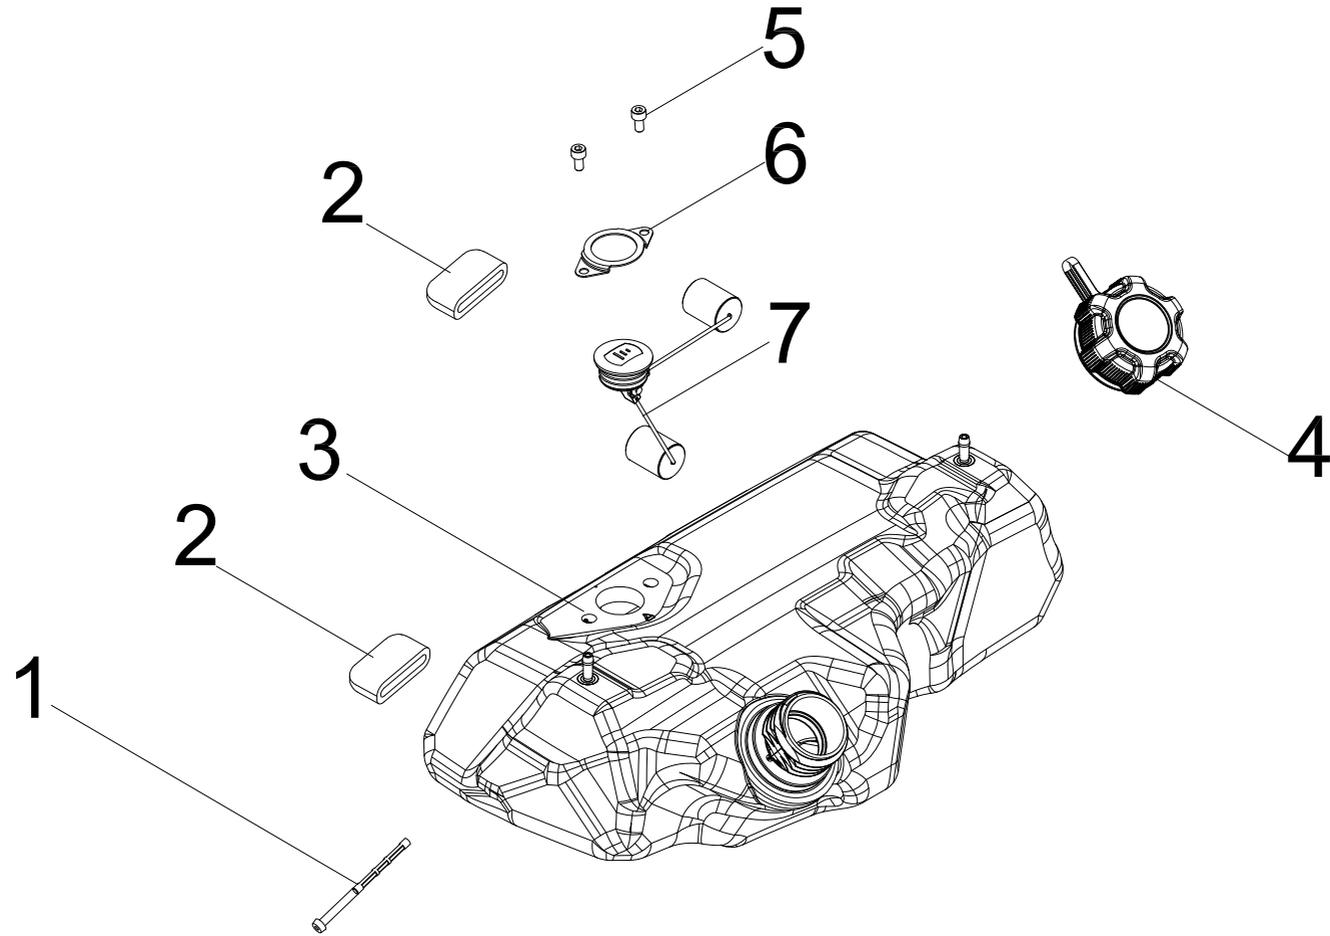


Figure E

FUEL TANK PARTS LIST

#	Part Number	Description	Qty.
1	100711177	Fuel Strainer	1
2	100072727	Rubber Pad	2
3	100733630	Fuel Tank	1
4	100764979	Fuel Tank Cap	1
5	100010831-0001	Flange Bolt M5 x 10	2
6	100714562	Fixed Clamp	1
7	100797170	Fuel Indicator	1

CONTROL PANEL PARTS DIAGRAM

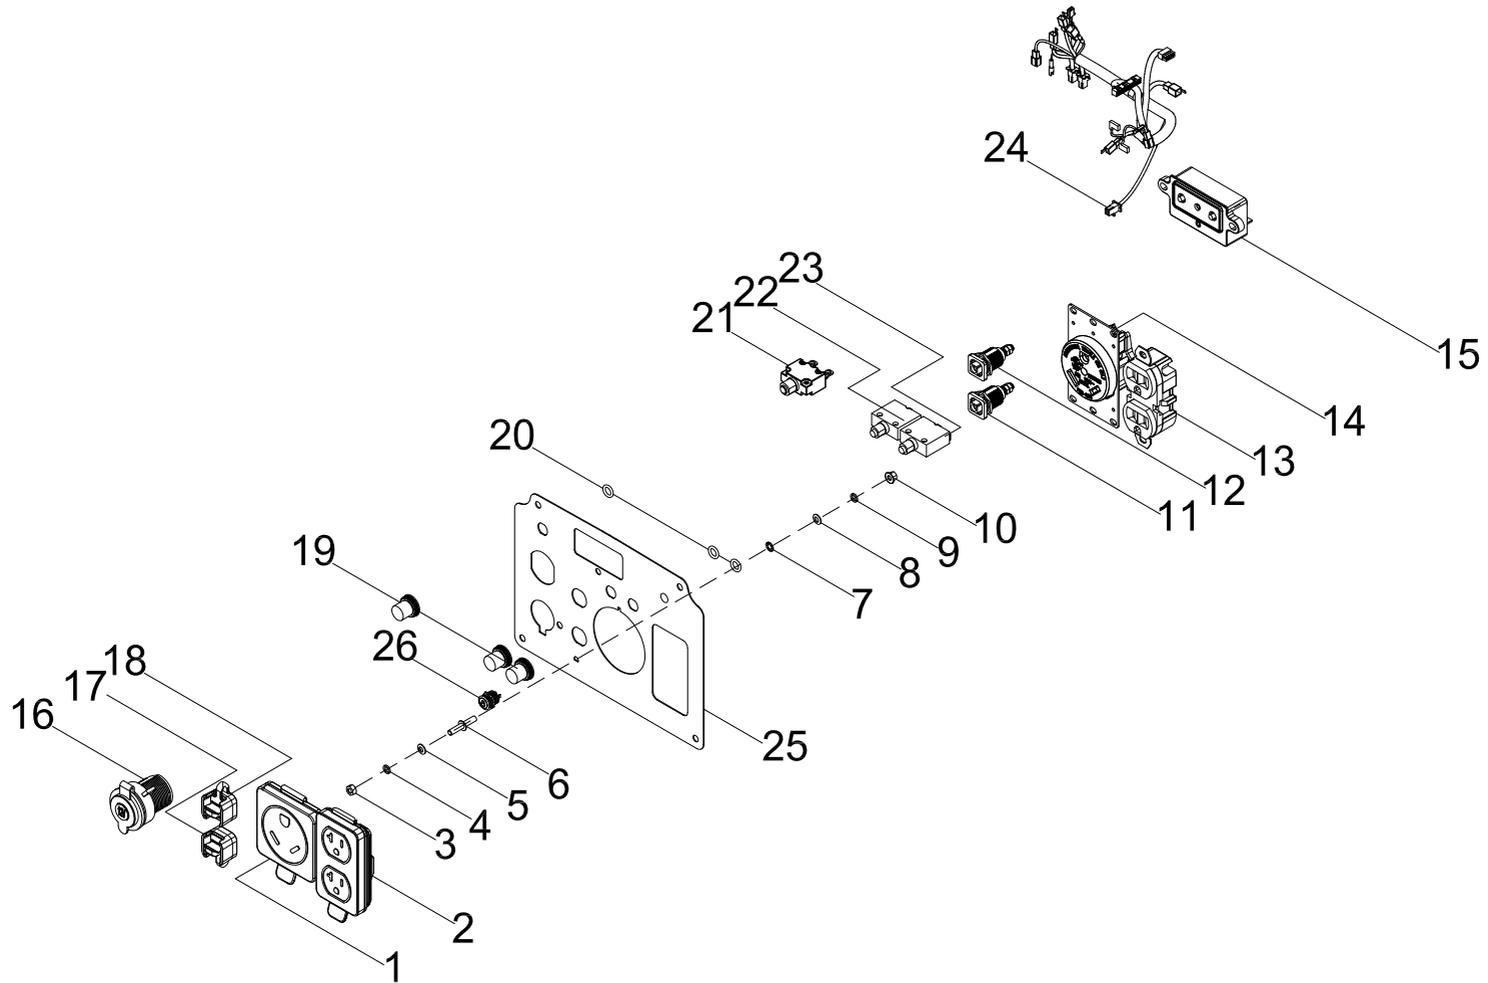


Figure F

CONTROL PANEL PARTS LIST

#	Part Number	Description	Qty.
1	100731572	Receptacle Cover, TT-30R	1
2	100731575	Receptacle Cover, 5-20R	1
3	100011421-0003	Flange Nut M6	1
4	100010886-0004	Spring Washer Ø6	1
5	100010910-0003	Flat Washer Ø6	1
6	100092320-0001	Ground Stud	1
7	100128826-0001	Lock Washer Ø6, Toothed	1
8	100010919-0002	Flat Washer Ø5	1
9	100010885-0003	Spring Washer Ø5	1
10	100074511-0003	Flange Nut M5	1
11	100746006-0002	Parallel Port, Square,Black	1
12	100746006-0001	Parallel Port, Square, Red	1
13	100020029	Receptacle 5-20R, Duplex	1
14	100161320	Receptacle TT-30R	1
15	100159885	LED Display Module	1
16	100019782	Receptacle, 12 VDC	1
17	100735685-0002	Parallel Port Cover, Square, Black	1
18	100735685-0001	Parallel Port Cover, Square, Red	1
19	100120180	Cover, Circuit Breaker	3
20	100031552	O-Ring	3
21	100057719	8Amp Circuit Breaker, Push Button	1
22	100019751	30Amp Circuit Breaker, Push Button	1
23	100019754	20Amp Circuit Breaker, Push Button	1
24	100715173	Wire Harness Assembly	1
25	100821620	Control Panel	1
26	100811410	Push-Button Start	1

HOUSING ASSEMBLY PARTS DIAGRAM

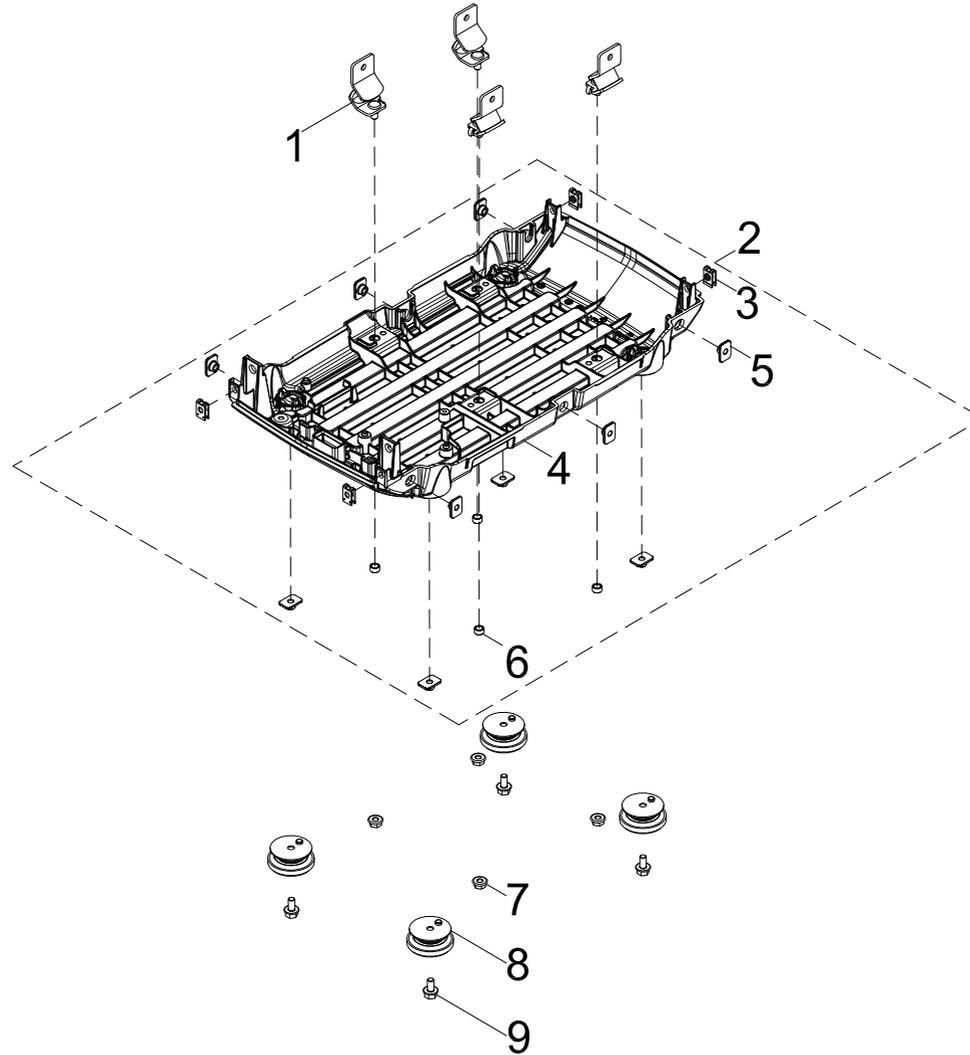


Figure G

HOUSING ASSEMBLY PARTS LIST

#	Part Number	Description	Qty.
1	100072715	Vibration Mount, Support	4
2	100716663	Housing Assembly, Bottom	1
3	100050562	Threaded Clamp	4
4	100716665	Housing, Bottom, Black	1
5	100072994	Step Nut	10
6	100716706	Bushing	4
7	100011452-0003	Flange Nut M6	4
8	100718915	Foot, Bottom Housing	4
9	100011261-0004	Flange Bolt M6 x 12	4

