


Champion Power Equipment, Inc.

MODEL #201543

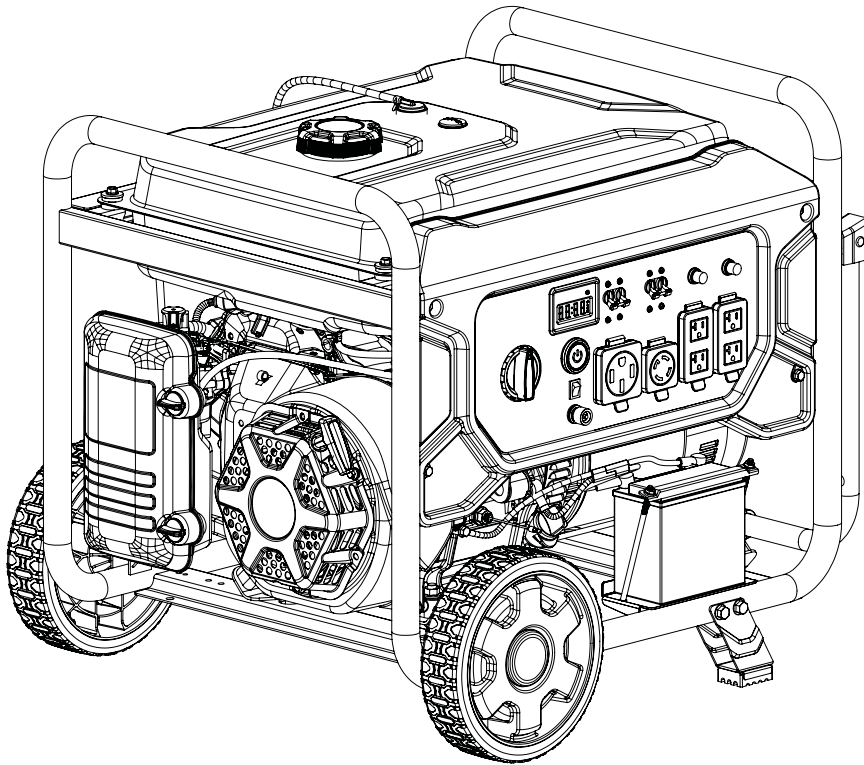

PARTS INFORMATION

11,000W WIRELESS REMOTE START GENERATOR

SERIAL NUMBER RANGE: ALL



To order replacement parts please visit:
shop.championpowerequipment.com
or call **1-877-338-0999**.

TABLE OF CONTENTS

Generator Parts Diagram	3
Generator Parts List	4
Engine Parts Diagram	5
Engine Parts List	6
Cylinder Head Parts Diagram	8
Cylinder Head Parts List	9
Carburetor Parts Diagram	10
Carburetor Parts List	11
Alternator Parts Diagram	12
Alternator Parts List	13
Fuel Tank Parts Diagram	14
Fuel Tank Parts List	15
Control Panel Parts Diagram	16
Control Panel Parts List	17
Frame Assembly Parts Diagram	18
Frame Assembly Parts List	19
Wiring Diagram	20

GENERATOR PARTS DIAGRAM

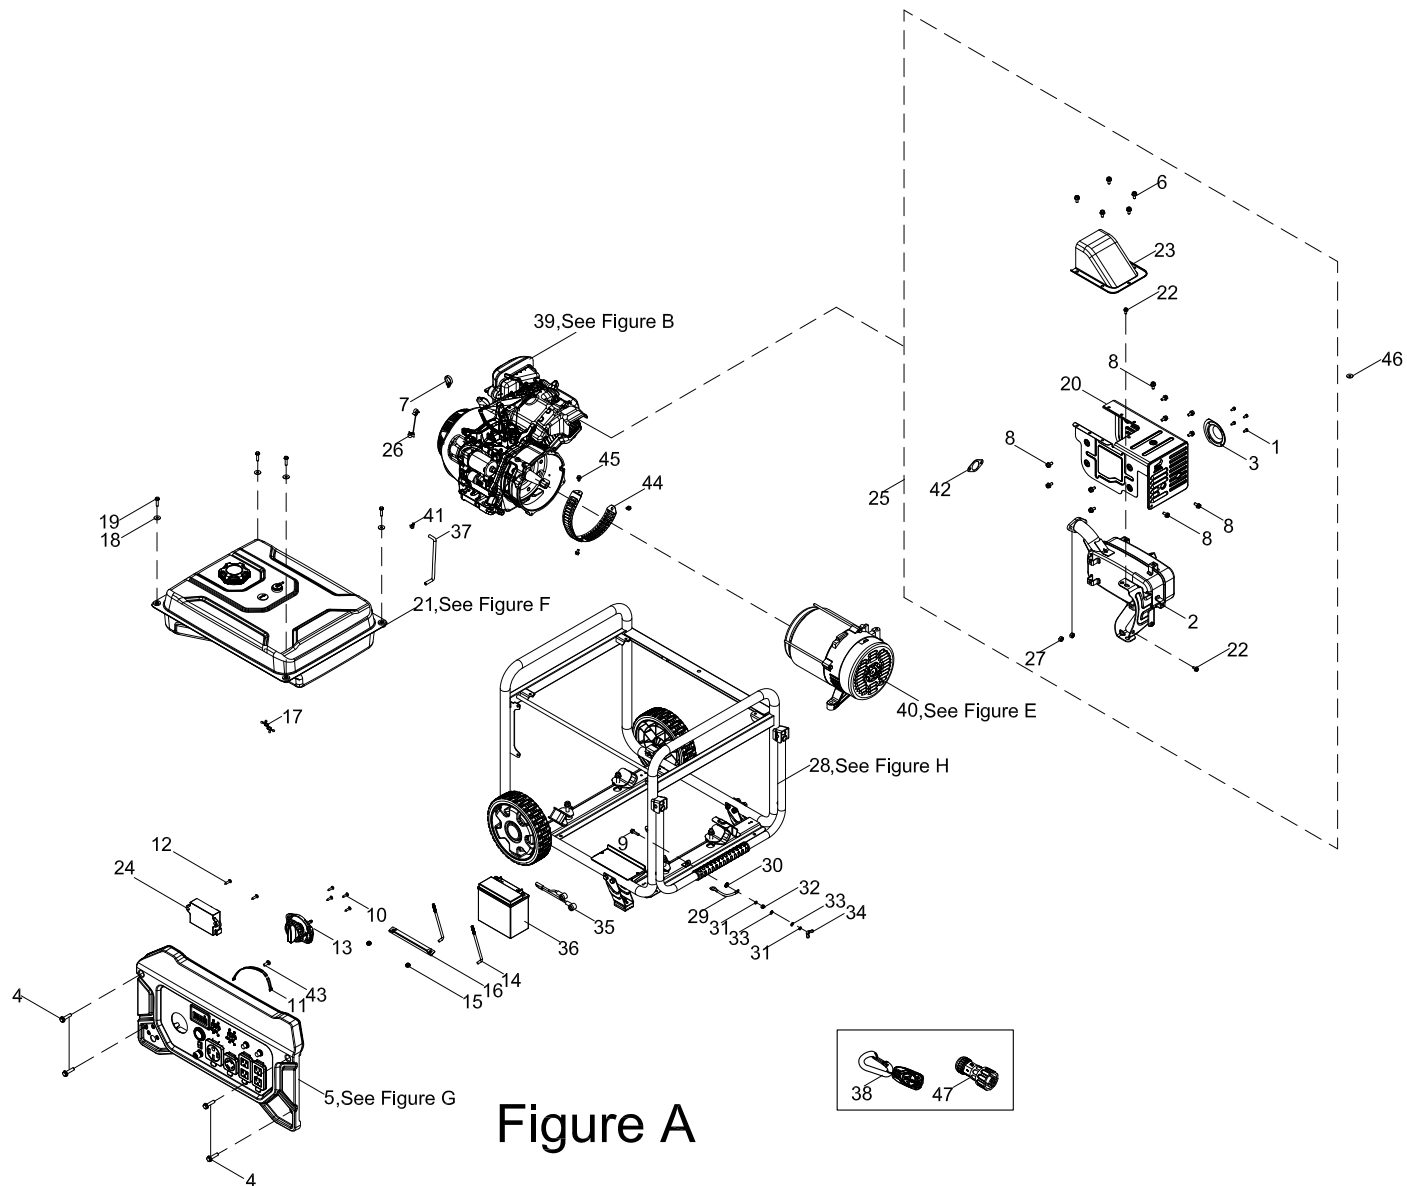


Figure A

GENERATOR PARTS LIST

#	Part Number	Description	Qty.
1	100762313-0002	Flange Bolt M5 x 8	4
2	100829305	Muffler	1
3	100714398	Spark Arrester Assembly	1
4	100011264-0002	Flange Bolt M6 x 16	4
5	100817859	Control Panel Assembly, See Figure G	1
6	100011261-0003	Flange Bolt M6 x 12	5
7	100060808	Clip	1
8	100097575-0001	Flange Bolt M6 x 10	11
9	100011269-0003	Bolt M6 x 28	1
10	100093250-0002	Self-tapping Screw ST4.8 x 20	4
11	100000563	Cable Ties	1
12	100032967-0002	Screw M4.2 x 16	2
13	100817861	Fuel Valve Assembly	1
14	100021362-0003	Fixing Bolt, Battery	2
15	100011452-0003	Flange Nut M6	2
16	100021372-0017	Pressing Plate, Battery	1
17	100714686	Clamp	1
18	100010439-0001	Washer	4
19	100011268-0002	Flange Bolt M6 x 25	4
20	100829306	Muffler Guard	1
21	100829817	Fuel Tank Assembly, See Figure F	1
22	100011311-0005	Flange Bolt M8 x 16	2
23	100829304-0001	Air Guide, Muffler	1
24	5.1830.022	CO Shutdown Module	1
25	100829819	Muffler Assembly	1
26	100000667	Clamp Ø8 x 8	1
27	100011422-0004	Flange Nut M8	2
28	100834626	Frame Assembly, See Figure H	1
29	100816086	Grounding Wire	1
30	100128826-0001	Lock Washer Ø6, Toothed	1

#	Part Number	Description	Qty.
31	100010886-0004	Spring Washer Ø6	2
32	100011421-0003	Flange Nut M6, GB6170	1
33	100010920-0002	Flat Washer Ø6	2
34	100010828-0002	Butterfly Type Nut M6	1
35	100752661	DC Wire Harness, Battery	1
36	100021409	Battery	1
37	100764317	Fuel Hose	1
38	100729547	Remote Control	1
39	1ZC7DC090	Engine, See Figure B	1
40	100829816	Alternator Assembly, See Figure E	1
41	100005148	Clamp 1, Ø8	1
42	100746075	Gasket, Exhaust Pipe	1
43	100011015-0001	Screw M4.2 x 12	1

ENGINE PARTS DIAGRAM

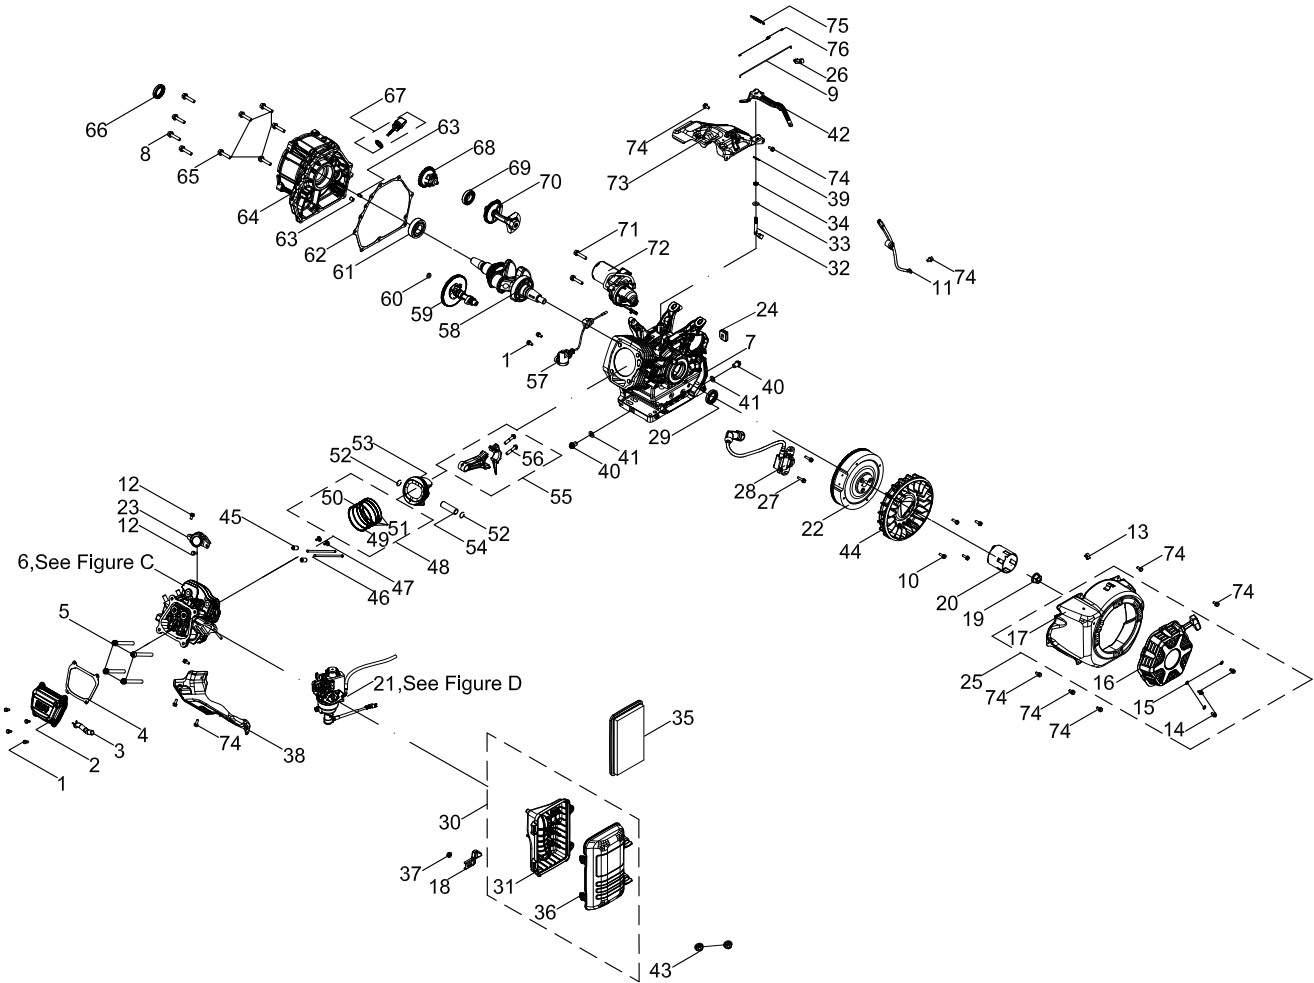


Figure B


ENGINE PARTS LIST

#	Part Number	Description	Qty.
1	100011264-0003	Flange Bolt M6 x 16, GB5789	6
2	100791722	Cylinder Head Cover	1
3	100806974	Breather Tube	1
4	100791822	Gasket, Cylinder Head Cover	1
5	100746630	Flange Bolt M10 x 1.25 x 87	4
6	100830272	Cylinder Head Assembly - See Figure C	1
7	100835318-0001	Crankcase	1
8	100831150-0001	Bolt, M10 x 1.25 x 32	4
9	100781151	Rod, Governor	1
10	100011265-0003	Bolt, M6 x 18	4
11	100752662	Battery Connecting Wire	1
12	100011262-0003	Bolt, M6 x 14	2
13	100000667	Clamp Ø8 x 8	1
14	100011565-0002	Flange Bolt M6 x 10, GB16674.1	3
15	100010920-0001	Washer Ø6	3
16	100715836-0002	Recoil Starter	1
17	100830380-0001	Fan Cover	1
18	100781165	Bracket, Air Cleaner Support	1
19	100011460-0001	Flange Nut M16 x 1.5	1
20	100007562	Pulley, Starter	1
21	100834454	Carburetor Assembly - See Figure D	1
22	100817796	Flywheel	1
23	100807345	Spark Plug Cap Support Board	1
24	100000676	Clip Base	1
25	100817797-0002	Recoil Starter Assembly	1
26	100090559	Clamp	1
27	100011269-0003	Bolt M6 x 28	2
28	100818056	Ignition Module	1
29	100017649	Oil Seal Ø35 x Ø52 x 7	1
30	100818304	Air Filter Assembly	1

#	Part Number	Description	Qty.
31	100819947	Air Filter Base	1
32	100781144	Governor Shaft	1
33	100031648-0001	Washer	1
34	100017631	Oil Seal Ø8 x Ø14 x 4	1
35	100731128	Air Filter Element	1
36	100805837	Air Filter Cover	1
37	100011452-0003	Flange Nut M6	1
38	100781145	Shroud	1
39	100007989	Cotter, Governor Shaft	1
40	100010275	Drain Bolt, M12 x 1.5 x 15	2
41	100010467	Washer Ø12 x 2 x Ø20	2
42	100781148	Arm, Governor	1
43	100741891-0001	Flange Nut M6, GB6183.1	2
44	100781152	Fan, Engine Cooling	1
45	100010562	Dowel Pin Ø12 x 20	2
46	100781118	Push Rod	2
47	100149154	Lifter, Valve	2
48	100802187	Piston Ring Set	1
49	100749928	1st Piston Ring	1
50	100805653	2nd Piston Ring	1
51	100749929	Oil Ring	1
52	100761491	Circlip, Wrist Pin	2
53	100806504	Piston	1
54	100758993	Wrist Pin	1
55	100781136	Connecting Rod Assembly	1
56	100003432	Bolt, Connecting Rod	2
57	100094024	Oil Level Sensor	1
58	100790407	Crankshaft	1
59	100812648	Camshaft	1
60	100010521-0001	Washer Ø16.2 x 0.3 x Ø24	1

#	Part Number	Description	Qty.
61	100781143	Bearing	1
62	100833500	Gasket, Crankcase Cover	1
63	100010549	Dowel Pin Ø8 x 12	2
64	100809414-0001	Cover, Crankcase	1
65	100775432-0001	Flange Bolt M8 x 32	5
66	100017653	Oil Seal Ø35 x Ø52 x 7, Spiral Grain	1
67	100004129-0008	Oil Dipstick Assembly	1
68	100008305	Gear, Governor	1
69	100751836-0001	Bearing TM6202E-P5	1
70	100781133	Balance Shaft	1
71	100011320-0002	Flange Bolt M8 x 35	2
72	100817799	Starter	1
73	100817798	Air Guide, Engine Fan	1
74	100011261-0004	Flange Bolt M6 x 12, GB5789	11
75	100821553	Spring, Governor	1
76	100007927	Spring, Throttle Return	1

CYLINDER HEAD PARTS DIAGRAM

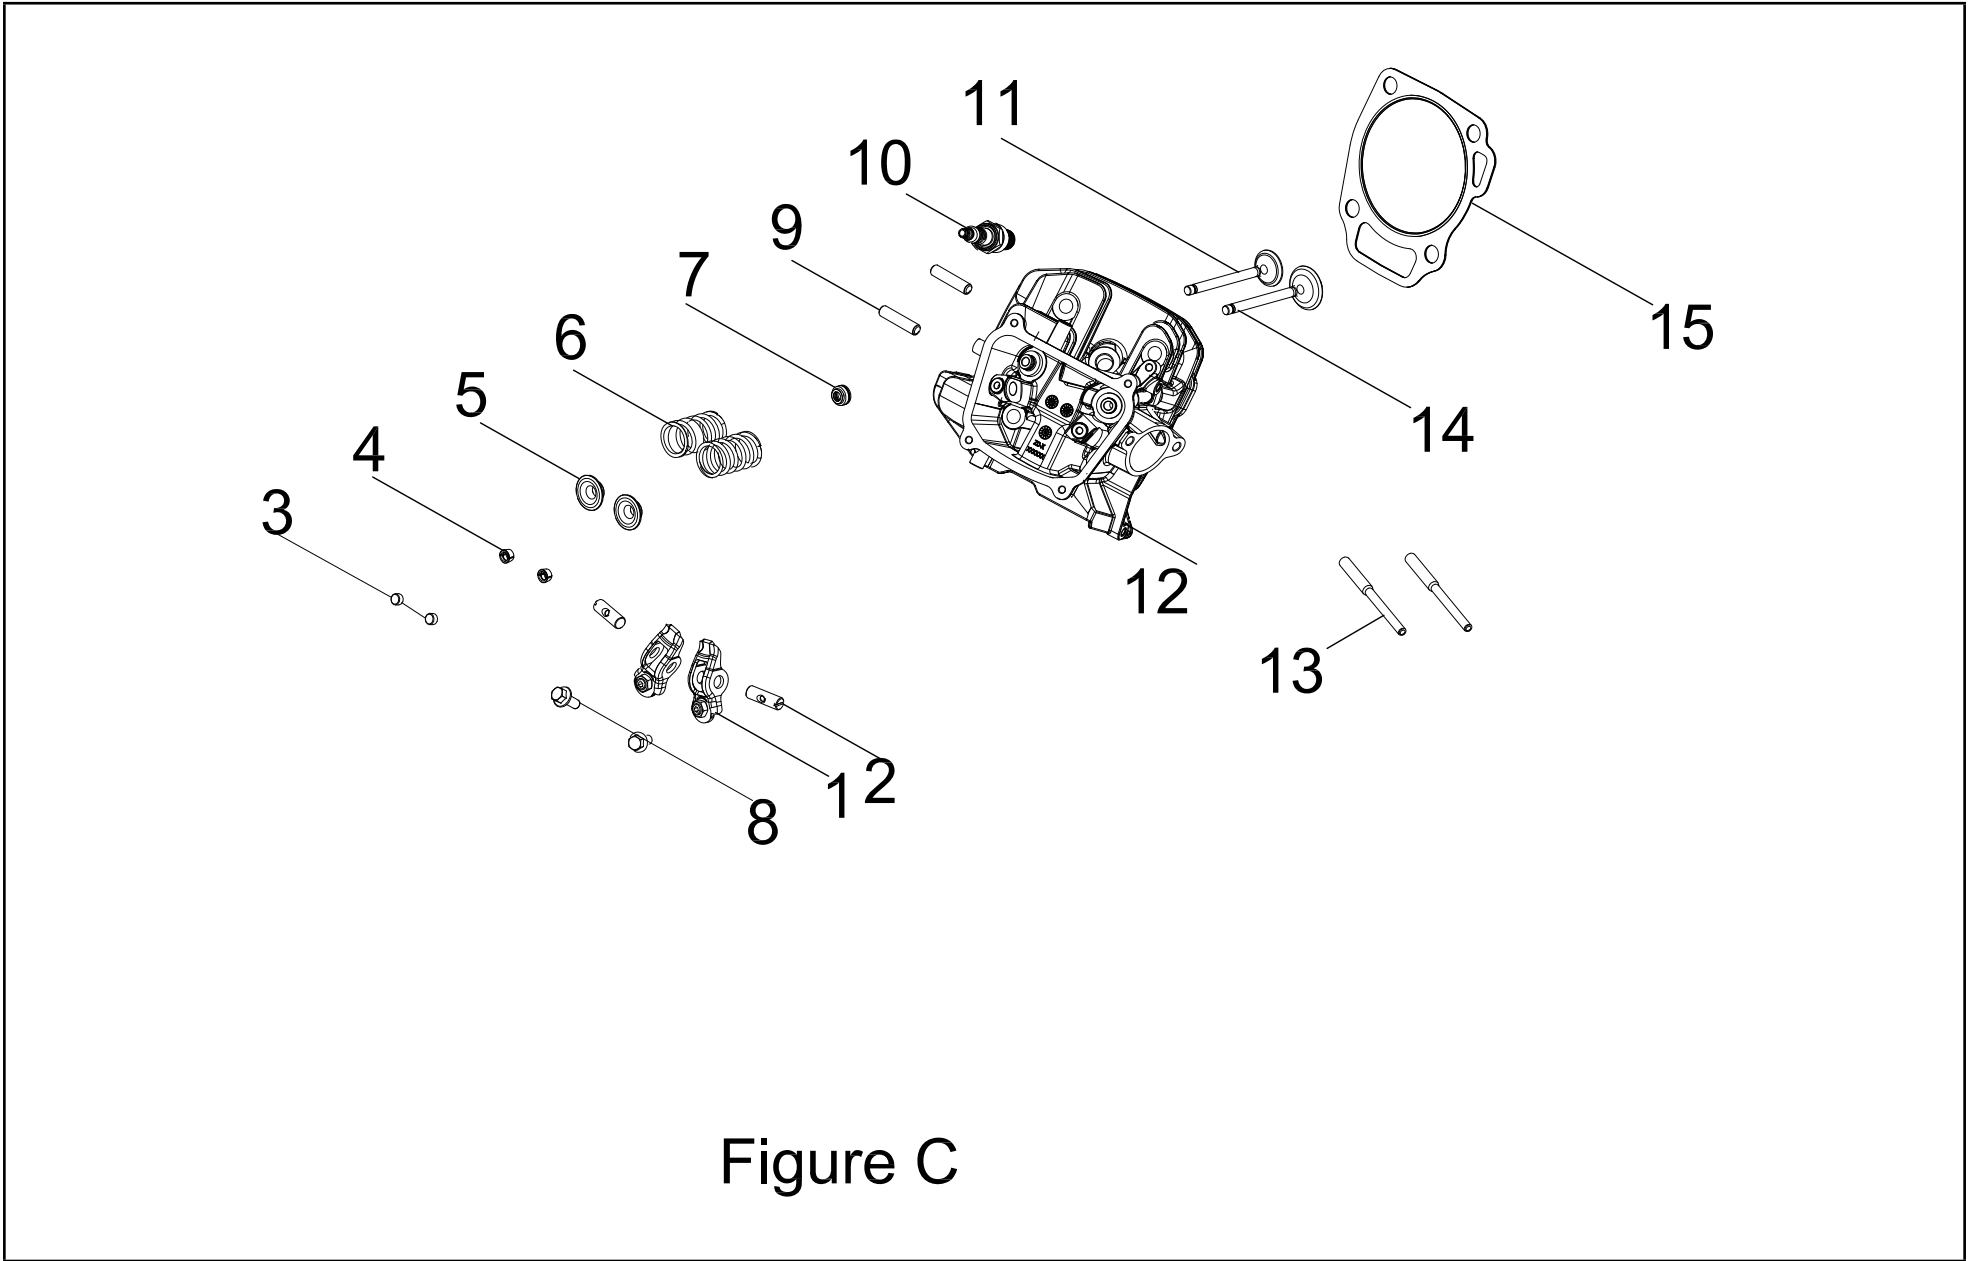

CYLINDER HEAD PARTS LIST

#	Part Number	Description	Qty.
1	100728722	Rocker Arm Assembly	2
2	100765720	Rocker Arm Shaft	2
3	100004589	Retainer, Valve	2
4	100004576	Valve Collet	4
5	100004516	Valve Spring Seat, Upper	2
6	100067633	Spring, Valve	2
7	100004602	Oil Seal, Intake Valve	1
8	100011518-0001	Bolt M5 x 12	2
9	100751575	Stud Bolt M8 x 35	2
10	100009378	Spark Plug	1
11	100728728	Exhaust Valve	1
12	100811060	Cylinder Head	1
13	100055094-0001	Stud Bolt M6-8 x 108	2
14	100728727	Intake Valve	1
15	100781146	Gasket, Cylinder Head	1

CARBURETOR PARTS DIAGRAM

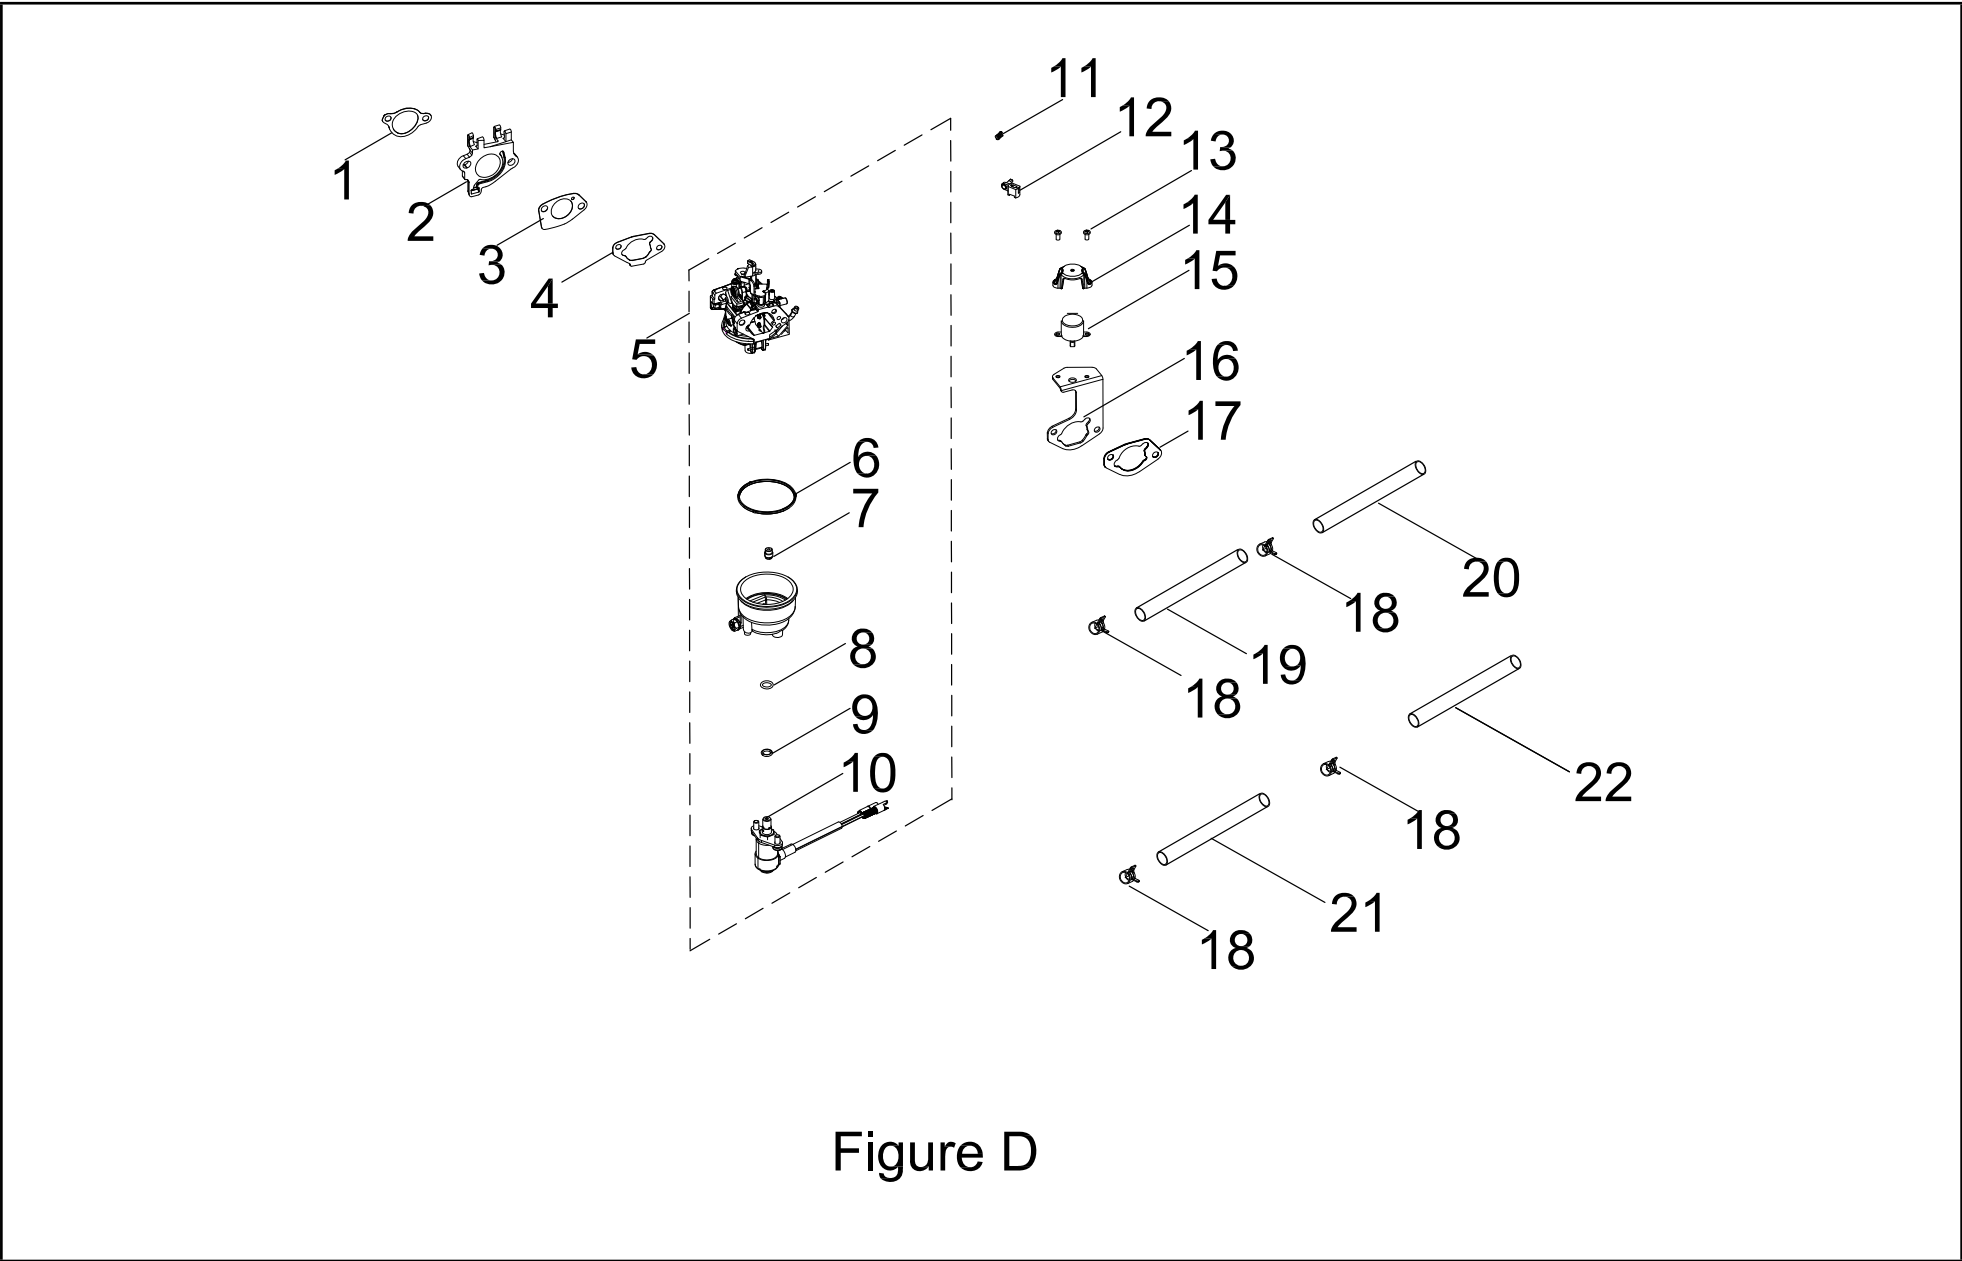


Figure D

CARBURETOR PARTS LIST

#	Part Number	Description	Qty.
1	100728730	Gasket, Insulator	1
2	100731226	Insulator, Carburetor	1
3	100076228	Gasket, Carburetor	1
4	100820369	Gasket	1
5	100817802	Carburetor Assembly	1
6	100085766	Fuel Bowl O-Ring	1
7	100757683	Main Jet Standard	1
	100757915	Main Jet Altitude 1000-3000m	/
8	100134226	O-Ring, Solenoid Valve Base	1
9	100134227	O-Ring, Solenoid Valve	1
10	100817983	Solenoid Valve	1
11	100052405	Spring	1
12	100041167	Guide Clamp	1
13	100060638-0001	Screw	2
14	100060473	Stepping Motor Cover	1
15	100753435	Stepping Motor	1
16	100821030	Stepping Motor Base	1
17	100820370	Gasket, Air Filter	1
18	100005149	Clamp Ø7.5	4
19	100747744	Fuel Tube	1
20	100817404	Fuel Hose Jacket 1	1
21	100834311	Fuel Tube 1	1
22	100764320	Fuel Hose Jacket	1

ALTERNATOR PARTS DIAGRAM

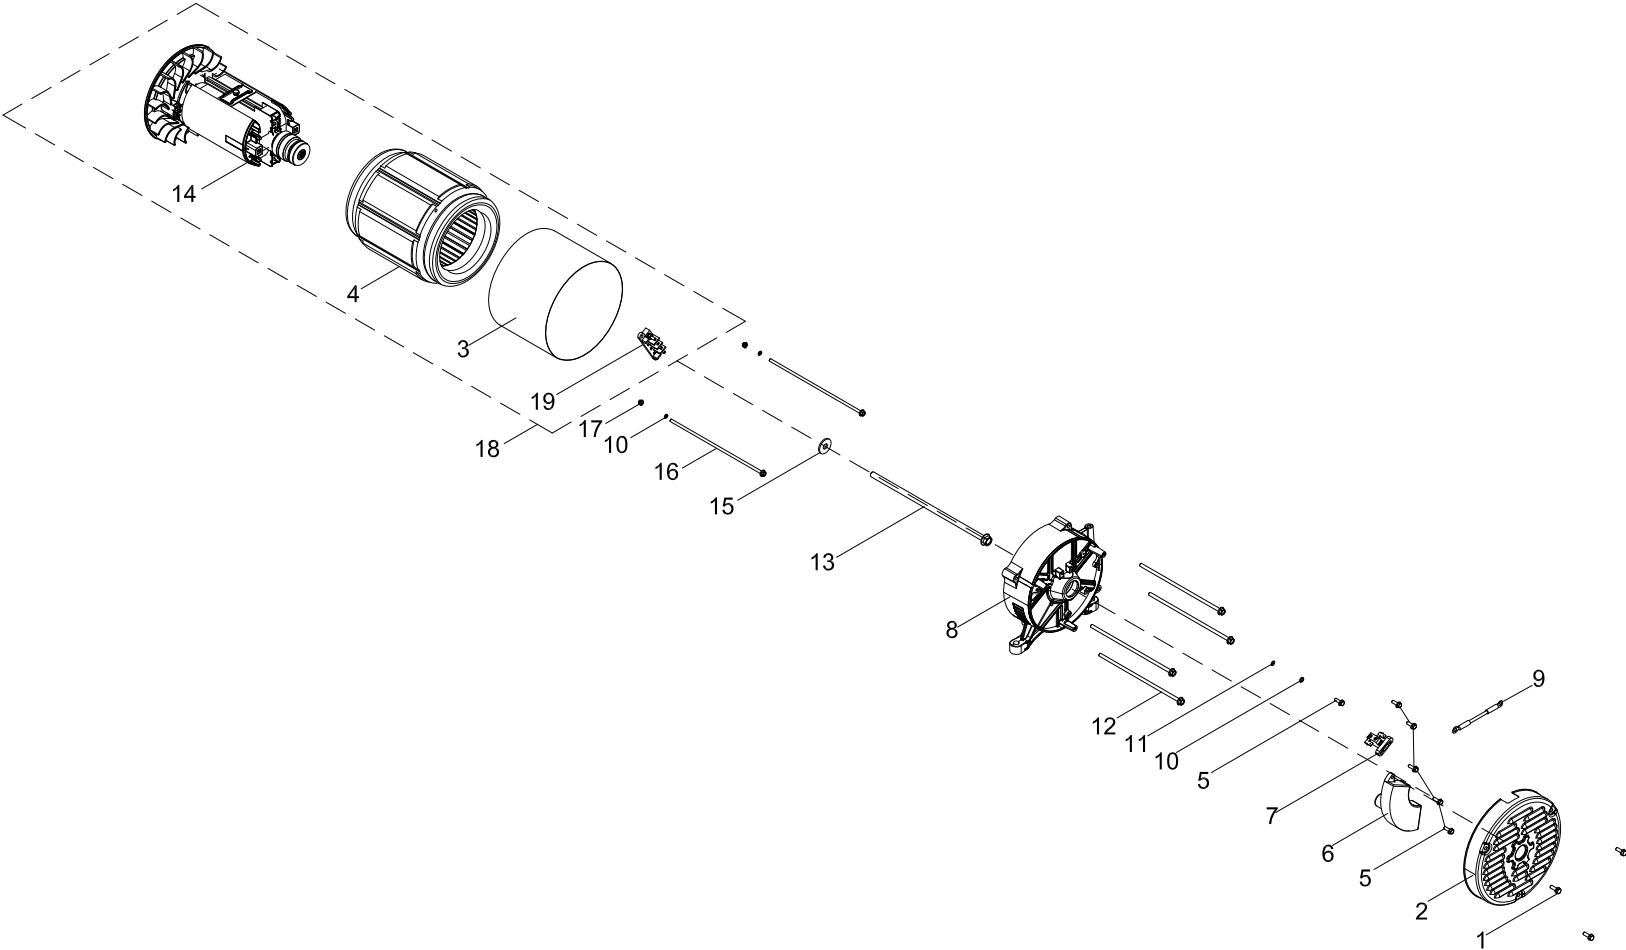


Figure E

ALTERNATOR PARTS LIST

#	Part Number	Description	Qty.
1	100011250-0002	Flange Bolt M5 x 14	3
2	100816088-0001	Generator End Cover	1
3	100829360	Stator Cover	1
4	100829358	Stator Assembly	1
5	100011252-0001	Flange Bolt M5 x 18	6
6	100820388	AVR	1
7	100018595	Carbon Brush Assembly	1
8	100814369	End Housing	1
9	100816087	Grounding Wire	1
10	100010885-0004	Spring Washer Ø5	3
11	100010919-0002	Flat Washer Ø5	1
12	100011305-0001	Flange Bolt M6 x 200	4
13	100122173-0001	Flange Bolt M10 x 1.25 x 300	1
14	100829359	Rotor Assembly	1
15	100010905-0001	Washer Ø10	1
16	100011415-0003	Flange Bolt M5 x 235	2
17	100011419-0001	Flange Nut M5	2
18	100816113	Alternator Assembly	1
19	100818549	Terminal Block	1

FUEL TANK PARTS DIAGRAM

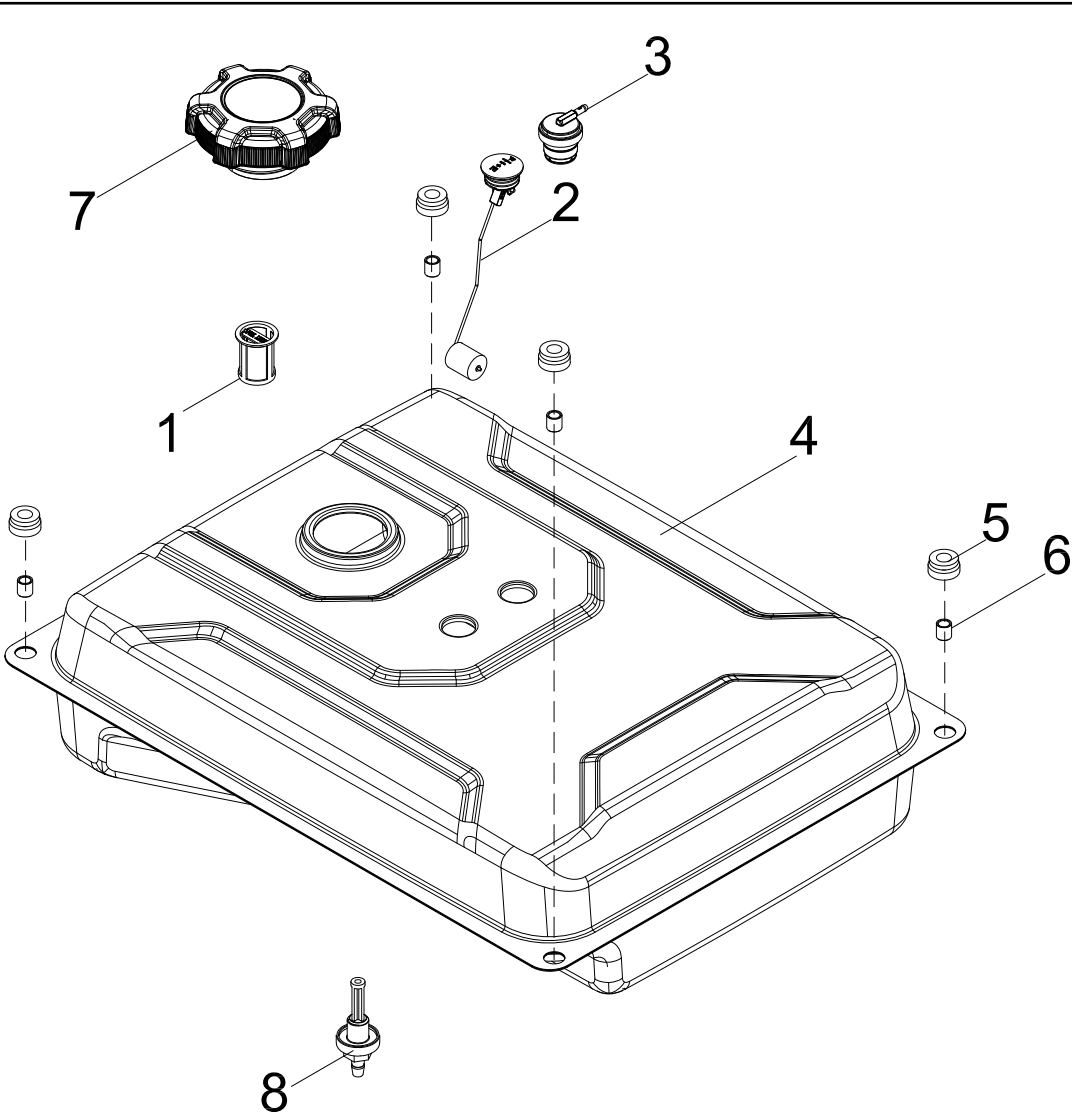


Figure F

FUEL TANK PARTS LIST

#	Part Number	Description	Qty.
1	100098838	Fuel Filter Assembly	1
2	100771451	Fuel Gauge	1
3	100829853	Reversal Valve	1
4	100766684-0001	Fuel Tank	1
5	100032369	Vibration Mounting, Fuel Tank	4
6	100021118	Bushing, Ø12 x Ø9 x 13	4
7	100142004	Fuel Tank Cap	1
8	100714546	Fuel Tank Nipple	1

CONTROL PANEL PARTS DIAGRAM

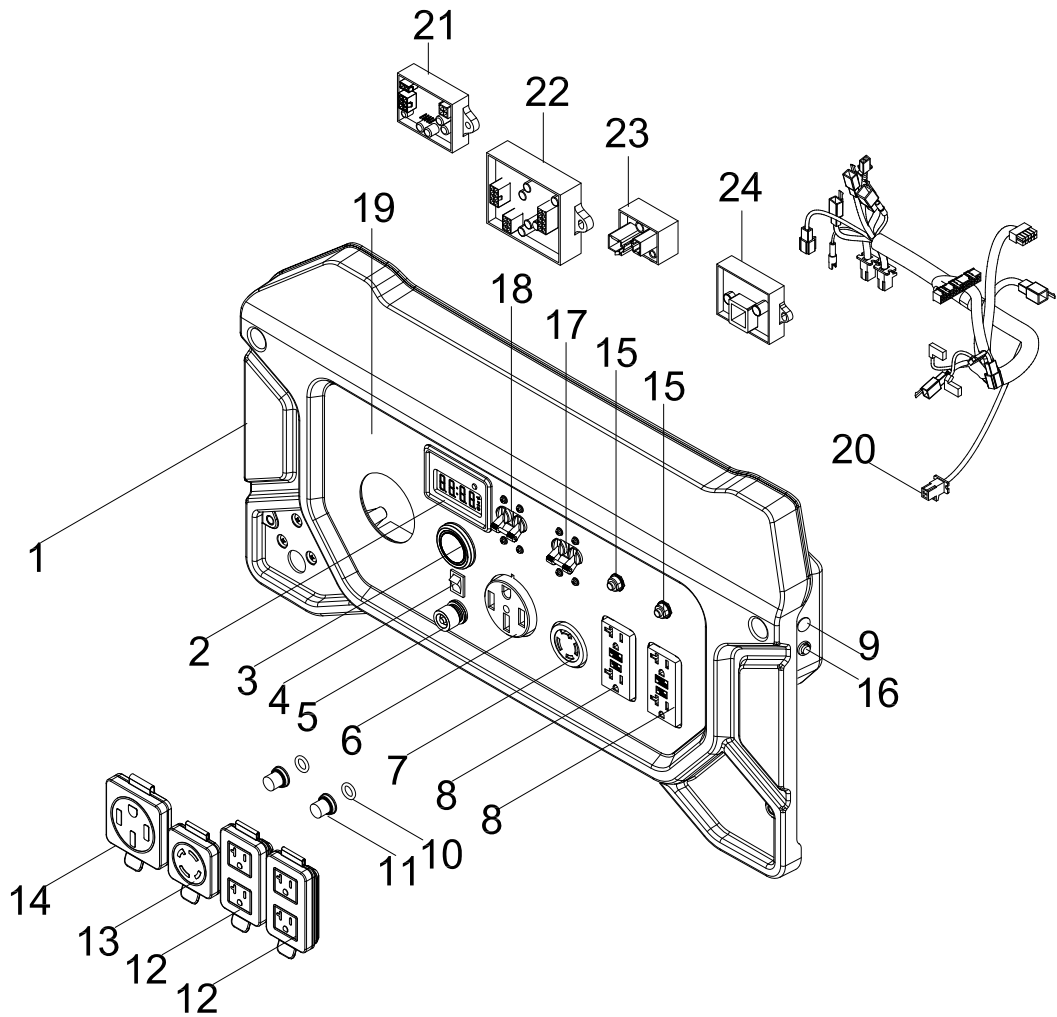


Figure G

CONTROL PANEL PARTS LIST

#	Part Number	Description	Qty.
1	100815382-0001	Control Panel Housing	1
2	100730999	Intelligauge	1
3	100822827	Push-Button Start	1
4	100831371	Stop Switch	1
5	100822313	Receptacle	1
6	100087040	Receptacle 14-50R	1
7	100020023	Receptacle L14-30R	1
8	100052461-0001	Receptacle 5-20R, GFCI Duplex	2
9	100021445	Remote Indicator	1
10	100031552	O-Ring	2
11	100120180	Breaker Cover	2
12	100731574	Receptacle Cover, 5-20R, GFCI Duplex	2
13	100731571	Receptacle Cover, L14-30R	1
14	100731570	Receptacle Cover, 14-50R	1
15	100019754	20 Amp Circuit Breaker, Push Button	2
16	100021446	Learning Button	1
17	100019957	30 Amp Circuit Breaker, Double Pole	1
18	100829538	45.8 Amp Circuit Breaker, Double Pole	1
19	100820380	Control Box	1
20	100833469	Wire Harness Assembly	1
21	100813542	Charger	1
22	100822788	Integrated Controller	1
23	100728386	Overvoltage Protector	1
24	100822312	Charger 1	1

FRAME ASSEMBLY PARTS DIAGRAM

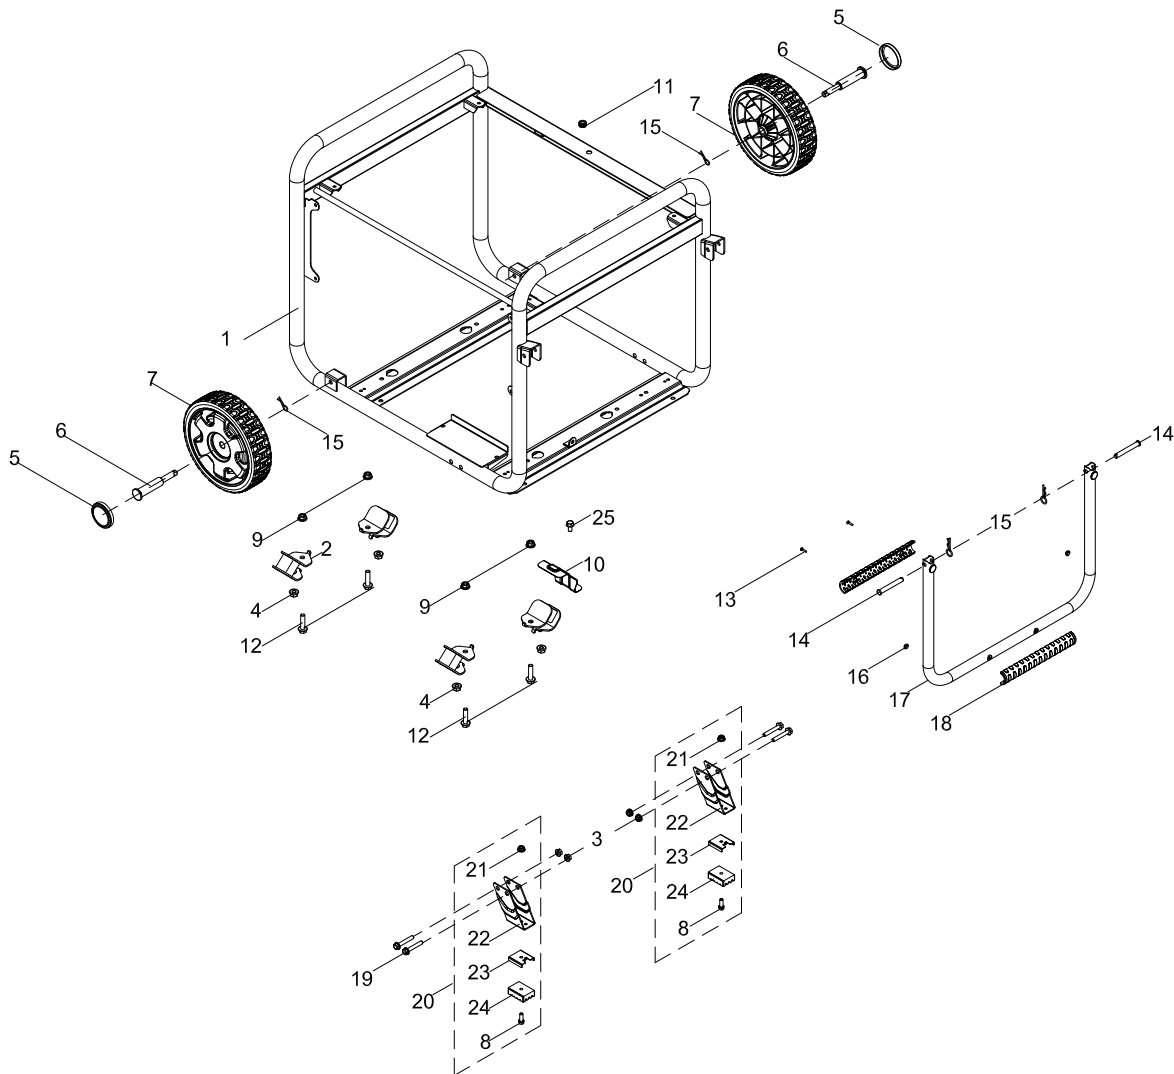


Figure H

FRAME ASSEMBLY PARTS LIST

#	Part Number	Description	Qty.
1	100828891-0001	Frame	1
2	100735650	Vibration Mount	4
3	100011453-0002	Flange Nut M8	4
4	100011453-0003	Flange Nut M8, GB6177.1	4
5	100712243-0001	Cover, Wheel	2
6	100714025	Roll Pin Ø10	2
7	100163346-0001	9.5 In. Wheel	2
8	100011266-0004	Flange Bolt M6 x 20	2
9	100011456-0003	Flange Nut M10 x 1.25	4
10	100732431	Heat Shield	1
11	100009075	Rubber Damper	1
12	100011381-0002	Flange Bolt M10 x 1.25 x 40	4
13	100095857-0005	Flange Bolt M4 x 18	2
14	100011049-0001	Roll Pin	2
15	100714685-0001	R-pin, R5	4
16	100078853	Damping Pad, Handle	2
17	100815384-0001	Handle	1
18	100711157	Grip, Handle	1
19	100011330-0001	Flange Bolt M8 x 48	4
20	100163347-0001	Support Leg Assembly	2
21	100011452-0003	Flange Nut M6	2
22	100711874-0001	Support Leg	2
23	100068623-0001	Stop Block	2
24	100058956	Vibration Mount, Support Leg	2
25	100031967-0007	Big Flange Bolt M6 x 16	1

WIRING DIAGRAM

