


Starting Generator Without Keys (338cc Engines or Larger)



This bulletin covers the following Champion Power Equipment models (*Note: Read instructions completely before performing service*):

- **All Champion Power Equipment products equipped with electric key start.**


- 1) Standing on the panel side (outlet side) of the generator, locate the group of wires directly under the Ignition switch. You will see Black, Yellow, Green and Brown wires.

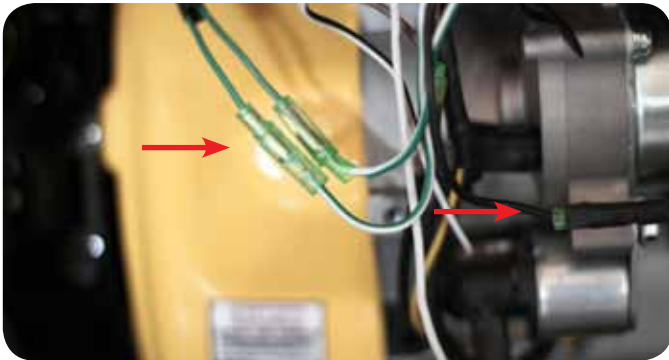

- 2) Locate the Black wire with a soft Black rubber covering on the connection point. This is for the Ignition system and is a grounding function wire. Unplug this connection.

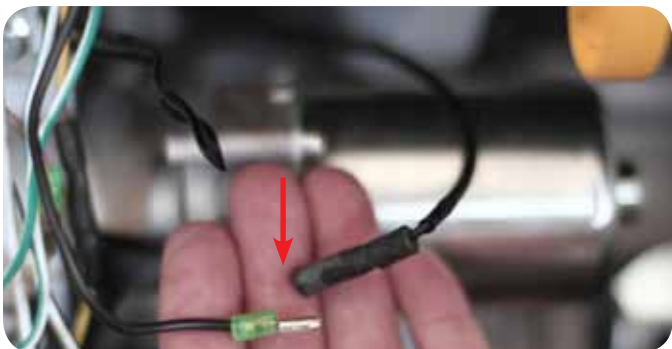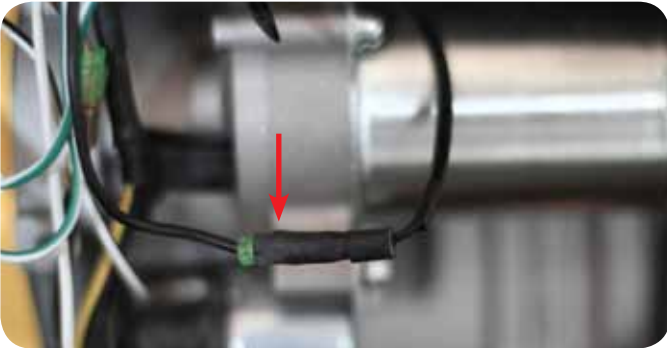

- 3) Next you will locate a single black harness that has two Green wires inside the loom. Each green wire will have either a black or white stripe on the green insulation covering the wire. Unplug either green wire. **Only one of them is necessary.**

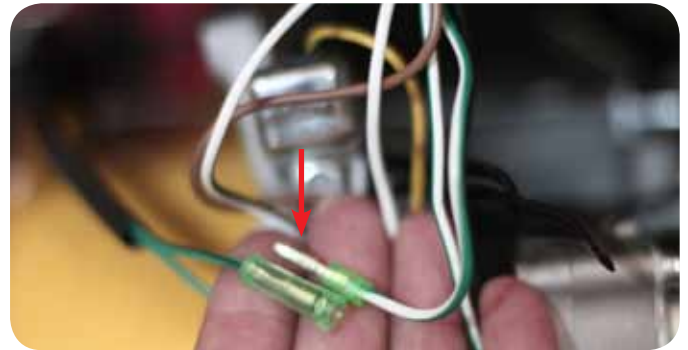

- 4) At this point you will be able to manually start the generator with the recoil starter. One choke pull of the rope and then up to 3 pulls without any choke before choking again. Repeated choking is counter productive to an effective starting of the engine.
- 5) When you need to shut the engine down, you can plug either of the previously unplugged wires, or you can Choke the engine off with the choke lever.
- 6) For additional help or **TO OBTAIN A NEW KEY** call the Customer Service phone number listed below.
- 7) Once you obtain a new key, then re-connect the two wires disconnected in steps 2 and 3, and the generator will start normally.

If you have any questions, please contact us at:

Champion Power Equipment, Inc.

Customer Service

10006 Santa Fe Springs Rd.

Santa Fe Springs, CA 90670

www.championpowerequipment.com

Technical Service

Mon – Fri 8:30 AM – 5:00 PM (PST/PDT)

Toll Free: 1-877-338-0999

tech@championpowerequipment.com