




Champion Power Equipment, Inc., Santa Fe Springs, CA USA

MODEL #201054

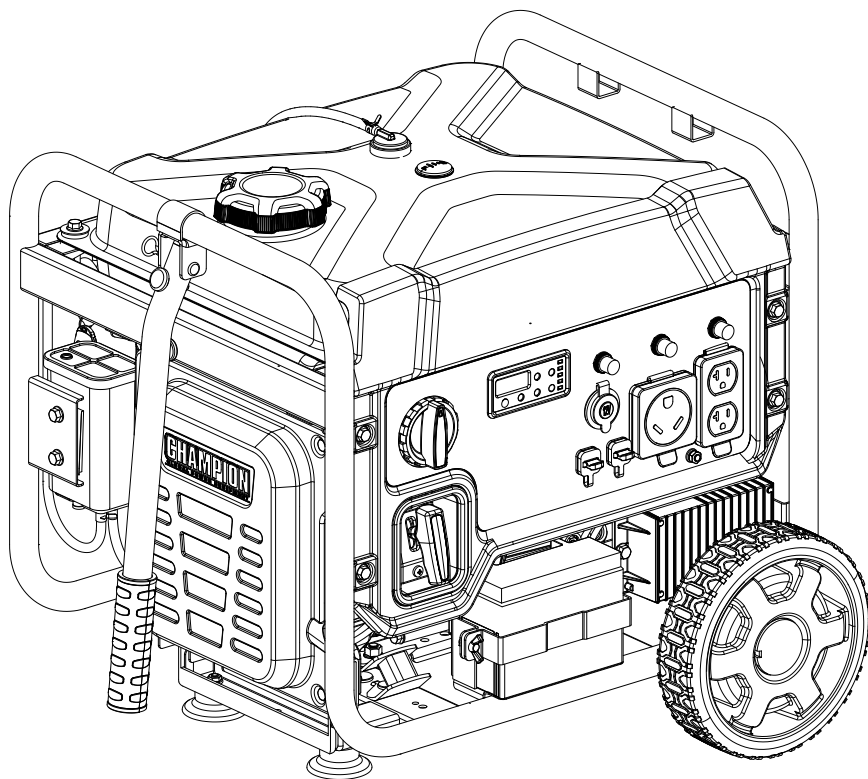

PARTS INFORMATION

4500W WIRELESS START OPEN FRAME INVERTER

SERIAL NUMBER RANGE: ALL



To order replacement parts please visit:
shop.championpowerequipment.com
or call **1-877-338-0999**.

TABLE OF CONTENTS

Inverter Parts Diagram 3

Inverter Parts List 4

Engine Parts Diagram 6

Engine Parts List 7

Cylinder Head Part Diagram 9

Cylinder Head Part List 10

Carburetor Part Diagram 11

Carburetor Part List 12

Fuel Tank Part Diagram 13

Fuel Tank Part List 14

Control Panel Part Diagram 15

Control Panel Part List 16

Frame Assembly Part Diagram 17

Frame Assembly Part List 18

Wiring Diagram 19

INVERTER PARTS DIAGRAM

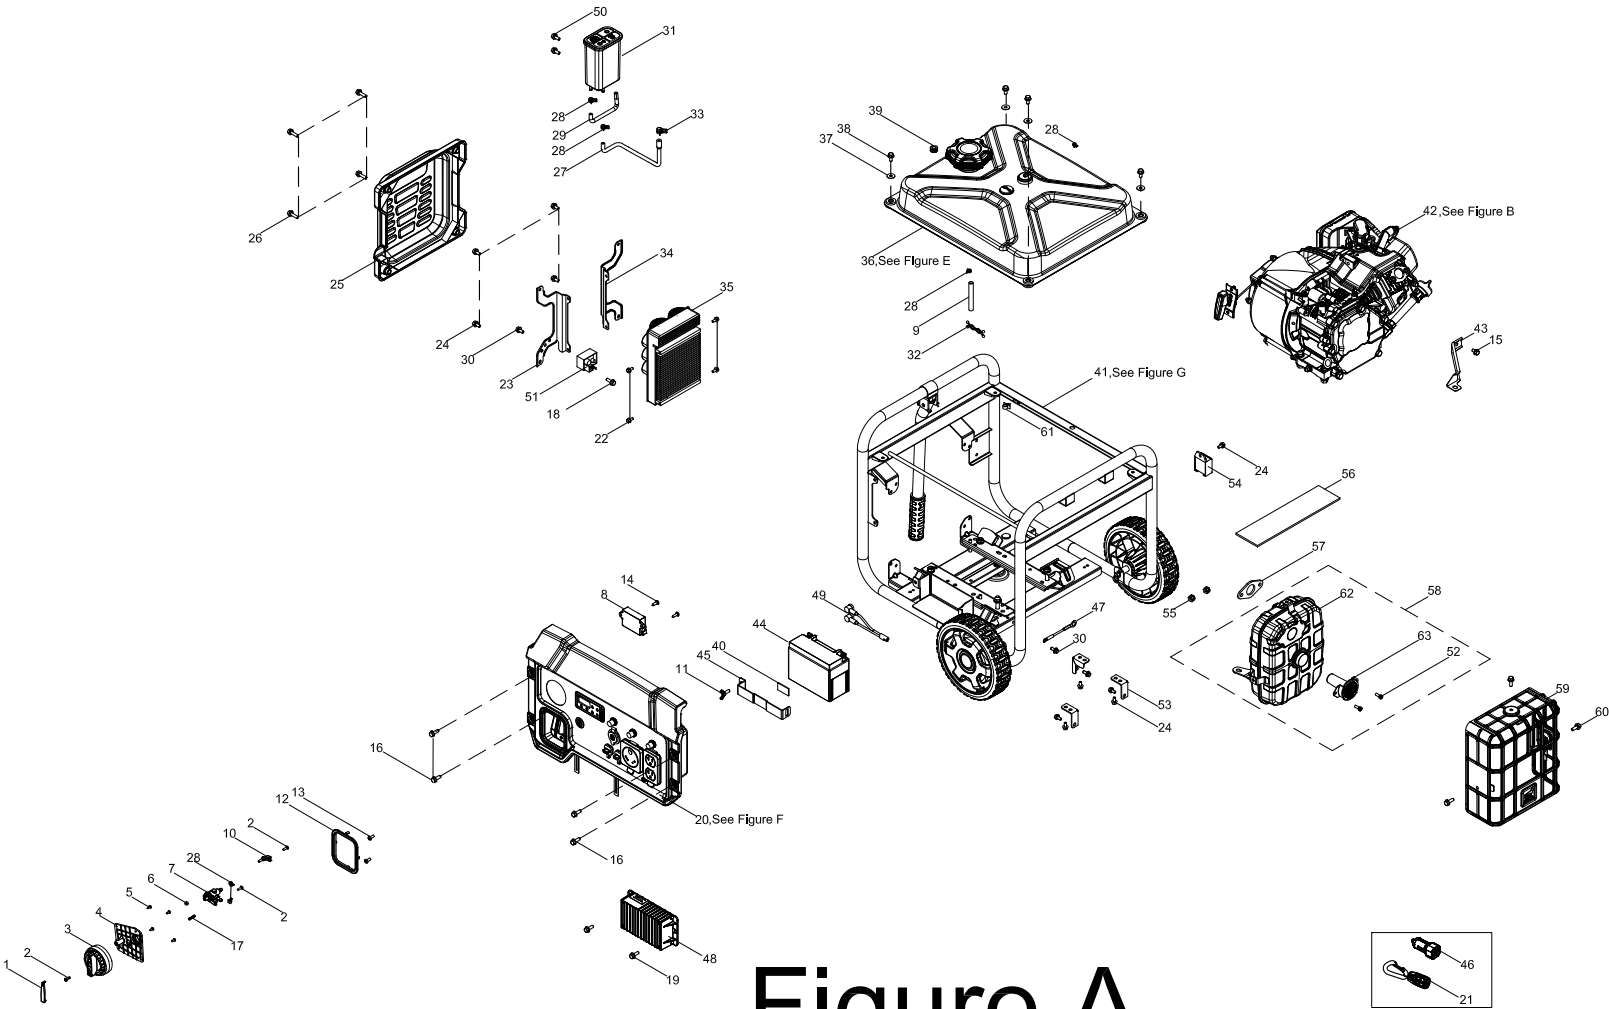


Figure A

INVERTER PARTS LIST

#	Part Number	Description	Qty.
1	100712234	Cover, Dial Knob	1
2	100031845-0002	Screw M4 x 12	3
3	100725108	Fuel Dial	1
4	100725109	Mounting Seat, Fuel Dial	1
5	100032963-0003	Self-tapping Screw ST3.5 x 13	4
6	100725112	Slide Block, Fuel Switch	1
7	100728457	Fuel Valve	1
8	5.1830.022	CO Shutdown Module	1
9	100730997	Fuel Tube, Ø4 x Ø8 x 255	1
10	100725113	Stopper, Fuel Dial	1
11	100090978	Butterfly Type Bolt M6 x 16	1
12	100725010	Deco Trim, Recoil	1
13	100010954-0001	Screw M5 x 12	2
14	100011002-0003	Self-tapping Screw ST4.2 x 19	2
15	100055592-0005	Flange Bolt M6 x 10, GB16674	1
16	100011264-0002	Flange Bolt M6 x 16	4
17	100725111	Spring, Fuel Dial	1
18	100011264-0003	Flange Bolt M6 x 16, GB5789	1
19	100011263-0002	Flange Bolt M6 x 15	2
20	100725250-0001	Panel Assembly, See Figure F	1
21	100729547	Remote Control	1
22	100011518-0001	Flange Bolt M5 x 12	4
23	100725872	Bracket, Inverter Module, Right	1
24	100011261-0004	Flange Bolt M6 x 12	11
25	100725013	Protective Cover, Inverter Module	1
26	100011266-0003	Flange Bolt M6 x 20	4
27	100726330	Vent Tube, Long	1
28	100005148	Clamp Ø8	6
29	100725015	Vent Tube, Short	1
30	100011260-0005	Flange Bolt M6 x 10, GB5789	2

#	Part Number	Description	Qty.
31	100157588	Carbon Canister, 320 cc	1
32	100000658	Clamp	1
33	100005159	Clamp Ø10.5 x 8	1
34	100725861	Bracket, Inverter Module, Left	1
35	100731716	Inverter Module, 120V 60Hz	1
36	100735082	Fuel Tank Assembly, See Figure E	1
37	100010437-0001	Washer Ø6.5 x 1.5 x Ø18.2	4
38	100011267-0002	Flange Bolt M6 x 22	4
39	100009075	Sheath, Vent Tube	1
40	100143536	Rubber Mat	1
41	100730439	Frame Assembly - See Figure G	1
42	1ZC7DFN16	Engine, 224 cc, See Figure B	1
43	100158476	Holder, Air Cleaner	1
44	100021402	Battery, 12V 7Ah	1
45	100041264-0003	Pressing Plate, Battery	1
46	100155005	12VDC USB Adapter	1
47	100729994	Grounding Wire	1
48	100727488	Electric Starter Module	1
49	100727487	DC Wire Harness, Battery	1
50	100011260-0003	Flange Bolt M6 x 10	2
51	100124562-0001	Charger Module	1
52	100718327	Mounting Bolt, Spark Arrester	2
53	100725011	Shipping Bracket	3
54	100713834	Rectifier Bridge, Capacitance	1

#	Part Number	Description	Qty.
55	100011422-0004	Flange Nut M8, GB6170	2
56	100726331	Insulation Foam	1
57	100058175	Gasket, Muffler, Graphite	1
58	100151975	Muffler Subassembly	1
59	100142015-0001	Muffler Cover	1
60	100097575-0002	Flange Bolt M6 x 10, QC340	3
61	100000667	Clamp Ø8 x 8	1
62	100151976	Muffler	1
63	100154368	Spark Arrester Assembly	1

ENGINE PARTS DIAGRAM

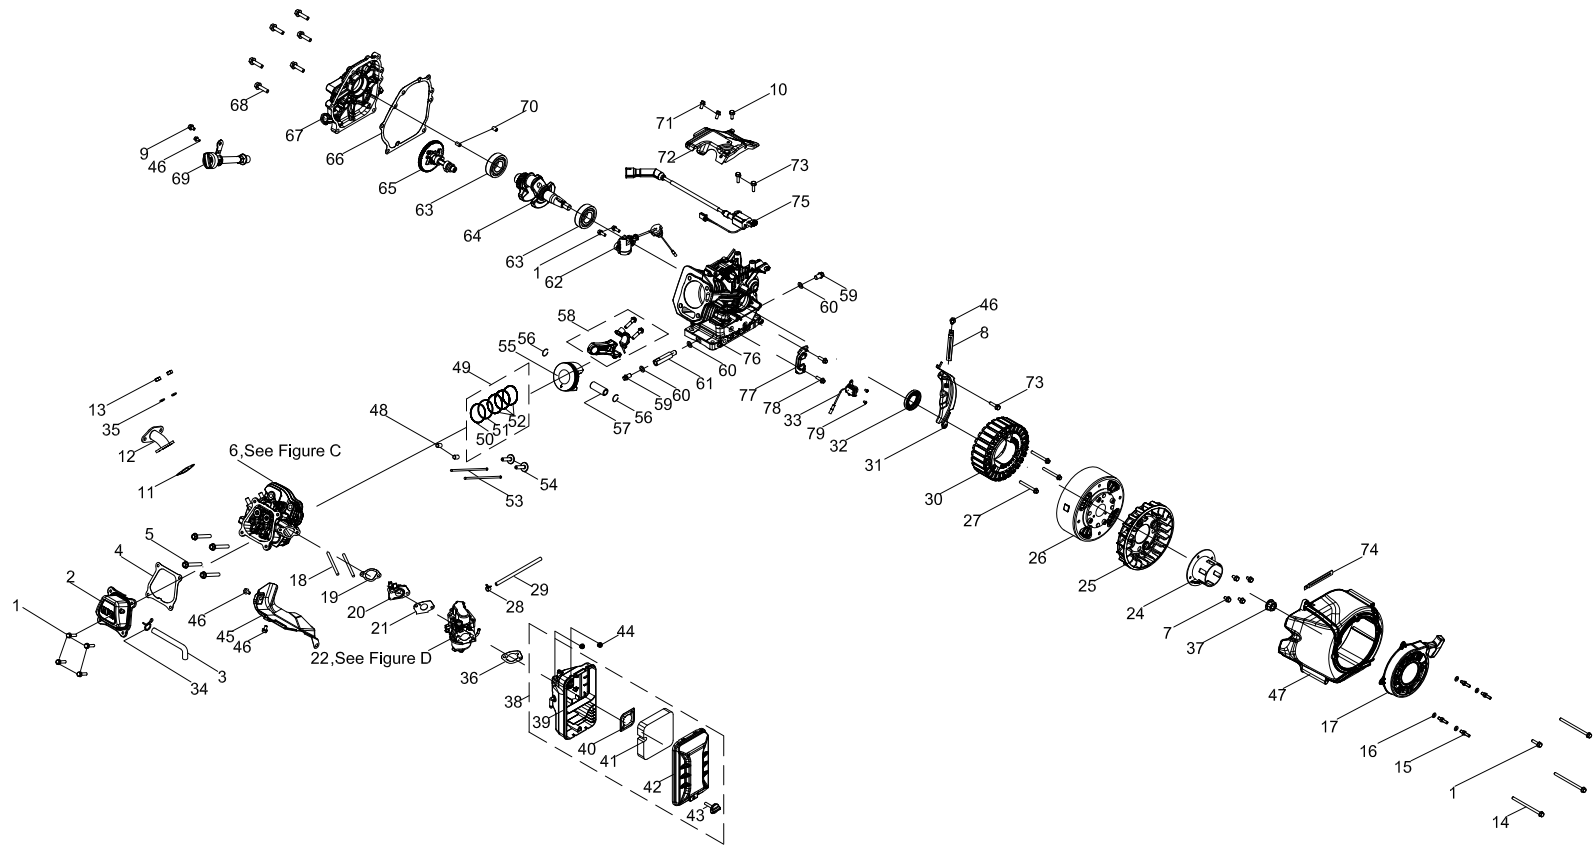


Figure B

ENGINE PARTS LIST

#	Part Number	Description	Qty.
1	100011264-0003	Flange Bolt M6 x 16, GB5789	7
2	100002335	Cylinder Head Cover(Cpe)	1
3	100713739	Breather Tube	1
4	100066138	Gasket, Cylinder Head Cover	1
5	100002464-0001	Flange Bolt M8 x 60	4
6	100159588	Cylinder Head Assembly, See Figure C	1
7	100011581-0001	Flange Bolt M6 x 14	4
8	100062546	Wire Clip B 1	1
9	100011263-0002	Flange Bolt M6 x 15	1
10	100055588-0006	Flange Bolt M6 x 20, GB16674	1
11	100006526	Gasket, Muffler	1
12	100142016	Exhaust Pipe	1
13	100011422-0004	Flange Nut M8, GB6170	2
14	100011284-0003	Flange Bolt M6 x 100	3
15	100135072	Flange Bolt M6	4
16	100010894	Washer Ø6	4
17	100724977-0001	Recoil Starter	1
18	100061091	Stud Bolt M6 x 98	2
19	100078607	Gasket, Insulator	1
20	100122101	Insulator, Carburetor	1
21	100078606	Gasket, Carburetor	1
22	100732017	Carburetor Assembly, See Figure D	1
23	100051029-0004	Screw M4 x 6	2
24	100724985	Pulley, Starter	1
25	100087582	Fan, Engine Cooling	1
26	100126953	Rotor Assembly, Permanent Magneto, Ø180 x 64 mm	1
27	100011540-0007	Flange Bolt M6 x 50	3
28	100005148	Clamp	1
29	100730998	Fuel Tube, Ø4 x Ø8 x 350	1

#	Part Number	Description	Qty.
30	100727489	Stator Assembly, Ø156 x35 mm	1
31	100130948	Lower Guard	1
32	100017644	Oil Seal Ø25 x Ø41.25 x 6	1
33	100727615	Trigger	1
34	100005152	Clamp Ø11.5	1
35	100010887-0004	Spring Washer Ø8	2
36	100005629	Gasket 2, Carburetor	1
37	100011459-0003	Flange Nut M14 x 1.5	1
38	100731202	Air Cleaner Assembly	1
39	100731587	Air Cleaner Base	1
40	100005078	Air Cleaner Baffle	1
41	100004771	Air Cleaner Element	1
42	100717012	Air Cleaner Cover	1
43	100004949	Air Cleaner Bolt	1
44	100011463-0002	Flange Nut M6	2
45	100007083	Air Guide, Lower	1
46	100011260-0005	Flange Bolt M6 x 10	4
47	100724983-0001	Fan Cover	1
48	100010558	Dowel Pin Ø10 x 16	2
49	100003243	Piston Ring Set	1
50	100072134	1st Piston Ring	1
51	100072135	2nd Piston Ring	1
52	100072136	Oil Ring	1
53	100149269	Push Rod	2
54	100149234	Lifter, Valve	2
55	100003086	Piston	1
56	100003221	Circlip, Wrist Pin	2
57	100003123	Wrist Pin	1
58	100003446	Connecting Rod	1
59	100010272	Drain Bolt, M10 x 1.25 x 15	2

#	Part Number	Description	Qty.
60	100010459	Washer Ø10 x 1.5 x Ø16	3
61	100002910-0001	Oil Drain Pipe	1
62	100731194	Oil Level Sensor	1
63	100010761	Bearing, TM6205	2
64	100126476	Crankshaft	1
65	100099599	Camshaft	1
66	100010148	Gasket, Crankcase Cover	1
67	100128008	Cover, Crankcase	1
68	100011319-0001	Flange Bolt M8 x 32	6
69	100152738-0001	Oil Dipstick Assembly	1
70	100010550	Dowel Pin Ø8 x 14	2
71	100011215-0001	Flange Bolt M6 x 12	2
72	100122168	Control Assembly	1
73	100011266-0004	Flange Bolt M6 x 20	3
74	100000655	Wire Clip B	1
75	100727607	Ignition Coil	1
76	100725320	Crankcase	1
77	100122099	Bracket, Trigger	1
78	100055591-0007	Flange Bolt M6 x 12, GB16674	2

CYLINDER HEAD PART DIAGRAM

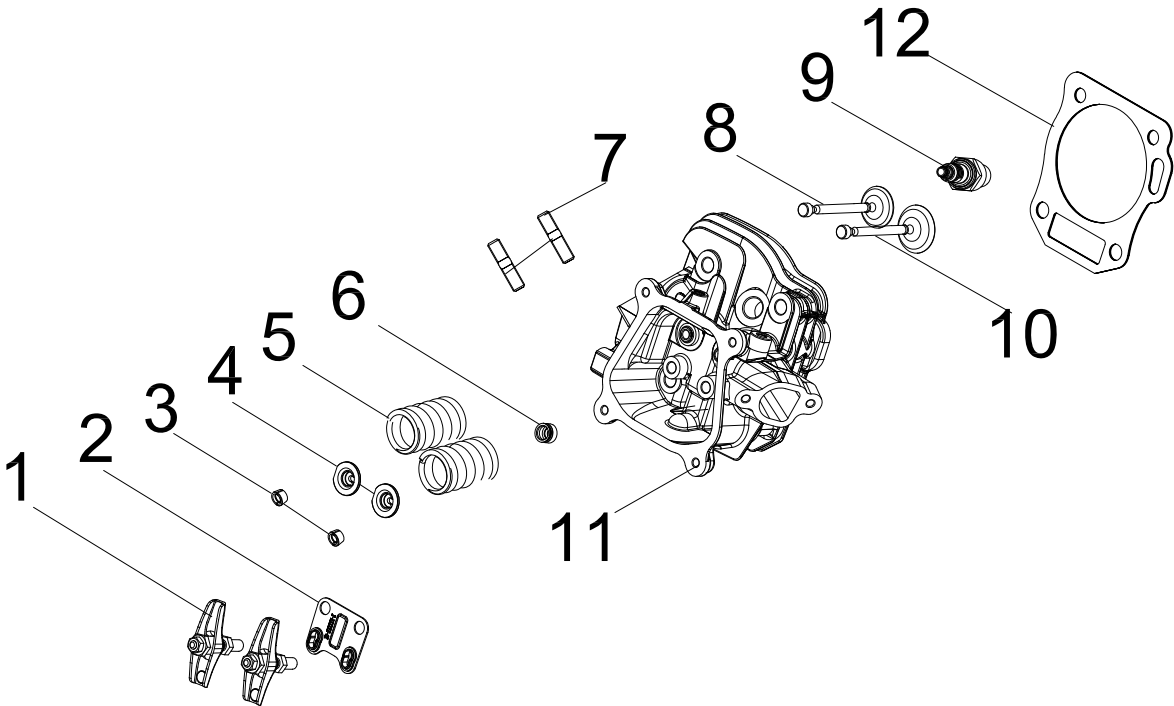


Figure C

CYLINDER HEAD PART LIST

#	Part Number	Description	Qty.
1	100149239	Rocker Arm Assembly	2
2	100050881	Guide Plate, Push Rod	1
3	100050896	Valve Collet	4
4	100073758	Valve Spring Seat, Upper	2
5	100713979	Spring, Valve	2
6	100004599	Oil Seal, Intake Valve	1
7	100010387	Stud Bolt M8 x 34	2
8	100713981	Exhaust Valve	1
9	100009378	Spark Plug F6RTC	1
10	100713980	Intake Valve	1
11	100079792	Cylinder Head	1
12	100155656	Gasket, Cylinder Head	1

CARBURETOR PART DIAGRAM

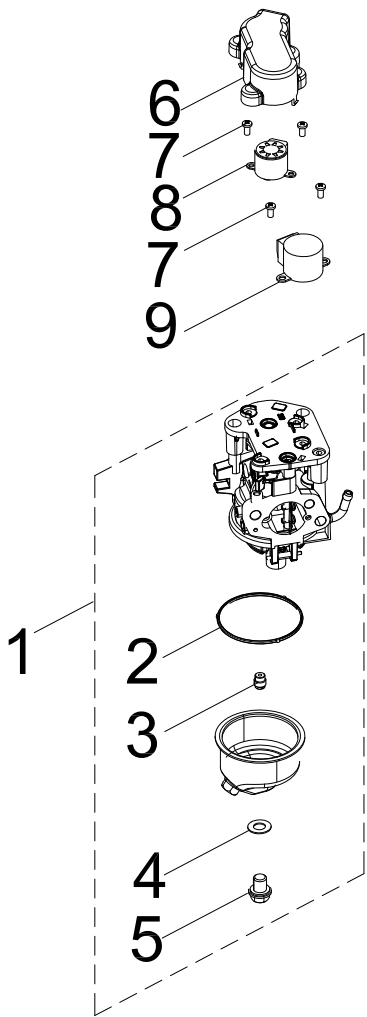


Figure D

CARBURETOR PART LIST

#	Part Number	Description	Qty.
1	100730341	Carburetor	1
2	100005717	O-Ring, Fuel Bowl	1
3	100005766	Main Jet Standard (#68)	1
	100713414	Main Jet Altitude 1000-3000m (#66)	/
4	100006037	Gasket, Fuel Bowl Mounting Bolt	1
5	100005725	Mounting Bolt, Fuel Bowl	1
6	100714111	Protection Cover, Stepping Motor	1
7	100031809-0002	Screw M3 x 6	4
8	100727606	Stepping Motor, Throttle	1
9	100727605	Stepping Motor, Choke	1

FUEL TANK PART DIAGRAM

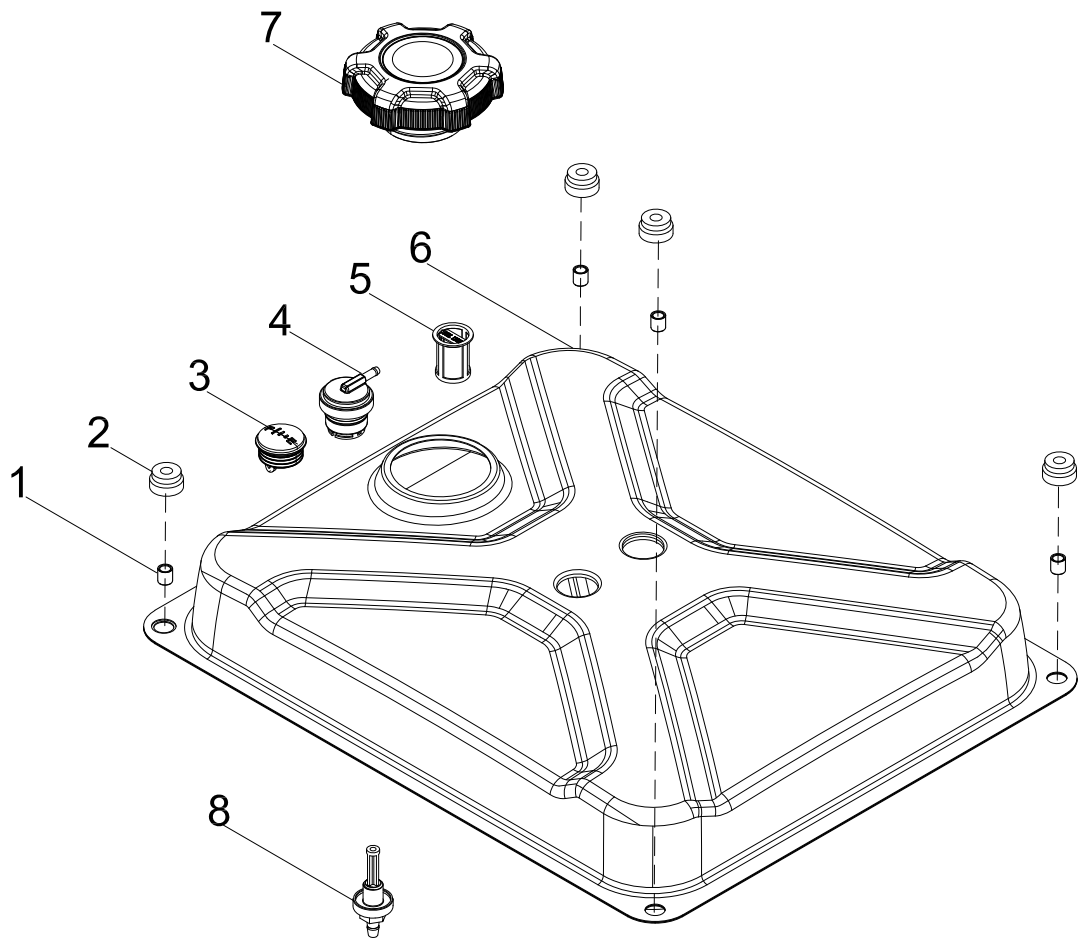


Figure E

FUEL TANK PART LIST

#	Part Number	Description	Qty.
1	100715500	Bushing, Ø9 x Ø6.6 x 10	4
2	100711813	Vibration Mounting, Fuel Tank	4
3	100727794	Fuel Gauge	1
4	100099571	Reversal Valve	1
5	100098838	Fuel Filter Assembly	1
6	100727618-0001	Fuel Tank, 11L	1
7	100142004	Fuel Tank Cap	1
8	100714546	Fitting, Fuel Tank	1

CONTROL PANEL PART DIAGRAM

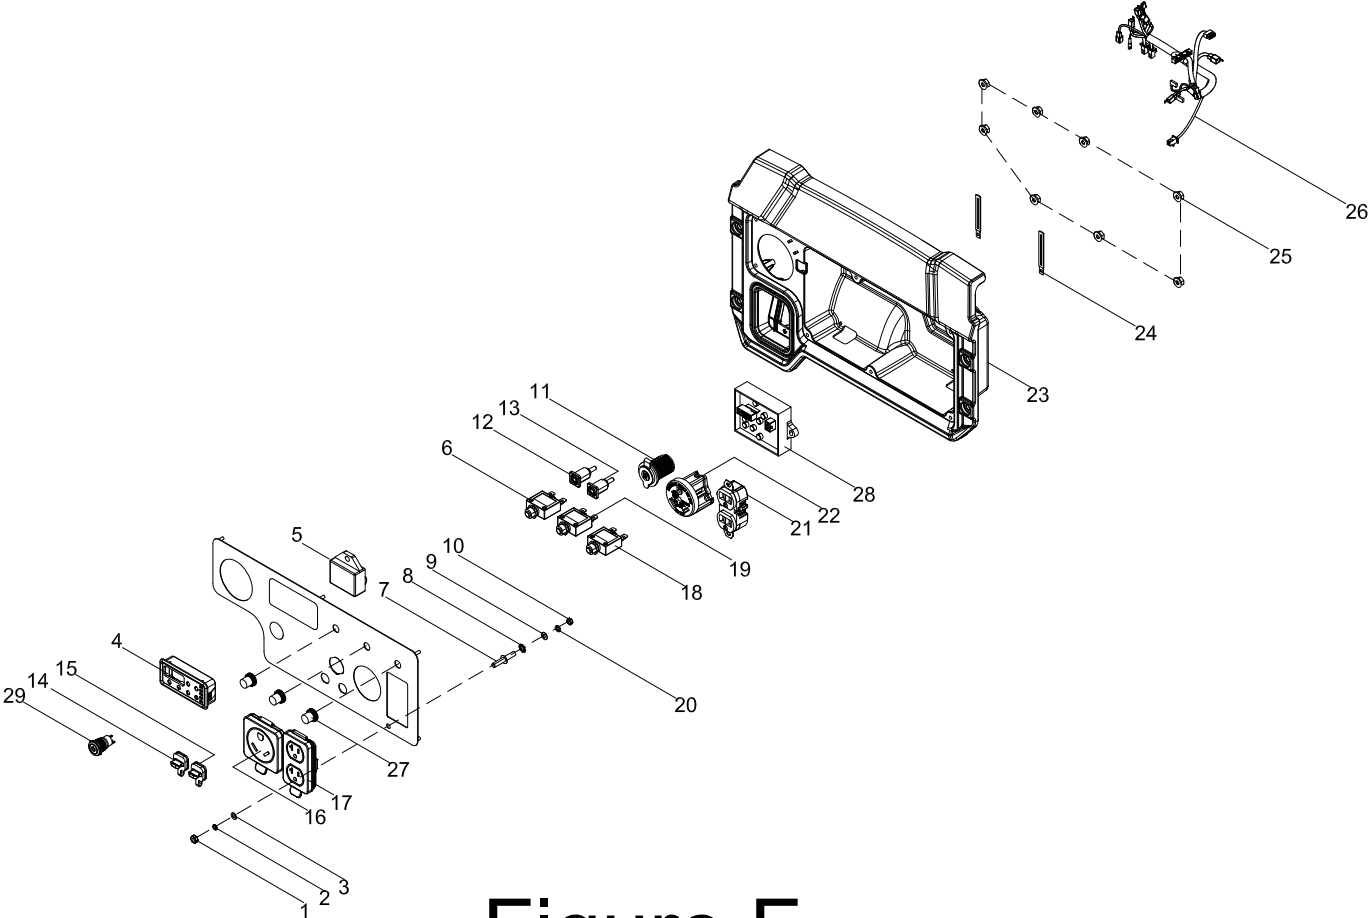


Figure F

CONTROL PANEL PART LIST

#	Part Number	Description	Qty.
1	100011421-0002	Flange Nut M6, GB6170	1
2	100010886-0002	Spring Washer Ø6	1
3	100010910-0002	Washer Ø6	1
4	100731289	Intelligauge, INT5DINV	1
5	100137347-0001	Ignition Module	1
6	10057719	8Amp Circuit Breaker, Push Button	1
7	100092320-0002	Grounding Stud	1
8	100011025-0001	Lock Washer Ø6, Toothed	1
9	100010919-0001	Washer Ø5	1
10	100011419-0003	Flange Nut M5	1
11	100019782	Receptacle, 12 VDC	1
12	100091059-0001	Parallel Outlet Socket, Red	1
13	100091059-0002	Parallel Outlet Socket, Black	1
14	100150096-0001	Cover, Parallel Outlet Socket, Red	1
15	100150096-0002	Cover, Parallel Outlet Socket, Black	1
16	100731572	Receptacle Cover, TT-30R	1
17	100731575	Receptacle Cover, 5-20R, Duplex	1
18	100019747	20Amp Circuit Breaker, Push Button	1
19	100019756	30Amp Circuit Breaker, Push Button	1
20	100010885-0003	Spring Washer Ø5	1
21	100020029	Receptacle 5-20R, Duplex	1
22	100020008	Receptacle TT-30R	1
23	100727641	Control Panel Housing	1
24	100000655	Wire Clip B	2
25	100011446-0001	Flange Nut M4	8
26	100727492	Wire Harness Assembly	1
27	100120180	Cover, Circuit Breaker	3
28	100729981	Start/Stop Control Module	1
29	100730628	One-button Start	1

FRAME ASSEMBLY PART DIAGRAM

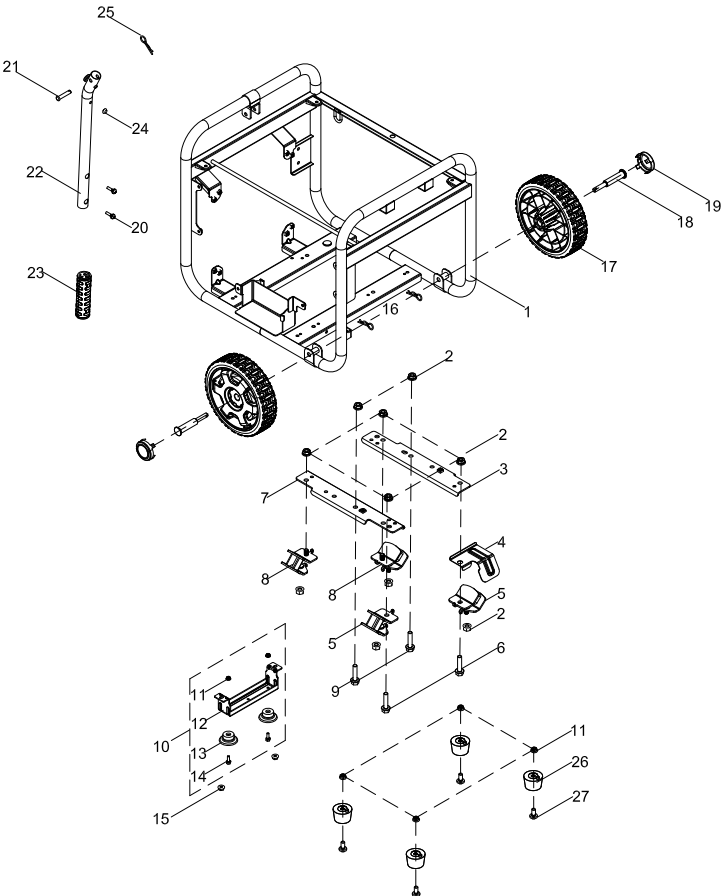


Figure G

FRAME ASSEMBLY PART LIST

#	Part Number	Description	Qty.
1	100725007-0001	Frame	1
2	100079483-0001	Flange Nut M8	10
3	100731886	Front Mounting Bracket, Engine	1
4	100162980	Insulator shield	1
5	100093523	Vibration Mount 2, Support	2
6	100011323-0001	Flange Bolt M8 x 38	2
7	100162854	Rear Mounting Bracket, Engine	1
8	100093524	Vibration Mount 1, Support	2
9	100011320-0002	Flange Bolt M8 x 35	2
10	100720829-0001	Support Leg Assembly	1
11	100011452-0003	Flange Nut M6, GB6177.1	6
12	100020659-0001	Support Leg	1
13	100099931	Vibration Mount	2
14	100011265-0003	Flange Bolt M6 x 18	2
15	100011453-0003	Flange Nut M8, GB6177.1	2
16	100023415-0001	R-pin	2
17	100714023-0001	8 In. Wheel, Yellow	2
18	100714025	Roll Pin Ø10	2
19	100712243-0001	Tire Cover, Yellow	2
20	100095857-0005	Flange Bolt M4 x 18	2
21	100011047-0003	Roll Pin Ø8 x 40	1
22	100725016-0001	Handle	1
23	100716888	Grip, Handle	1
24	100731043	Damping Pad, Handle	1
25	100714685-0001	R-pin, R5	1
26	100022335	Damping Pad	4
27	100010964-0002	Screw M6 x 12	4

WIRING DIAGRAM

