




Champion Power Equipment, Inc., Santa Fe Springs, CA USA

MODEL #100682

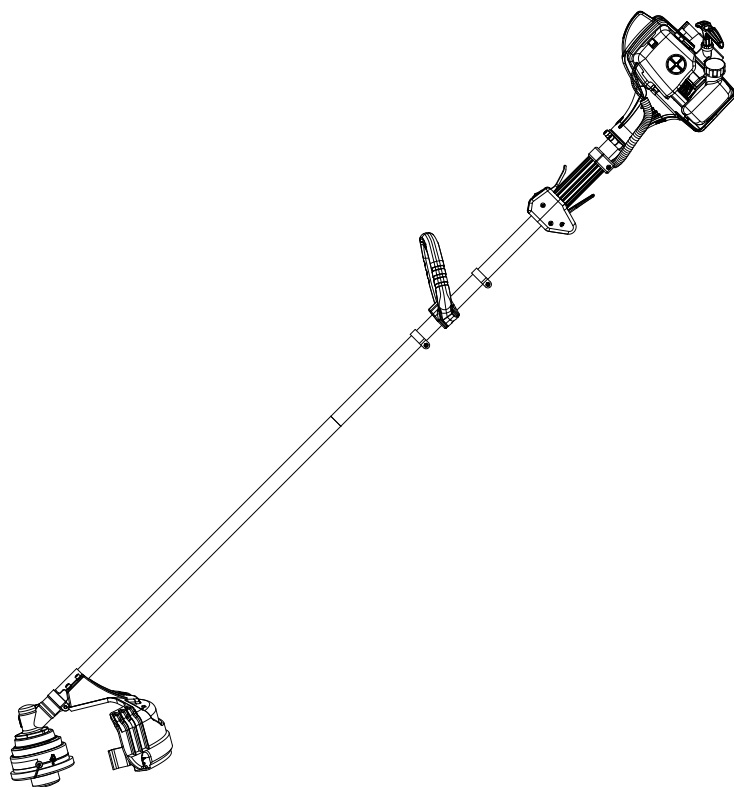

PARTS INFORMATION

STRAIGHT SHAFT TRIMMER

SERIAL NUMBER RANGE: ALL



To order replacement parts please visit:
shop.championpowerequipment.com
or call **1-877-338-0999**.

TABLE OF CONTENTS

Parts Diagram Overview 3

Parts Diagram Overview List 4

Parts Diagram (A)..... 5

Parts List (A) 6

Parts Diagram (B)..... 7

Parts List (B) 8

Parts Diagram (C)..... 9

Parts List (C) 10

Parts Diagram (D)..... 11

Parts Diagram (E)..... 13

Parts List (E) 14

Parts Diagram (F)..... 15

Parts List (F) 16

Parts Diagram (G)..... 17

Parts List (G) 18


Parts Diagram (H)..... 19

Parts List (H) 20

Engine Parts Diagram 21

Engine Parts list 22

PARTS DIAGRAM OVERVIEW

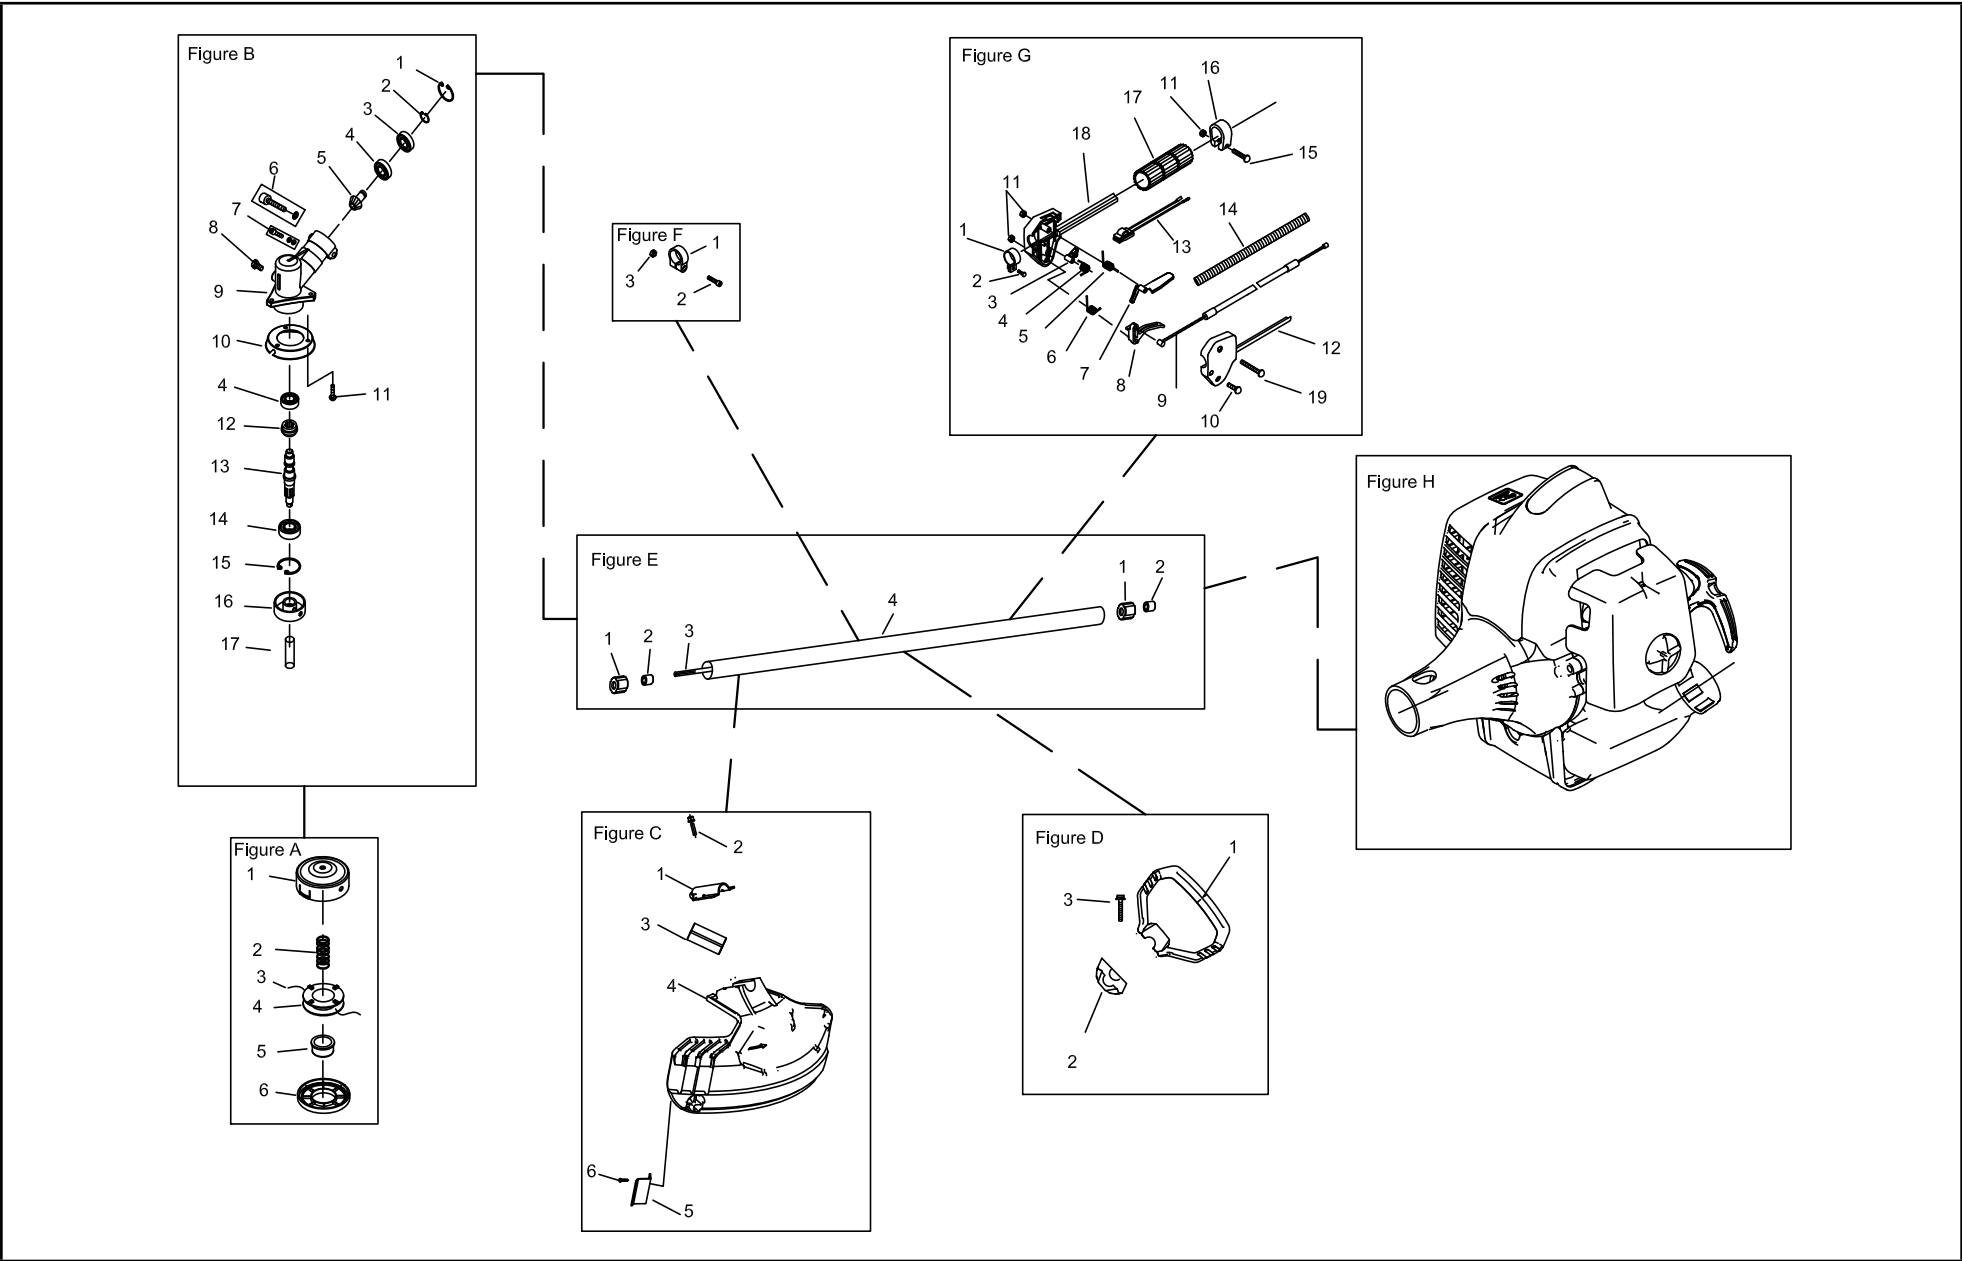

PARTS DIAGRAM OVERVIEW LIST

#	Part Number	Description	Qty.
1	CG415Q23.1	Figure A	1
2	CG415.3	Figure B	1
3	3GC400B.6	Figure C	1
4	3CS260.1	Figure D	1
5	CG415Q23.2	Figure E	1
6	CG260.3	Figure F	2
7	CG415Q23.3	Figure G	1
8	80114937	Figure H	1

PARTS DIAGRAM (A)

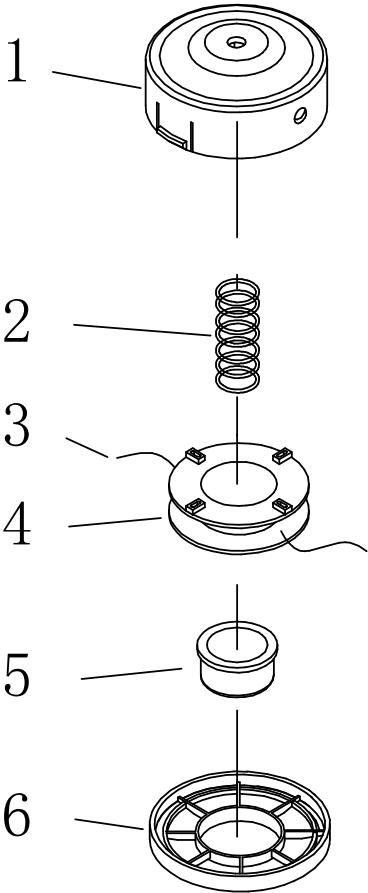


Figure A

PARTS LIST (A)

#	Part Number	Description	Qty.
1	2320120944	Case	1
2	2320034140	Spring	1
3	2320111584	Cord Ø2.5 × 2100	2
4	2320120945	Cord Holder	1
5	2320042301	Rope Wheel Head	1
6	2320049609	Cover	1

PARTS DIAGRAM (B)

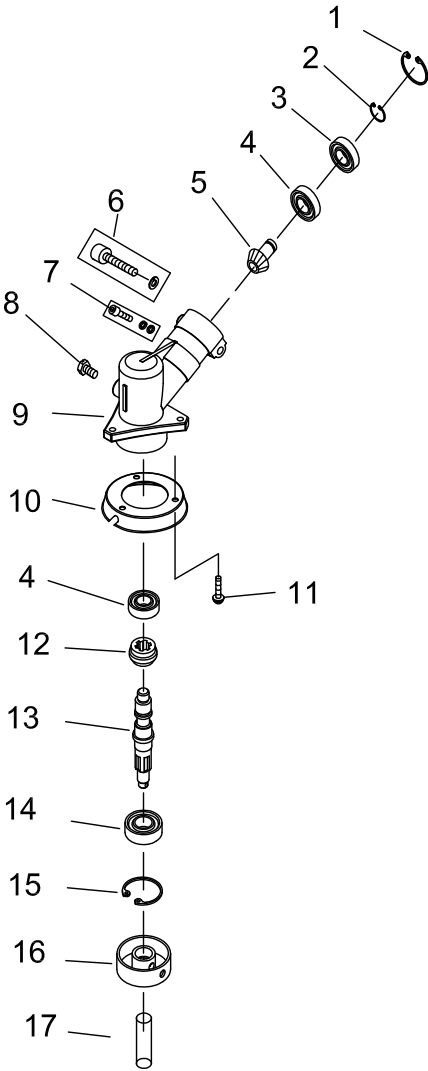


Figure B

PARTS LIST (B)

#	Part Number	Description	Qty.
1	2320011579	Stop Ring Ø26	1
2	2310001038	Stop Ring Ø10	1
3	2310002112	Bearing 6000-2RS/P6	1
4	2310002697	Bearing 6000/P6	2
5	2320106391	Pinion	1
6	23100047808	Screw M5 × 25	1
7	2310004467	Screw M5 × 12,CE	1
8	2310004465	Bolt M5 × 12	1
9	2320049610	Gear Case	1
10	2320107966	Safety Guard	1
11	2310004842	Screw M5 × 12	3
12	2320101132	Gear	1
13	2320106390	Gear Shaft	1
14	2310003582	Bearing 6002-2RS/P5	1
15	2320011581	Stop Ring Ø32	1
16	2320088002	Holder A	1
17	2320121826	Oil Pipe	1

PARTS DIAGRAM (C)

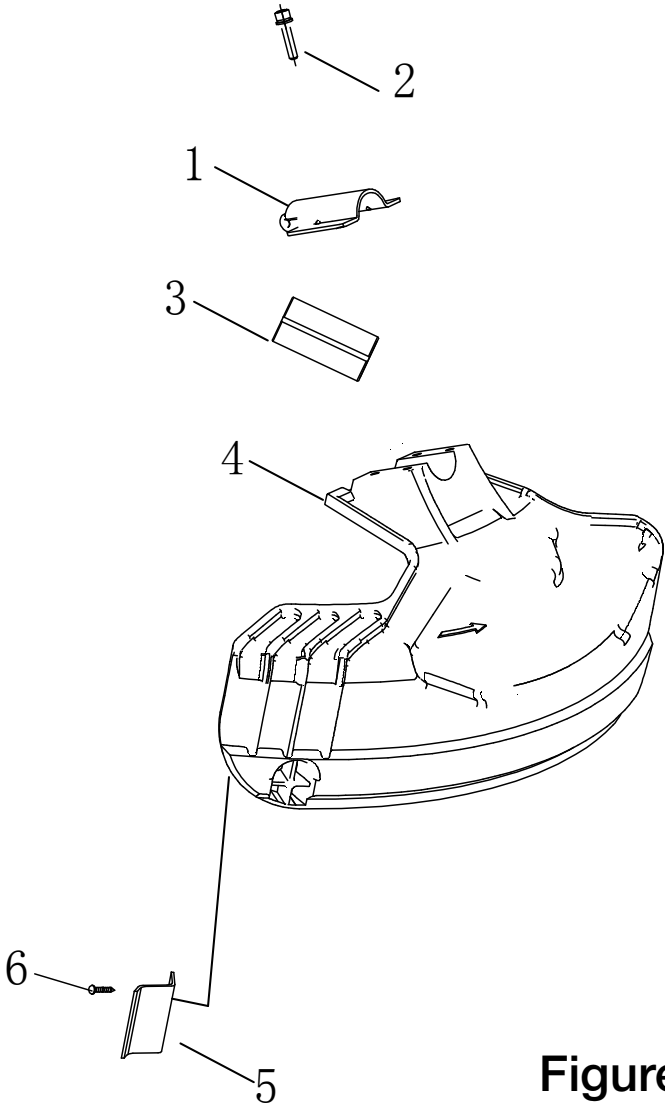


Figure C

PARTS LIST (C)

#	Part Number	Description	Qty.
1	2320080799	Safety Guard Bracket	1
2	2310004780	Screw, M5 × 20, GB93+GB97	4
3	2320081905	Reducing Sleeve	1
4	2320118940	Safety Guard	1
5	2320070018	Blade	1
6	2310004831	Screw ST4.2 × 16	2

PARTS DIAGRAM (D)

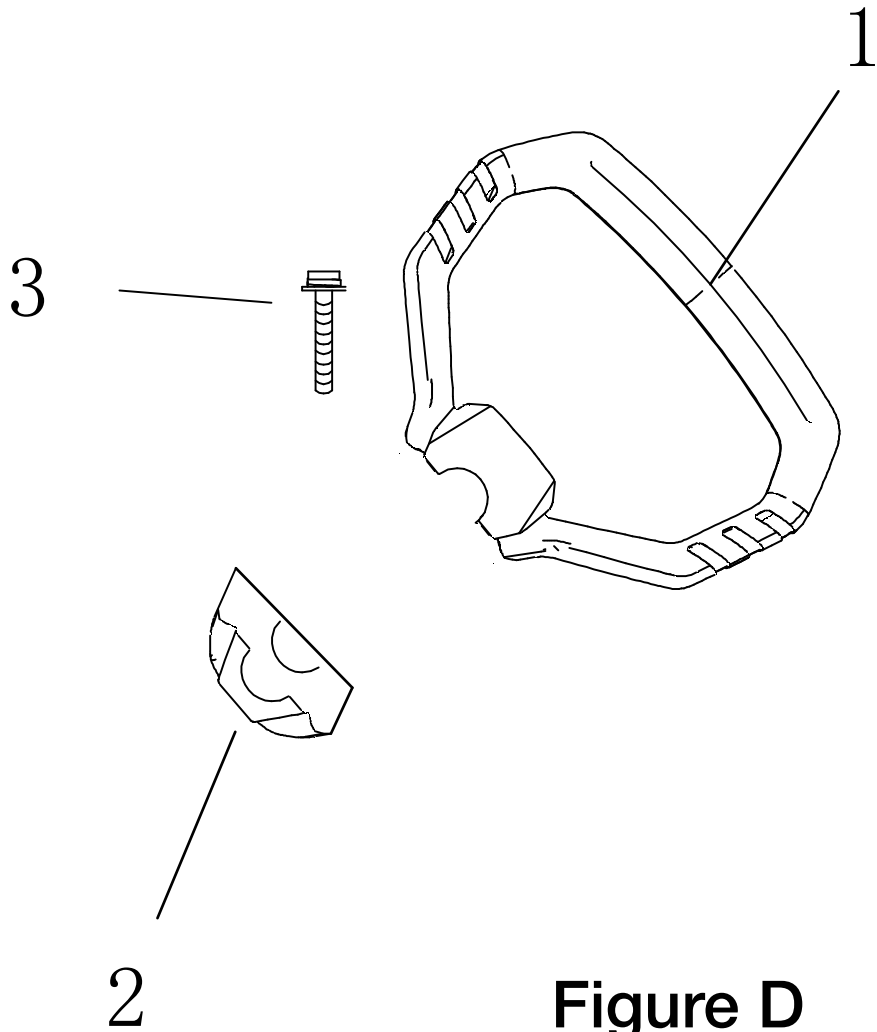


Figure D

PARTS LIST (D)

#	Part Number	Description	Qty.
1	2320077337	Handle	1
2	2320077338	Handle Cover	1
3	2320031146	Bolt M5 × 25, CE	2

PARTS DIAGRAM (E)

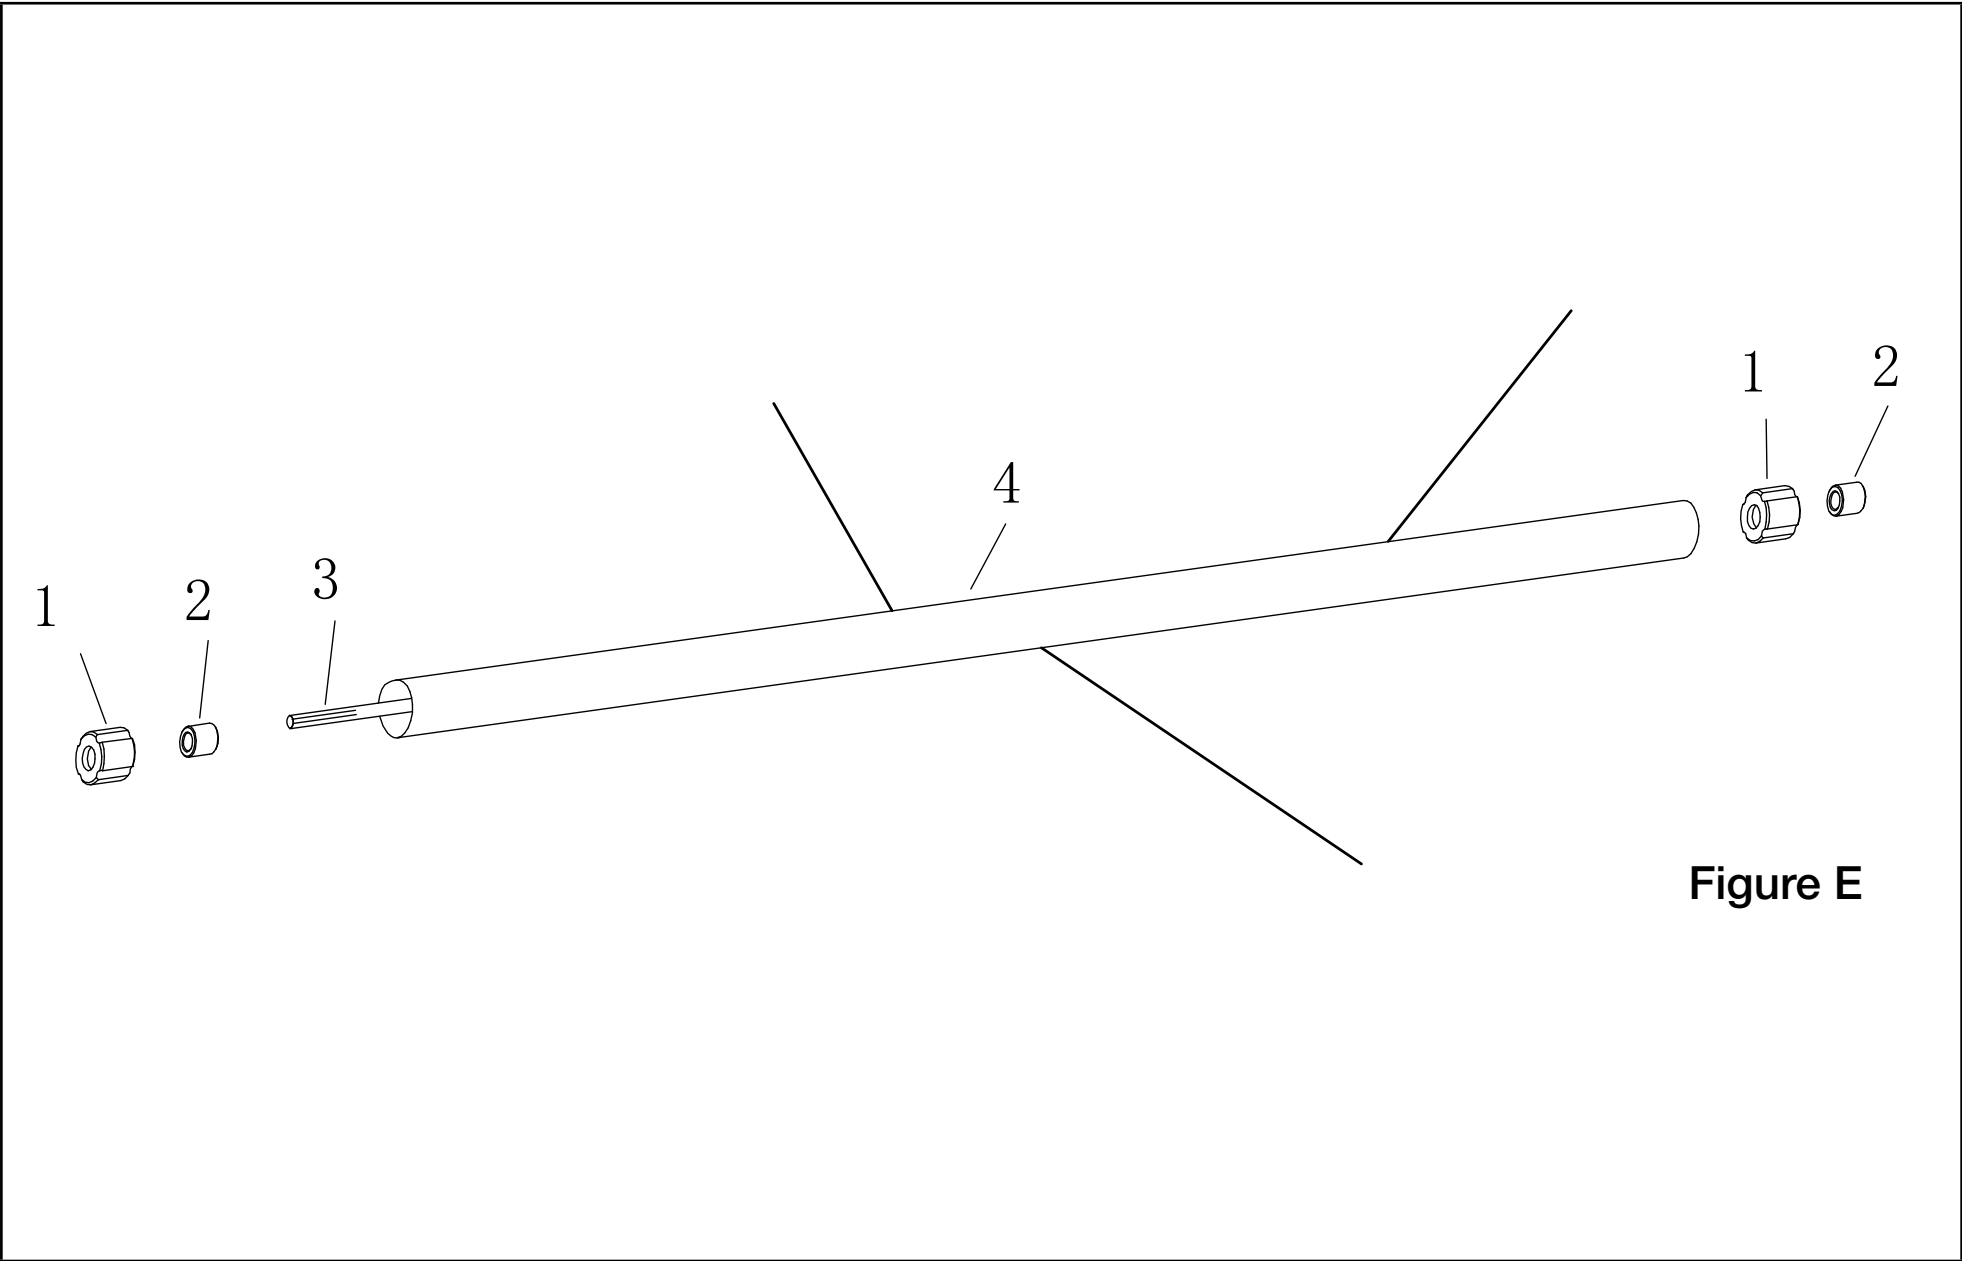


Figure E

PARTS LIST (E)

#	Part Number	Description	Qty.
1	2320001244	Rubber Cover	6
2	2320006790	Oil-bearing	6
3	2320028569	Drive Shaft	1
4	2320120261	Pipe	1

PARTS DIAGRAM (F)

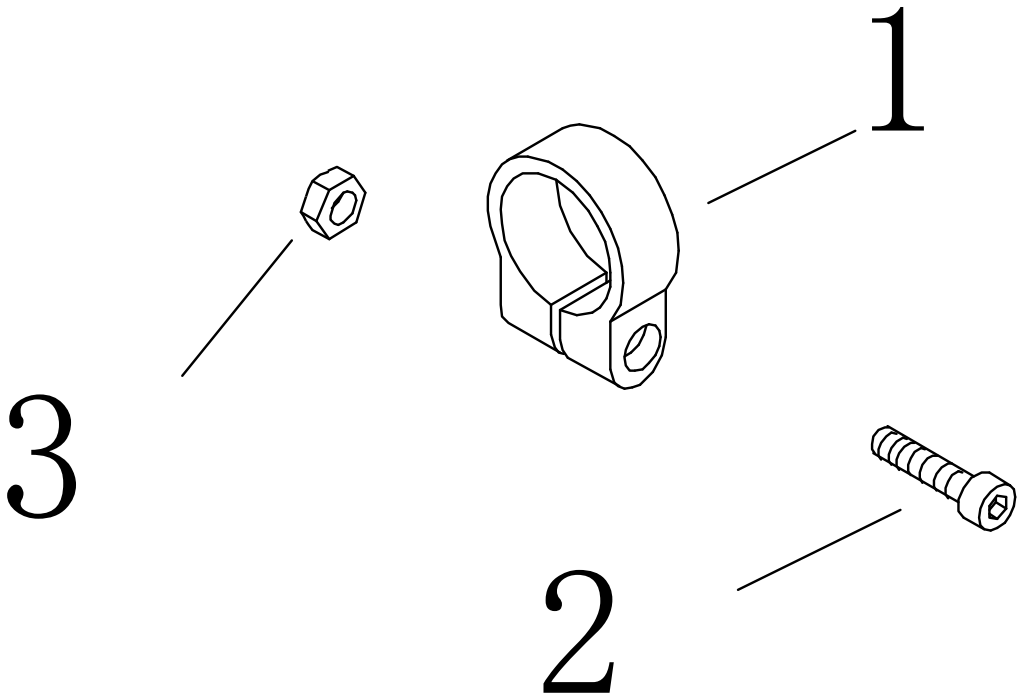


Figure F

PARTS LIST (F)

#	Part Number	Description	Qty.
1	2320070118	Loacting Ring	1
2	2320121894	Screw M5 × 18, CE	1
3	2310000142	Nut M5, DWH	1

PARTS DIAGRAM (G)

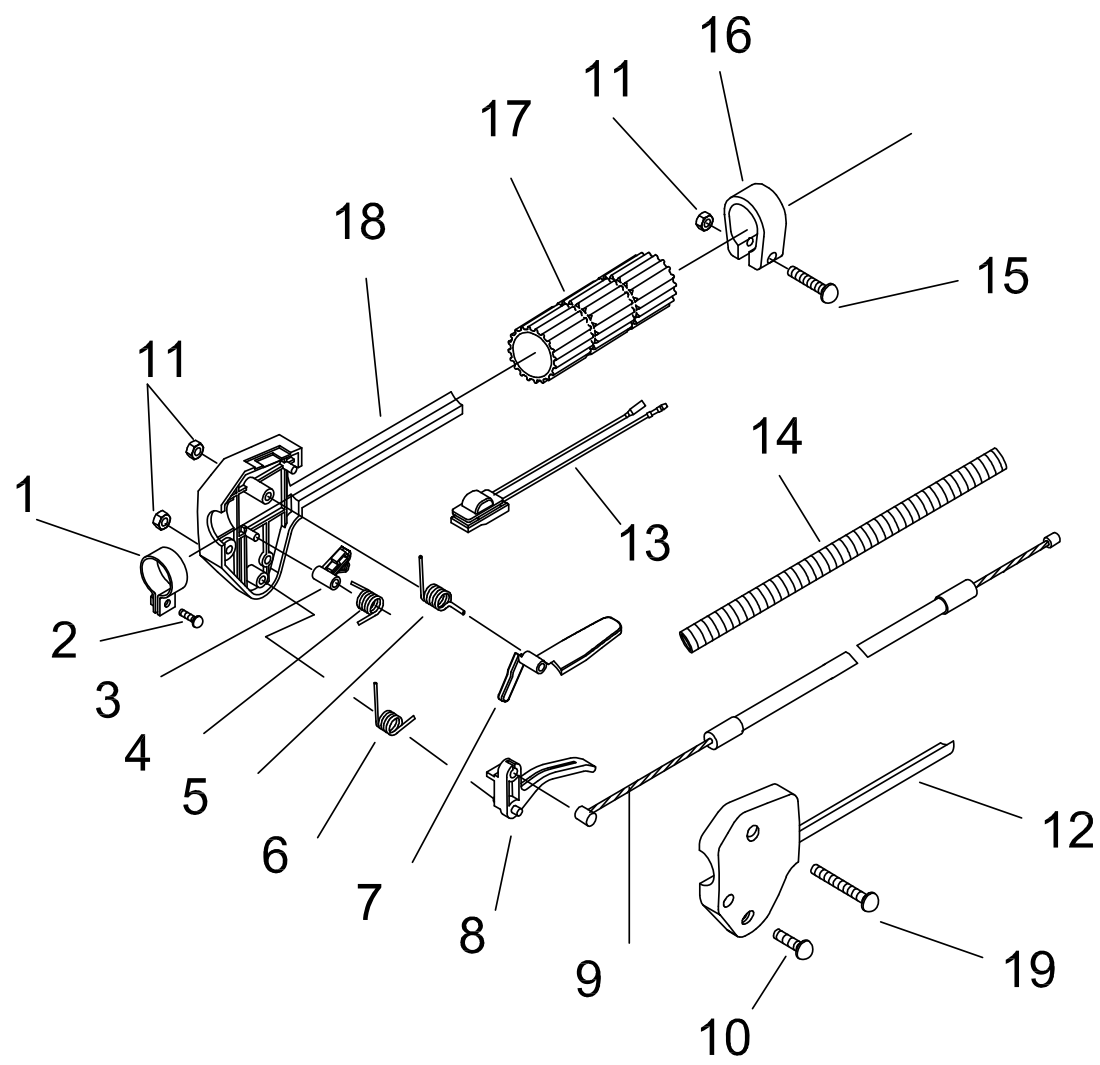


Figure G

PARTS LIST (G)

#	Part Number	Description	Qty.
1	2320038381	Tighting Ring	1
2	2310001588	Screw M5 × 16, 9074.4	1
3	2320001181	Tine	1
4	2320006287	Spring A	1
5	2320008102	Spring B	1
6	2320006700	Spring C	1
7	2320017667	Safety Lever	1
8	2320017665	Throttle Lever	1
9	2320019414	Cable Assembly	1
10	2310004870	Screw M5 × 20	1
11	2310000142	Nut M5, CZH	3
12	2320022241	Box, Left	1
13	2320120402	Stop Switch	1
14	2320001856	Tube 12.5 × 170	1
15	2310004871	Screw M5 × 25, GB9074.4	1
16	2320120260	Clamp	1
17	2320002995	Handle Rubber Cover	1
18	2320022242	Box, Right	1
19	2310004869	Screw M5 × 30	1

PARTS DIAGRAM (H)


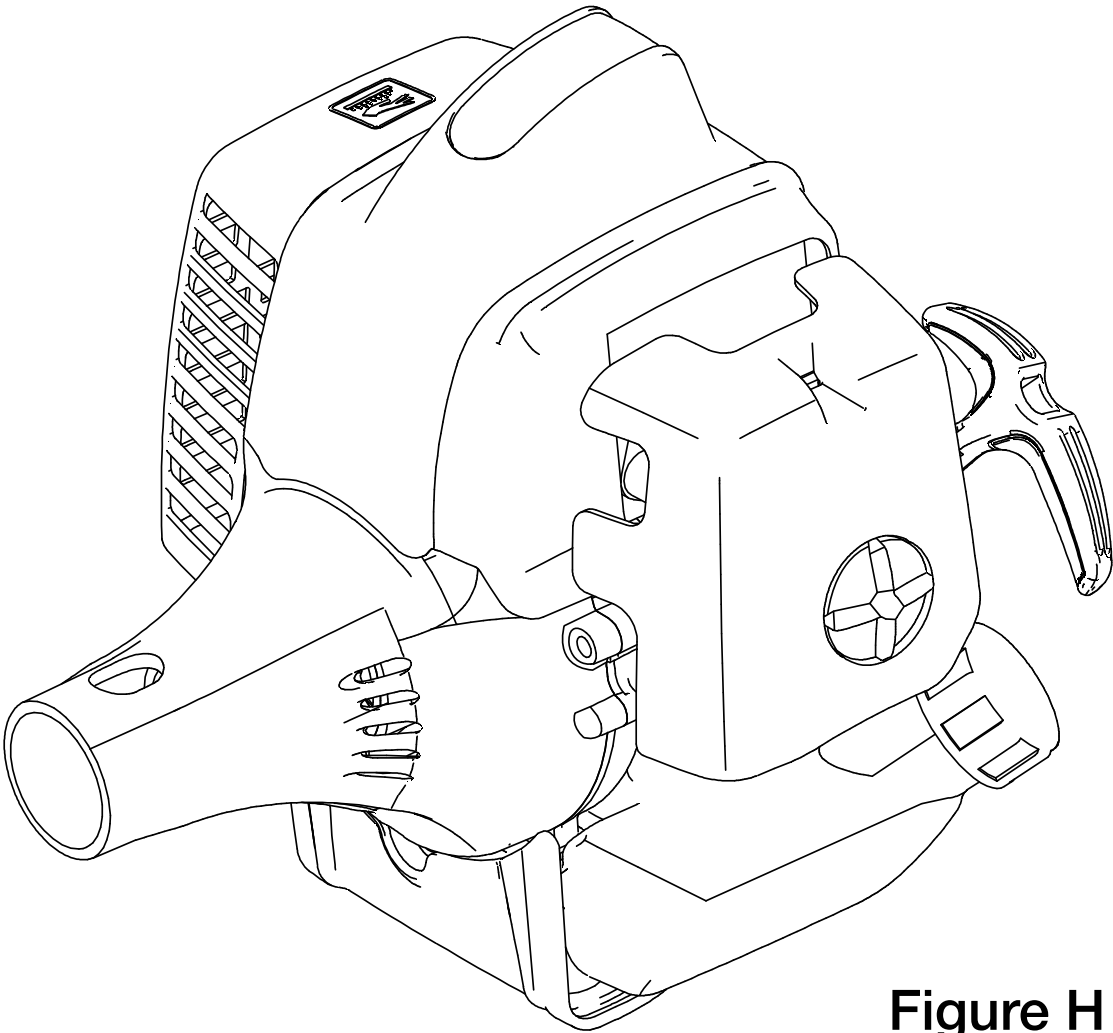


Figure H

PARTS LIST (H)

#	Part Number	Description	Qty.
1	80114937	Engine	1

ENGINE PARTS DIAGRAM

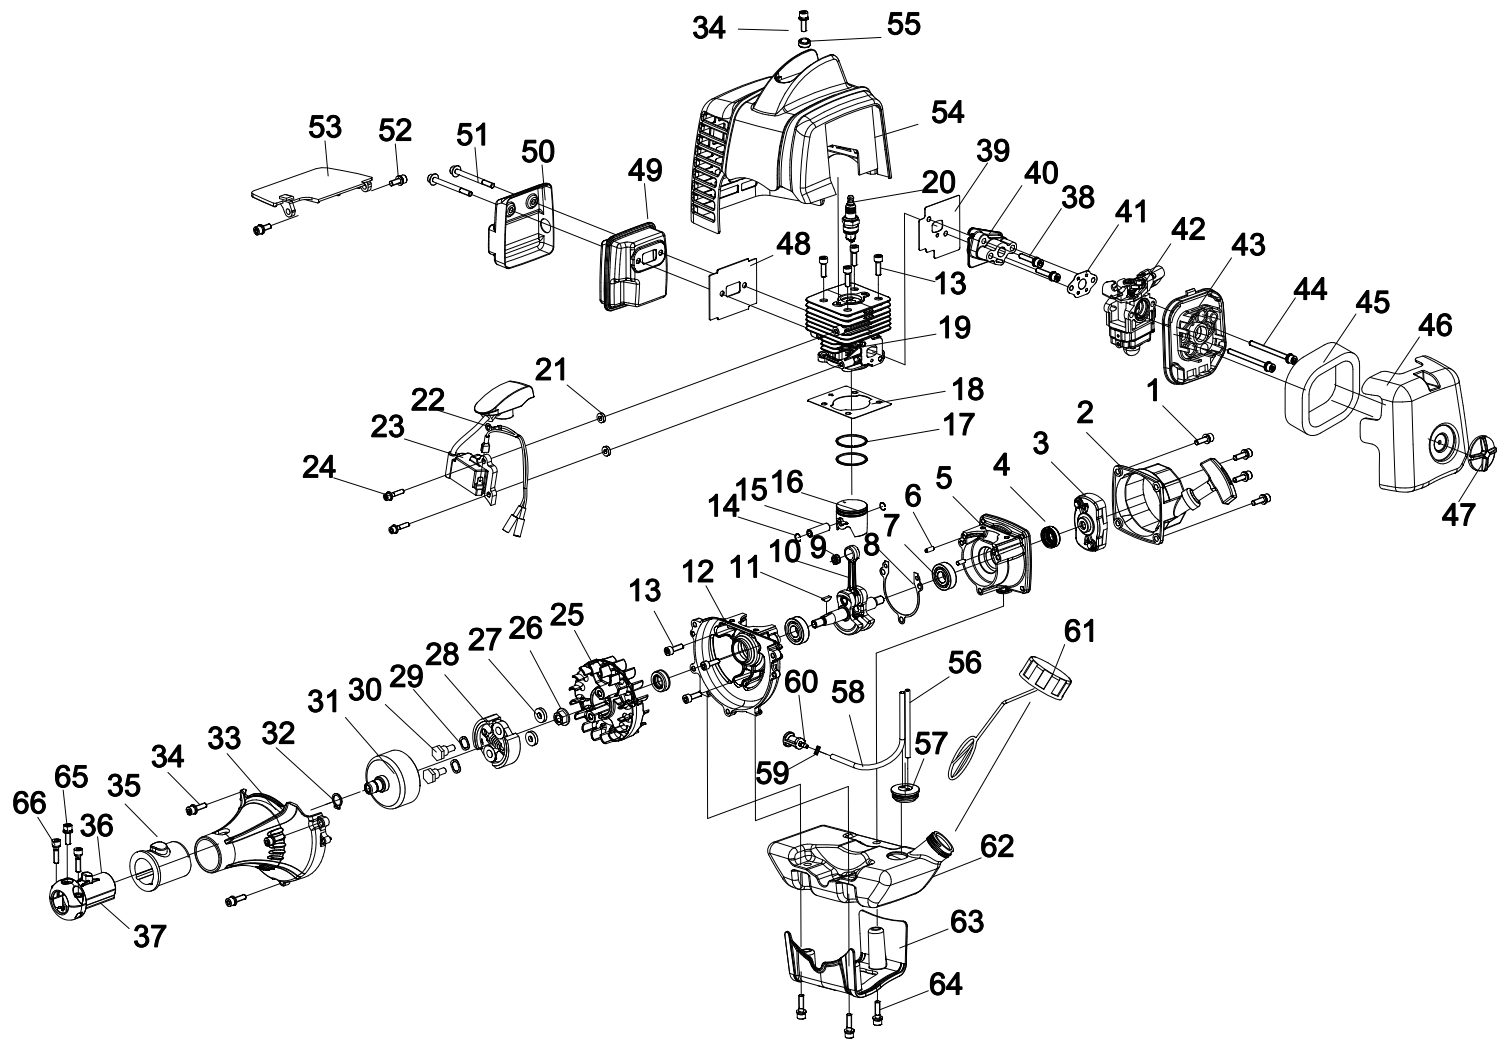

ENGINE PARTS LIST

#	Part Number	Description	Qty.
1	2310004829	Screw Assembly, M5 × 16 , Black	4
2	2320072616	Starter	1
3	2320072617	Guide Cover Assembly	1
4	2320088162	Oil seal	2
5	10303990	Crank Case R	1
6	2310000936	Pin, 4 × h8 × 8	2
7	2310003397	Bearing, 6001/P53	2
8	2320067936	Gasket, Crank Case	1
9	2320094553	Bearing	1
10	19002064	Crank Shaft Assembly	1
11	2320006273	Key	1
12	10303989	Crank Case F	1
13	2310000645	Screw, M5 × 16 , Black	7
14	2320007024	Ring Snap	2
15	2320014632	Piston Pin	1
16	2320099508	Piston	1
17	2320067932	Ring Piston	2
18	2320067933	Gasket Cylinder	1
19	10303605	Cylinder	1
20	2320007041	Spark Plug	1
21	2320024997	Spacer, Igniton Coil	2
22	2320072757	Wire Lead Assembly	1
23	2320121672	Ignition Coil	1
24	2310004864	Screw Assembly, M4 × 20 , Black	2
25	2320121673	Rotor Magnet	1
26	2310003436	Nut, M8	1
27	2320008938	Wave Washer	2
28	2320078430	Clutch Assembly	1
29	2320006290	Washer	2

#	Part Number	Description	Qty.
30	2320007237	Clutch Bolt	2
31	2320056698	Clutch Drum Assembly	1
32	2310001042	Circlips For Shaft-type, A 15	1
33	2320078424	Fan Cover	1
34	2310004866	Screw Assembly, M5 × 18 , Black	4
35	2320048723	Rubber	1
36	10301766	Holder A	1
37	10301767	Holder B	1
38	2310004837	Screw Assembly, M5 × 25 , Black	2
39	2320068749	Gasket Insulator	1
40	2320104306	Insulator	1
41	2320008614	Gasket, Carburetor	1
42	2320120630	Carburetor	1
43	2320087835	Cleaner Base Assembly	1
44	2310003120	Screw Assembly, M5 × 60 , Black	2
45	2320008862	Air Filter Element	1
46	2320101558	Cover, Cleaner	1
47	2320120242	Knob Cover	1
48	2320078125	Gasket, Muffler	1
49	2320120445	Muffler	1
50	2320089034	Cover, Muffler	1
51	2320121573	Screw M5 × 55-10.9	2
52	2310004865	Screw Assembly, M5 × 14 , Black	2
53	2320104916	Clapboard	1
54	2320120241	Top Cover	1
55	2320033686	Spacer, Top Cover	1
56	2320121532	Fuel Pipe, Ø 5 × Ø 2.5 × 100	1
57	2320081831	Plug	1
58	2320121533	Fuel Pipe, Ø 5.5 × Ø 3 × 165	1

#	Part Number	Description	Qty.
59	2320092088	Snap Ring	1
60	2320047780	Filter	1
61	2320120879	Tank Cap Assembly	1
62	2320099801	Fuel Tank	1
63	2320067927	Stand	1
64	2310004780	Screw Assembly, M5 × 20 , Black	3
65	2310002354	Screw Assembly, M5 × 16 , White	1
66	2310002216	Screw Assembly, M5 × 25 , White	2