




Champion Power Equipment, Inc.

MODEL #201099

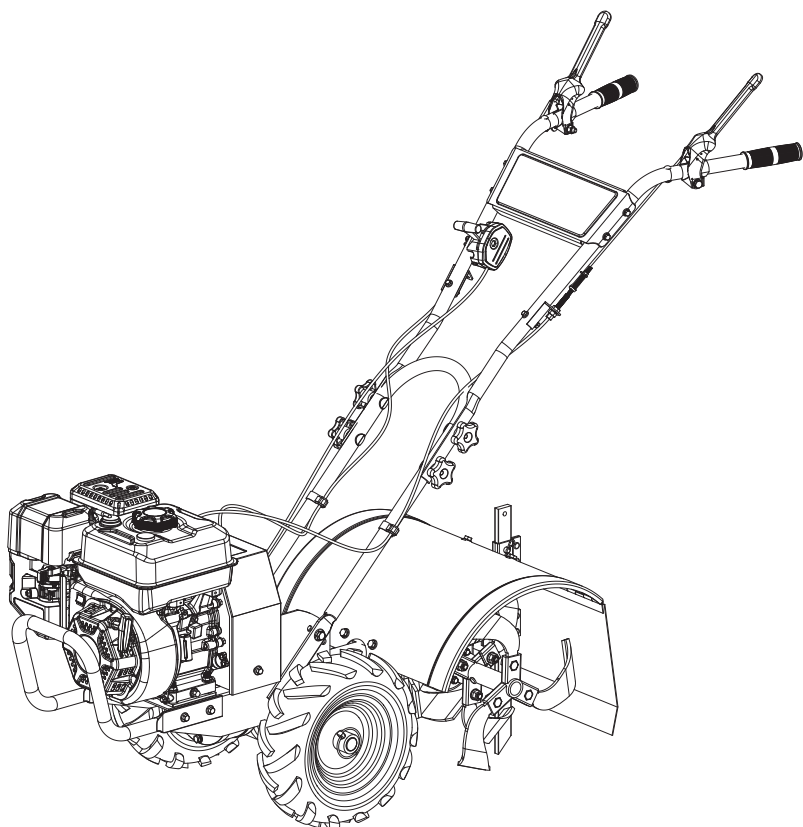

PARTS INFORMATION

REAR TINE TILLER

SERIAL NUMBER RANGE: ALL



To order replacement parts please visit:
shop.championpowerequipment.com
or call **1-877-338-0999**.

TABLE OF CONTENTS

Tiller Parts Diagram 3

Tiller Parts List..... 4

Handle/Controls Part Diagram..... 5

Handle/Controls Part List 6

Belt Drive Part Diagram 7

Belt Drive Part List..... 8


Gear Worm Diagram 9

Gear Worm Part List 10

Engine Part Diagram..... 11

Engine Part List 12

TILLER PARTS DIAGRAM

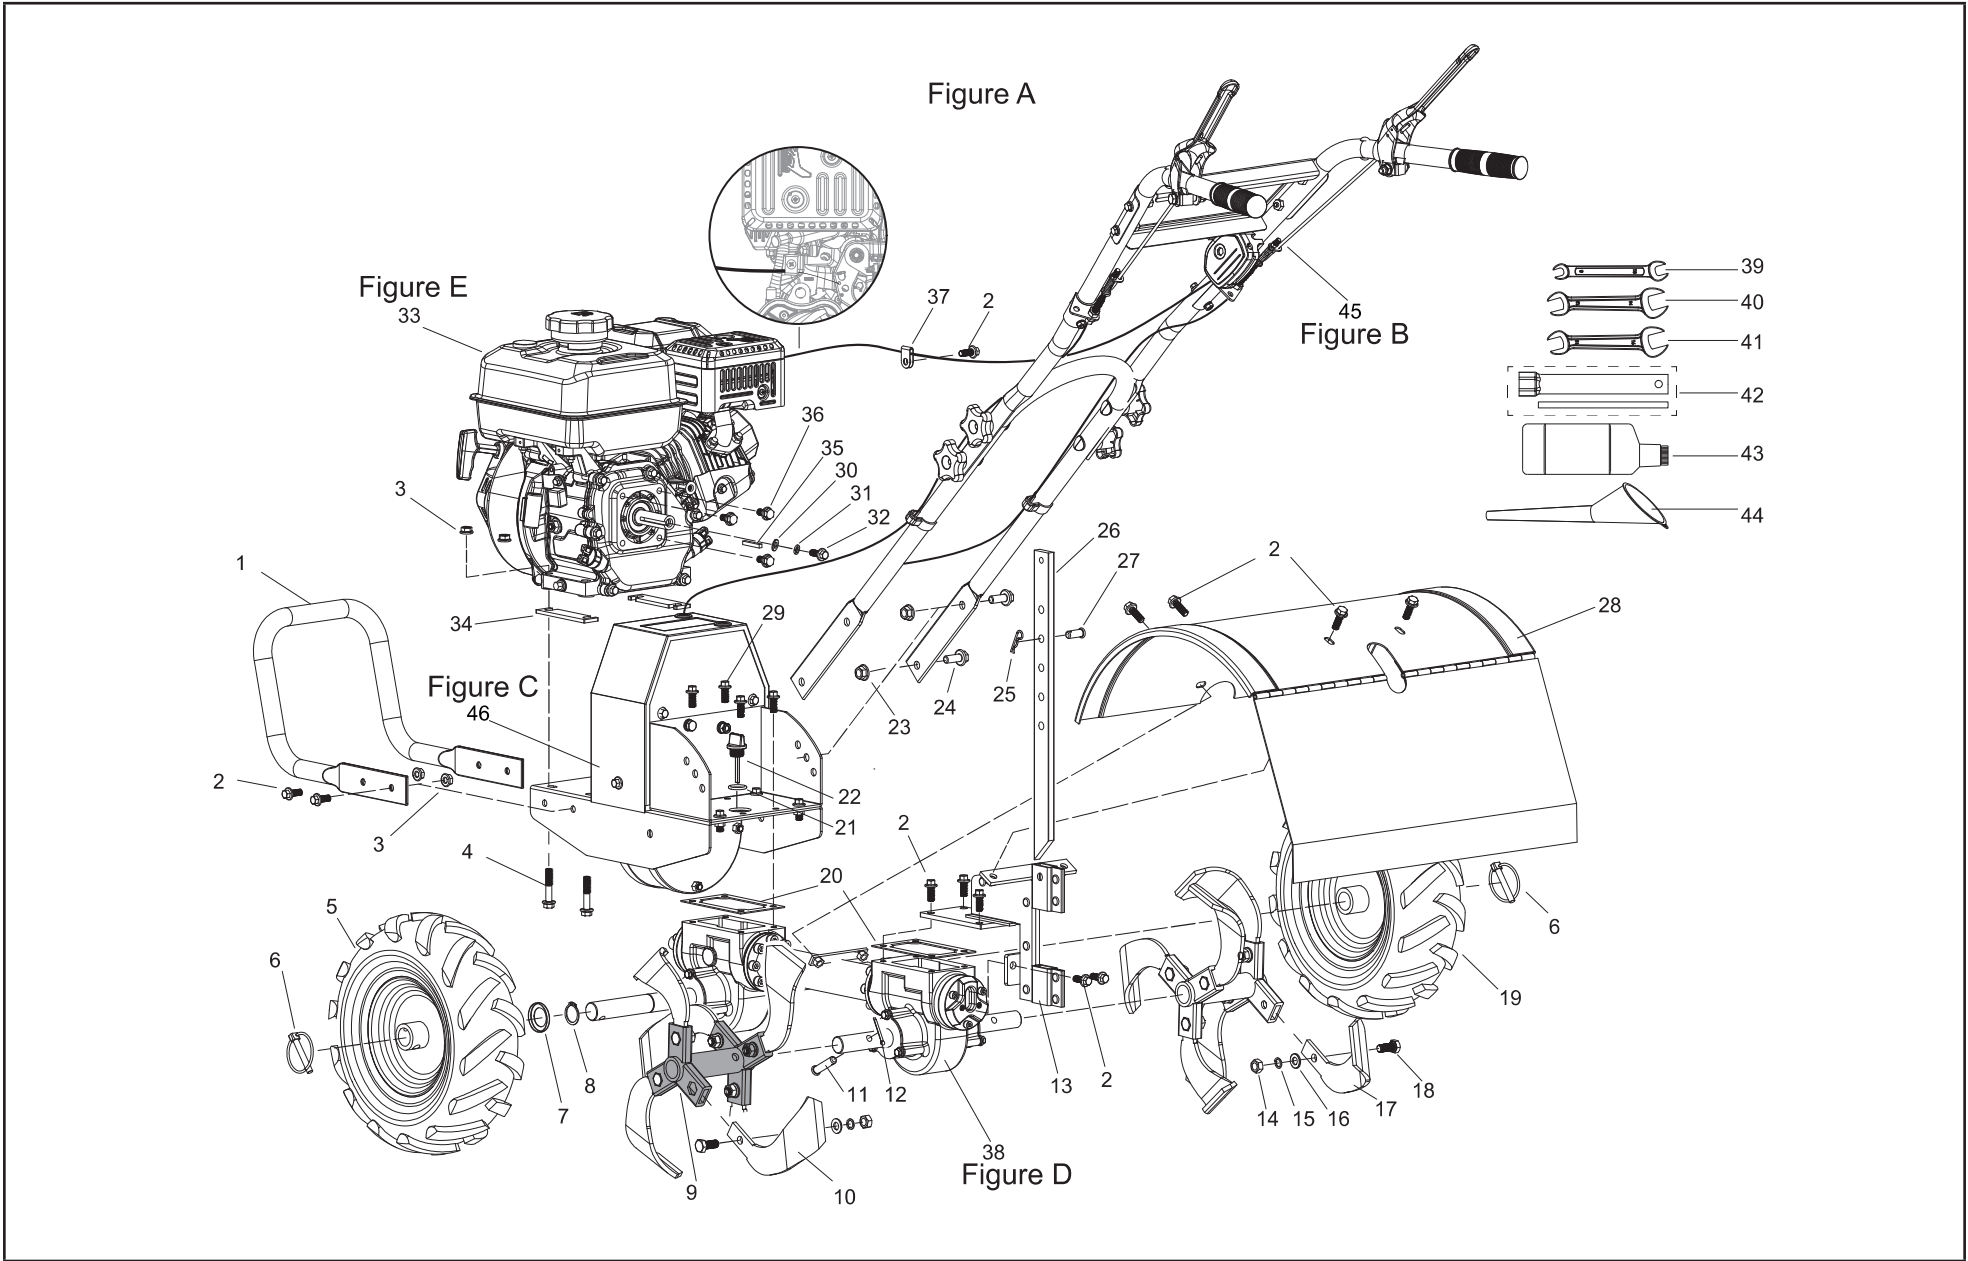


TILLER PARTS LIST

#	Part Number	Description	Qty.
1	100380-047.2	Bumper	1
2	100380-017	Flange Bolt M8 x 20	15
3	100379-032	Flange Locknut M8	8
4	100379-093	Flange Bolt M8 x 45	4
5	100380-113.48	Wheel, Left, 3inch	1
6	100380-085	Lock Pin	2
7	100380-087	Wheel Shaft Cap	2
8	100380-088	Circlip Ø25	2
9	100380-069.2	Tool Carrier Assembly	2
10	100380-068.2	Left Tillage Blade	6
11	100380-070	Pin Roll Ø10 x 42	2
12	100380-071	Pin Ø3 x 30	2
13	100380-157.2	Depth Regulator Seat Assembly	1
14	100379-110	Nut M10 x 1	12
15	100379-111	Spring Washer Ø10	12
16	100379-040	Flat Washer Ø10	12
17	100380-073.2	Right Tillage Blade	6
18	100379-113	Bolt M10 x 1 x 25	12
19	100380-112.48	Wheel, Right, 3inch	1
20	100380-039	Gaskets	2
21	100380-022	Oil Dipstick Gasket	1
22	100380-060	Oil Dipstick	1
23	100380-041	Flange Locknut M10	2
24	100380-040	Flange Bolt M10 x 25	4
25	100380-123	R Uncork Pin Ø2.5 x 35	1
26	100380-066.2	Safety Guard	1
27	100380-067	Pin Roll Ø10 x 25	1
28	100380-063.48	Safety Guard Assembly	1
29	100379-048	Flange Bolt M8 x 25	4
30	100380-023	Flat Washer Ø8 x Ø22 x 2	1

#	Part Number	Description	Qty.
31	100379-029	Spring Washer Ø8	1
32	100380-116	Bolt 5/16-24UNF-L=20	1
33	1TC7QG030	Gasoline Engine (GB215), See Figure E	1
34	100380-117	Ajustable Plate	2
35	100380-020	Flat Key 4.78 x 4.78 x 40~45	1
36	100379-033	Flange Bolt M8 x 16	3
37	100380-004	Wire Nip	1
38	100380-134.2	Gear Worm Box Assembly, See Figure D	1
39	100380-159	Open End Wrench 8-10mm	1
40	100380-160	Open End Wrench 12-14mm	1
41	100380-161	Open End Wrench 13-15mm	1
42	93130-Z010110-0101	Spark Plug Wrench (Engine)	1
43	100158273	0.5L Oil Bottle, 10W-30	1
44	93106-Z010110-0001	Oil Funnel	1
45	100380-162.2	Handhold Control Subassembly, See Figure B	1
46	100380-163.48	Belt Drive Assembly, See Figure C	1

HANDLE/CONTROLS PART DIAGRAM

Figure B

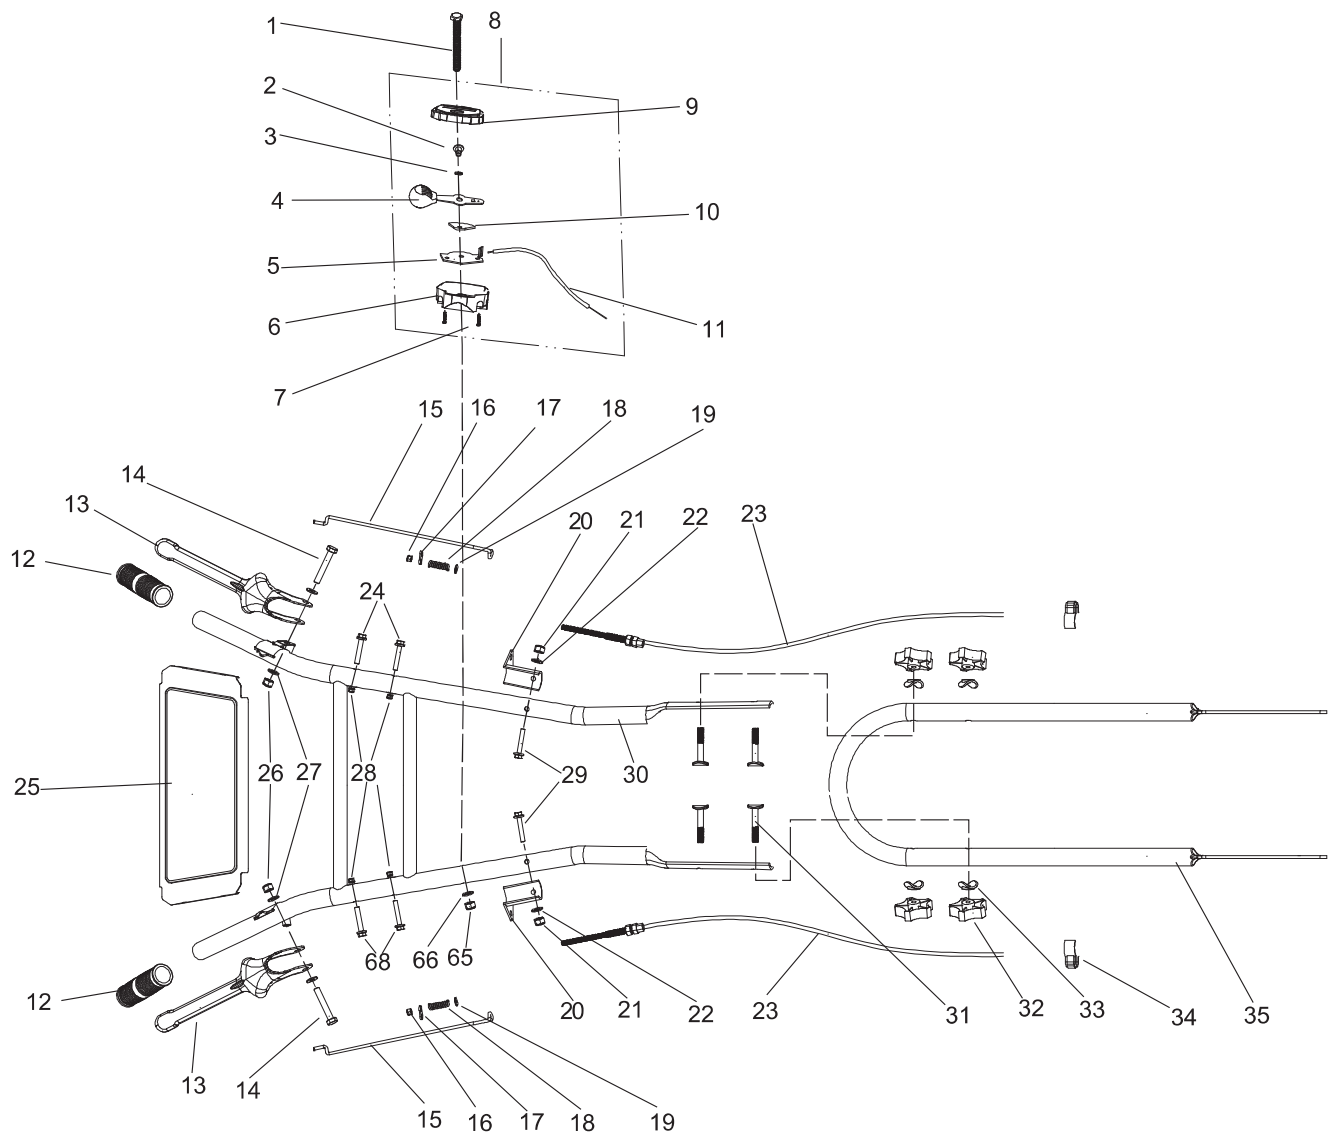


HANDLE/CONTROLS PART LIST

#	Part Number	Description	Qty.
1	100379-009	Bolt M6 x 60	1
2	100380-143	Rivet	1
3	100379-123	Saddle Elastic Washer Ø10	1
4	100380-145.1	The Accelerator Components In Hand	1
5	100380-146	Throttle cable fix plate	1
6	100380-147	Right Throttle Switch Box	1
7	100380-148	Self-tapping Screw ST2.9 x 20	2
8	100380-124	Throttle Switch	1
9	100380-151	Left Throttle Switch Box	1
10	100380-150	throttle speed position plate	1
11	100380-149	Throttle Cable	1
12	100380-007	Handle cover	2
13	100380-005.2	Clutch Lever	2
14	100380-006	Bolt M8 x 25	2
15	100380-009	Clutch Rod	2
16	100380-010	Locknut M5	2
17	100380-011	Pull Pole Protector	2
18	100380-013	Spring	2
19	100380-012	Flat Washer Ø5 x Ø12 x 1	2
20	100380-008	Cable Fixing Plate	2
21	100379-020	Locknut M6	3
22	100379-019	Flat Washer Ø6	3
23	100380-014	Clutch Cable Assembly	2
24	100380-110.2	Flange Bolt M6 x 35	4
25	100380-118.1	Logo Plate	1
26	100379-015	Locknut M8	2
27	100379-016	Flat Washer Ø8	4
28	100380-111.2	Flange Locknut M6	4
29	100379-026	Flange Bolt M6 x 35	2
30	100380-003.2	Handle Bar Assembly	1

#	Part Number	Description	Qty.
31	100380-002	Fan-shaped Screw M8 x 50	4
32	100380-119	Handle Bar Knob Nut	4
33	21061000110301A	Curved washer	4
34	100380-065	Ply-yarn Drill	2
35	100380-042.2	Handle Arm	1

BELT DRIVE PART DIAGRAM

Figure C

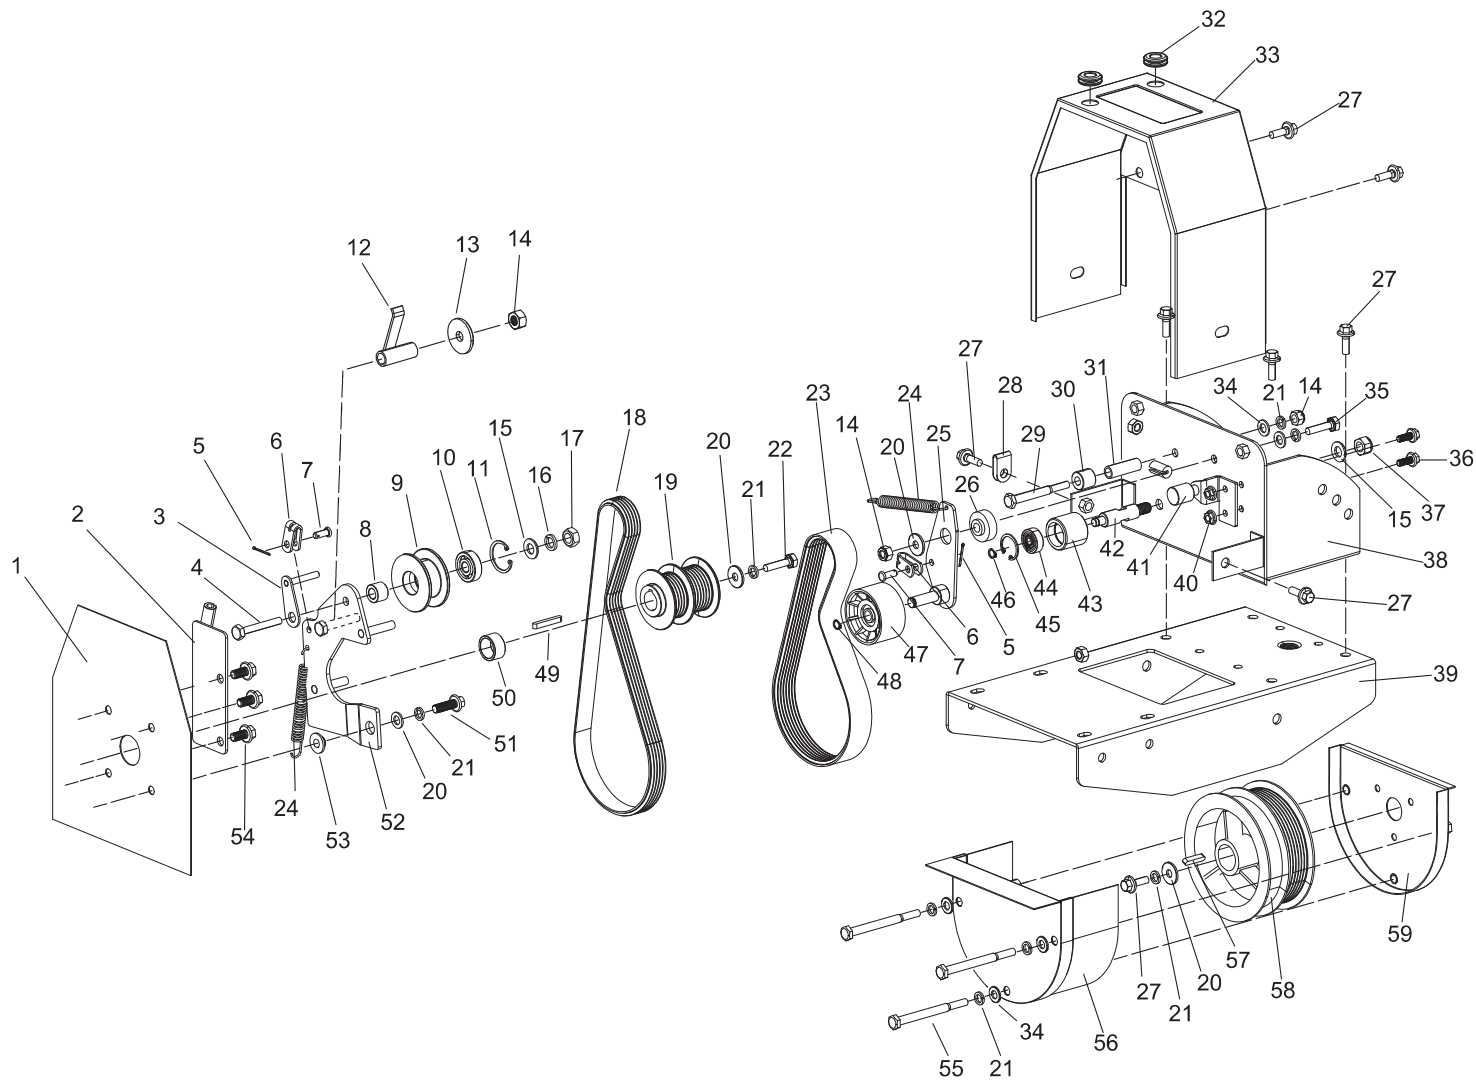


BELT DRIVE PART LIST

#	Part Number	Description	Qty.
1	100380-015.48	Big Belt Cover Protector	1
2	100380-016	The Backward Pull Plate Assembly	1
3	100380-029	Belt Buckle	1
4	100380-024	Bolt M10 x 50	1
5	100380-025	Pin Ø1.5 x 20	2
6	100380-026	Cable Clip	2
7	100380-027	Pin Roll Ø6 x 16	2
8	100380-030	Reverse Tension Sleeve	1
9	100380-031	Reverse Tension Wheel	1
10	100380-033	Bearing 6200	1
11	100380-034	Circlip 30	1
12	100380-028	Shaft Bushing 1	1
13	100379-057	Flat Washer Ø8 x Ø28 x 3	1
14	100379-015	Locknut M8	3
15	100379-040	Flat Washer Ø10	2
16	100379-111	Spring Washer Ø10	1
17	100380-035	Nut M10	1
18	100380-115	Belt 5PK730	1
19	100380-019	Small Belt Wheel	1
20	100380-023	Flat Washer Ø8 x Ø22 x 2	4
21	100379-029	Spring Washer Ø8	8
22	100380-116	Bolt 5/16-24UNF-L=20	1
23	100380-114	Belt 7PK612	1
24	100380-045	Spring	2
25	100380-122	Clutch Arm Assembly	1
26	100380-051	Tension Bushing	1
27	100380-017	Flange Bolt M8 x 20	9
28	100380-004	Wire Nip	1
29	100380-052	Bolt M8 x 70	1
30	100380-055	Belt Block Set 2	1

#	Part Number	Description	Qty.
31	100380-057	Belt Block Set 1	1
32	100380-062	Cable Protector	2
33	100380-061.48	Big Belt Cover Protector	1
34	100379-016	Flat Washer Ø8	5
35	100380-046	Bolt M8 x 30	1
36	100379-108	Flange Bolt M6 x 16	2
37	100380-059	Locknut M10	1
38	100380-037.48	Handle Seat Assembly	1
39	100380-038.48	Engine Seat Assembly	1
40	100379-099	Flange Locknut M6	2
41	100380-054	Retaining Stem Components Belt	1
42	100380-056	Tension Wheel Pole	1
43	100380-053	Tension Wheel	1
44	100379-063	Bearing 628	1
45	100379-065	Circlip 24	1
46	100379-064	Circlip 8	1
47	100380-121	Forward Tension Wheel	1
48	100380-048	Circlip 10	1
49	100380-020	Flat Key 4.78 x 4.78 x 40~45	1
50	100380-018	Small Belt Wheel Shaft Bushing	1
51	100379-080	Bolt M8 x 25	1
52	100380-044	Tension Seat Plate Assembly	1
53	100380-043	Tension Bushing	1
54	100379-033	Flange Bolt M8 x 16	3
55	100380-074	Bolt M8 x 90	3
56	100380-075.48	Small Belt Cover Assembly	1
57	100380-077	Flat Key 5 x 5 x 25	1
58	100380-078	Big Belt Wheel	1
59	100380-079.48	Small Belt Cover Protector Assembly	1

GEAR WORM DIAGRAM

Figure D

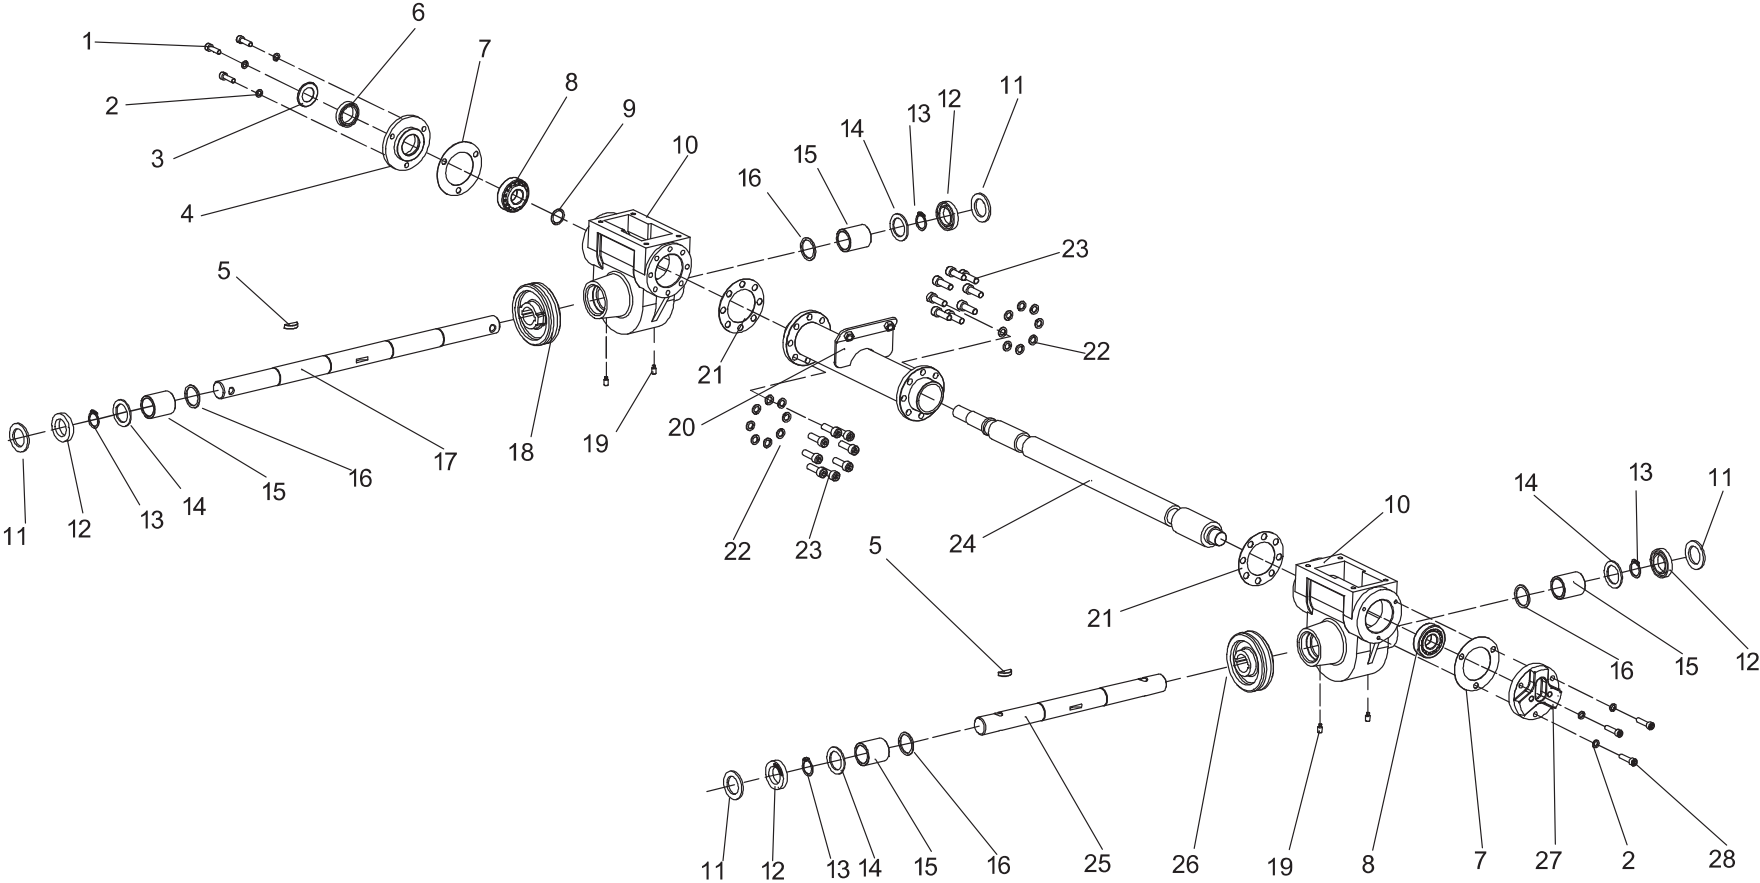


GEAR WORM PART LIST

#	Part Number	Description	Qty.
1	100379-005	Screw M6 x 20	3
2	100380-058	Spring Washer Ø6	6
3	100380-152	Front Dustproof Cover	1
4	100380-125.2	Front Cover	1
5	100380-099	Semicircle Key	2
6	100380-126	Framework Oil Seal Ø20 x Ø35 x 7	1
7	100380-127	Gaskets 1	2
8	100380-128	Cone Needle Bearing 30204	2
9	100380-129	Adjusting Shim	1
10	100380-142.2	Gear worm Box	2
11	100380-154	Dustproof Cover	4
12	100380-090	Framework Oil Seal Ø25 x Ø40 x 7	4
13	100380-088	Circlip 25	4
14	100380-130	Washer Ø26 × Ø37 × 2	4
15	100380-131	Shaft Sleeve	4
16	100380-132	Washer Ø26 × Ø31.6 × 1.5	4
17	100380-133	Wheel Shaft	1
18	100380-138	Worm Wheel	1
19	100380-153	Set Screw M6 x 12	4
20	100380-141.2	Gear Worm Box Connect Tube	1
21	100380-155	Round Paper Gasket II	2
22	100379-029	Spring Washer Ø8	16
23	100380-144	Screw M8 x 25	16
24	100380-139	Worm Wheel Shaft	1
25	100380-136	Tiller Shaft	1
26	100380-137	Tiller Worm Wheel	1
27	100380-140.2	Rear Cover	1
28	100380-104	Screw M6 x 25	3

ENGINE PART DIAGRAM

Figure E

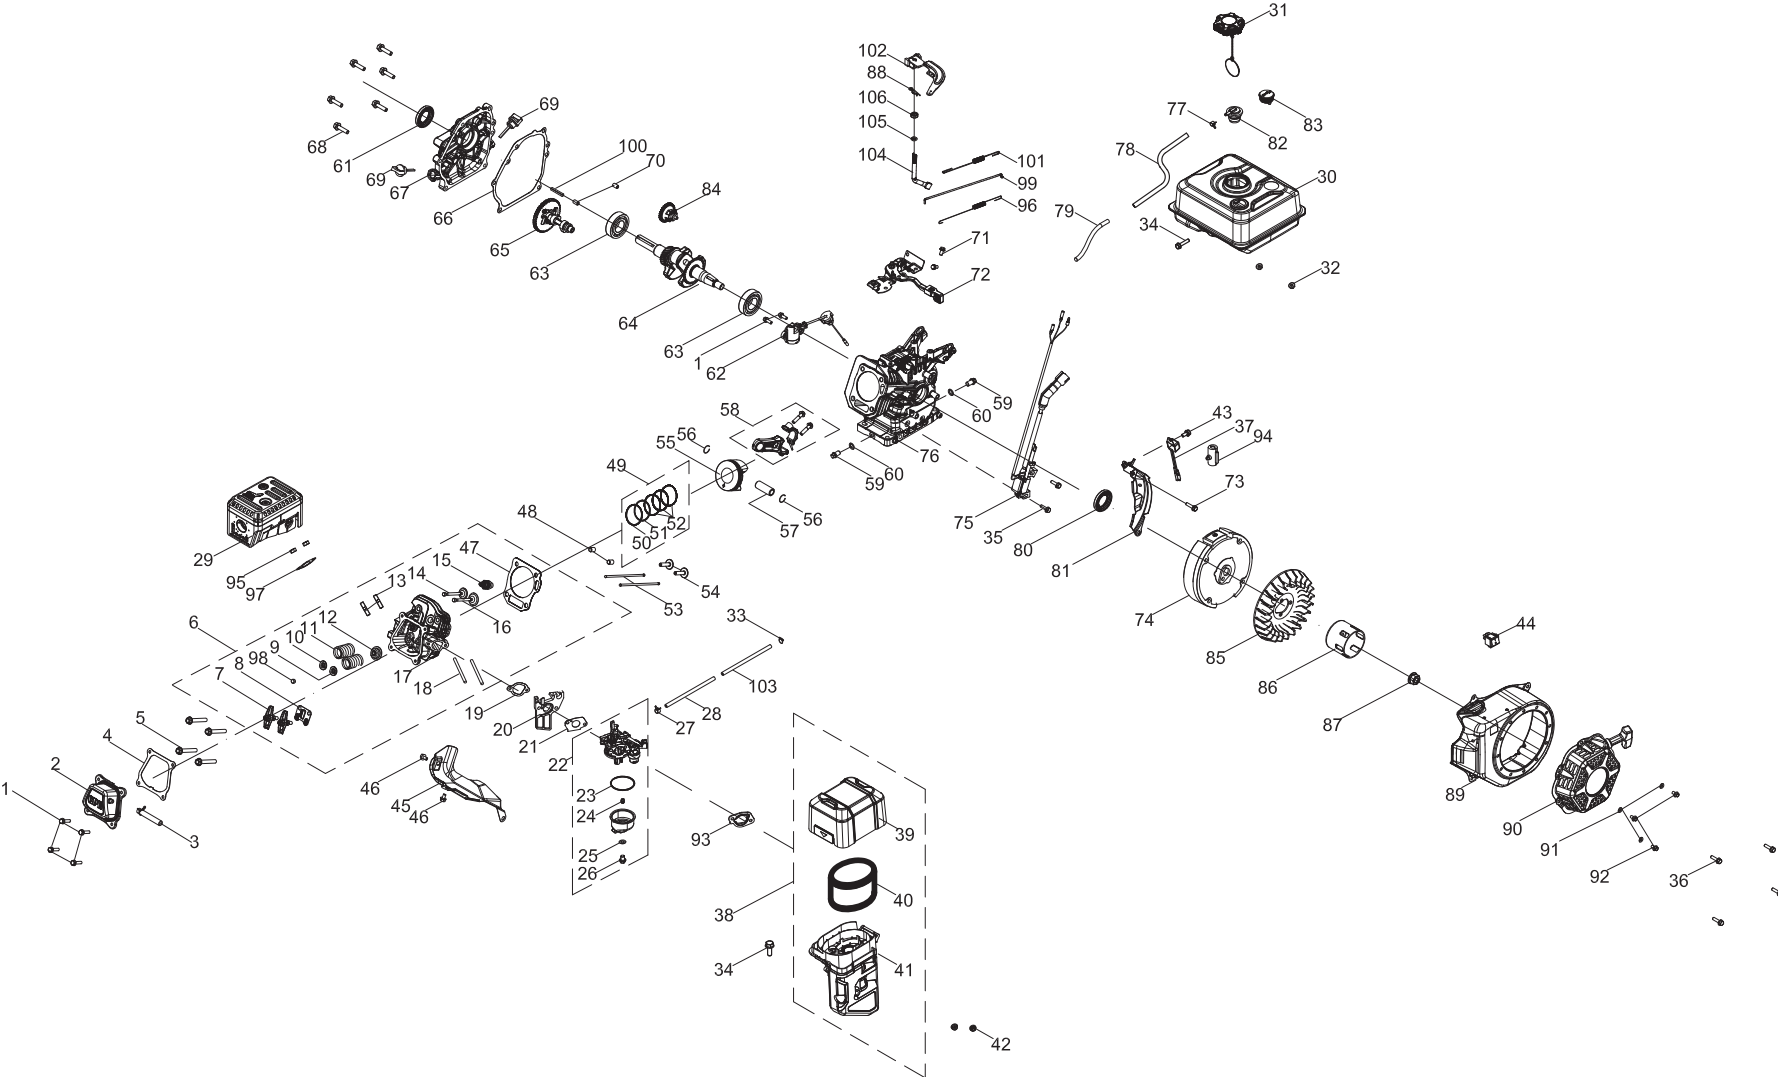

ENGINE PART LIST

#	Part Number	Description	Qty.
1	100011264-0003	Flange Bolt M6 x 16, GB5789	6
2	100002335	Cylinder Head Cover(Cpe)	1
3	100002832	Breather Tube	1
4	100079562	Gasket, Cylinder Head Cover	1
5	100002463-0001	Flange Bolt M8 x 65	4
6	100746583	Cylinder Head Assembly	1
7	100004420	Rocker Arm	2
8	100050881	Guide Plate, Push Rod	1
9	100004580	Valve Spring Seat, Intake	1
10	100004585	Valve Spring Seat, Exhaust	1
11	100004564	Spring Valve	2
12	100004600	Oil Seal, Intake Valve	1
13	100010387	Stud Bolt M8 x 34	2
14	100057969	Exhaust Valve	1
15	100009378	Spark Plug F6RTC	1
16	100004522	Intake Valve	1
17	100002378	Cylinder Head	1
18	100733507	Stud Bolt M6 x 117	2
19	100078607	Gasket, Insulator	1
20	100005599	Insulator, Carburetor	1
21	100078606	Gasket, Carburetor	1
22	100732679-0001	Carburetor Assembly	1
23	100005717	O-Ring, Fuel Bowl	1
24	100073724	Main Jet Standard (74)	1
	100092470	Main Jet Altitude 1000-3000m (72)	/
25	100006037	Gasket, Fuel Bowl Mounting Bolt	1
26	100005725	Mounting Bolt, Fuel Bowl	1
27	100005149	Clamp Ø7.5	1
28	100063788	Fuel Tube, Ø4 x Ø8 x 157	1
29	100730892	Muffler	1

#	Part Number	Description	Qty.
30	100730667-0002	Fuel Tank Assembly	1
31	100730969	Fuel Tank Cap	1
32	100011452-0003	Flange Nut M6	2
33	100005137	Clamp	1
34	100011269-0003	Flange Bolt M6 x 28	2
35	100011268-0003	Flange Bolt M6 x 25	2
36	100011262-0003	Flange Bolt M6 x 14	4
37	100010040	Oil Sensor	1
38	100732678	Air Cleaner Assembly	1
39	100734201	Air Cleaner Cover	1
40	100746758	Air Cleaner Element	1
41	100734203	Air Cleaner Base	1
42	100011463-0004	Flange Nut M6, GB6177.1	2
43	100011261-0004	Flange Bolt M6 x 12	1
44	100733063-0001	Switch	1
45	100007083	Air Guide, Lower	1
46	100011260-0005	Flange Bolt M6 x 10, GB5789	2
47	100732676	Gasket, Cylinder Head	1
48	100010558	Dowel Pin Ø10 x 16	2
49	100003245	Piston Ring Set	1
50	100003150	1st Piston Ring	1
51	100003191	2nd Piston Ring	1
52	100003283	Oil Ring	1
53	100077152	Push Rod	2
54	100004262	Lifter, Valve	2
55	100086253	Piston	1
56	100003221	Circlip, Wrist Pin	2
57	100003120	Wrist Pin	1
58	100003446	Connecting Rod Assembly	1
59	100010272	Drain Bolt, M10 x 1.25 x 15	2

#	Part Number	Description	Qty.
60	100010459	Washer Ø10 x 1.5 x Ø16	2
61	100017651	Oil Seal Ø25 x Ø41.25 x 6, Spiral Grain	1
62	100010011	Oil Level Sensor	1
63	100010680	Bearing, 6205	2
64	100023653	Crankshaft	1
65	100079561	Camshaft	1
66	100052829	Gasket, Crankcase Cover	1
67	100002975	Cover, Crankcase	1
68	100011319-0001	Flange Bolt M8 x 32	6
69	100004105-0006	Oil Dipstick Assembly	2
70	100010550	Dowel Pin Ø8 x 14	2
71	100011215-0001	Flange Bolt M6 x 12	2
72	100732677-0001	Control Assembly	1
73	100011266-0004	Flange Bolt M6 x 20	1
74	100009503	Flywheel	1
75	100733580	Ignition Module	1
76	100135103	Crankcase	1
77	100005148	Clamp Ø8	1
78	100730897	Fuel Hose 1	1
79	100748283	Sheath, Vent Tube	1
80	100017644	Oil Seal Ø25 x Ø41.25 x 6	1
81	100150079	Lower Guard	1
82	100008968	Reversal Valve	1
83	100730895	Fuel Gauge	1
84	100008296	Gear, Governor	1
85	100007028	Cooling Fan	1
86	100007550	Pulley, Starter	1
87	100011459-0003	Flange Nut M14 x 1.5	1
88	100007986	Cotter, Governor Shaft	1
89	100734204-0001	Fan Cover, Yellow 109 C	1
90	100156547-0001	Recoil Starter	1
91	100010894-0002	Washer Ø6	3

#	Part Number	Description	Qty.
92	100011565-0002	Flange Bolt M6 x 10	3
93	100005629	Gasket, Air Cleaner Base	1
94	100000657	Clip	1
95	100011422-0004	Flange Nut M8, GB6170	2
96	100752248	Spring, Throttle Return	1
97	100006526	Gasket, Muffler	1
98	100004588	Retainer, Valve	1
99	100007947	Rod, Governor	1
100	100010630	Key, 4.75 x 4.75 x 42	1
101	100735999	Spring, Governor	1
102	100039298	Arm, Governor	1
103	100009151	Fuel Hose Jacket 2	1
104	100007975	Governor Shaft	1
105	100010113	Sealing Ring, Ø5.2 x 1.9	1
106	100017630	Oil Seal Ø6 x Ø11 x 4	1