




Champion Power Equipment, Inc.

MODEL #201420

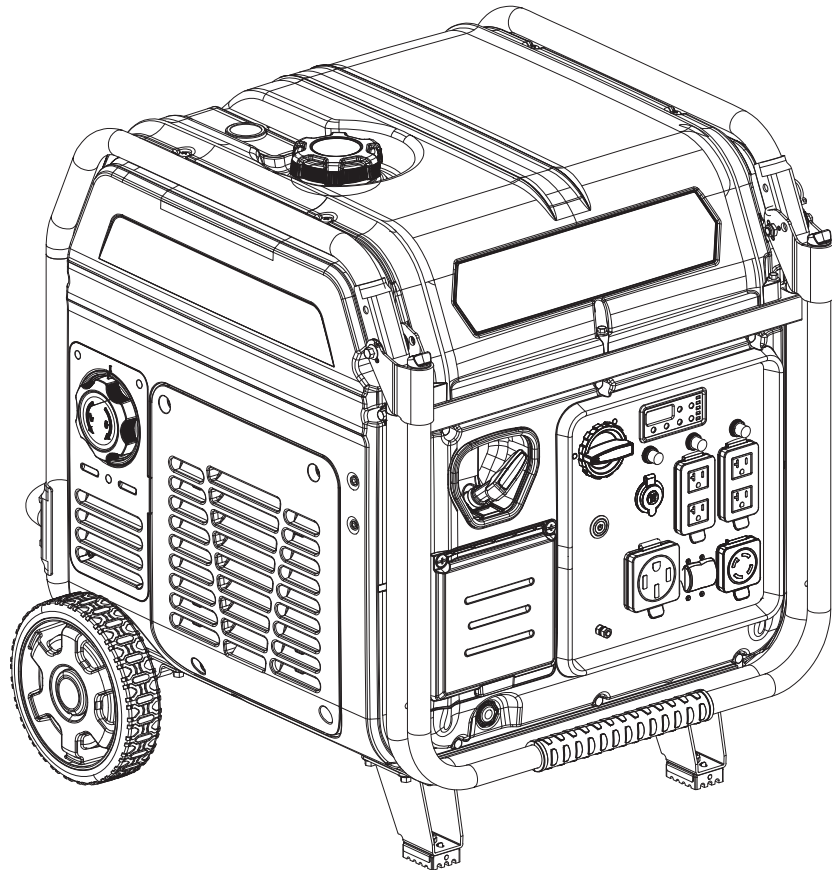

PARTS INFORMATION

11,000W WIRELESS REMOTE START INVERTER GENERATOR

SERIAL NUMBER RANGE: ALL



To order replacement parts please visit:
shop.championpowerequipment.com
or call **1-877-338-0999**.

TABLE OF CONTENTS

Generator Parts Diagram	3
Generator Parts List	4
Engine Parts Diagram	6
Engine Parts List	7
Cylinder Head Parts Diagram	9
Cylinder Head Parts List	10
Carburetor Parts Diagram	11
Carburetor Parts List	12
Fuel Tank Parts Diagram	13
Fuel Tank Parts List	14
Control Panel Parts Diagram	15
Control Panel Parts List	16
Frame Assembly Parts Diagram	17
Frame Assembly Parts List	18
Wiring Diagram	19

GENERATOR PARTS DIAGRAM

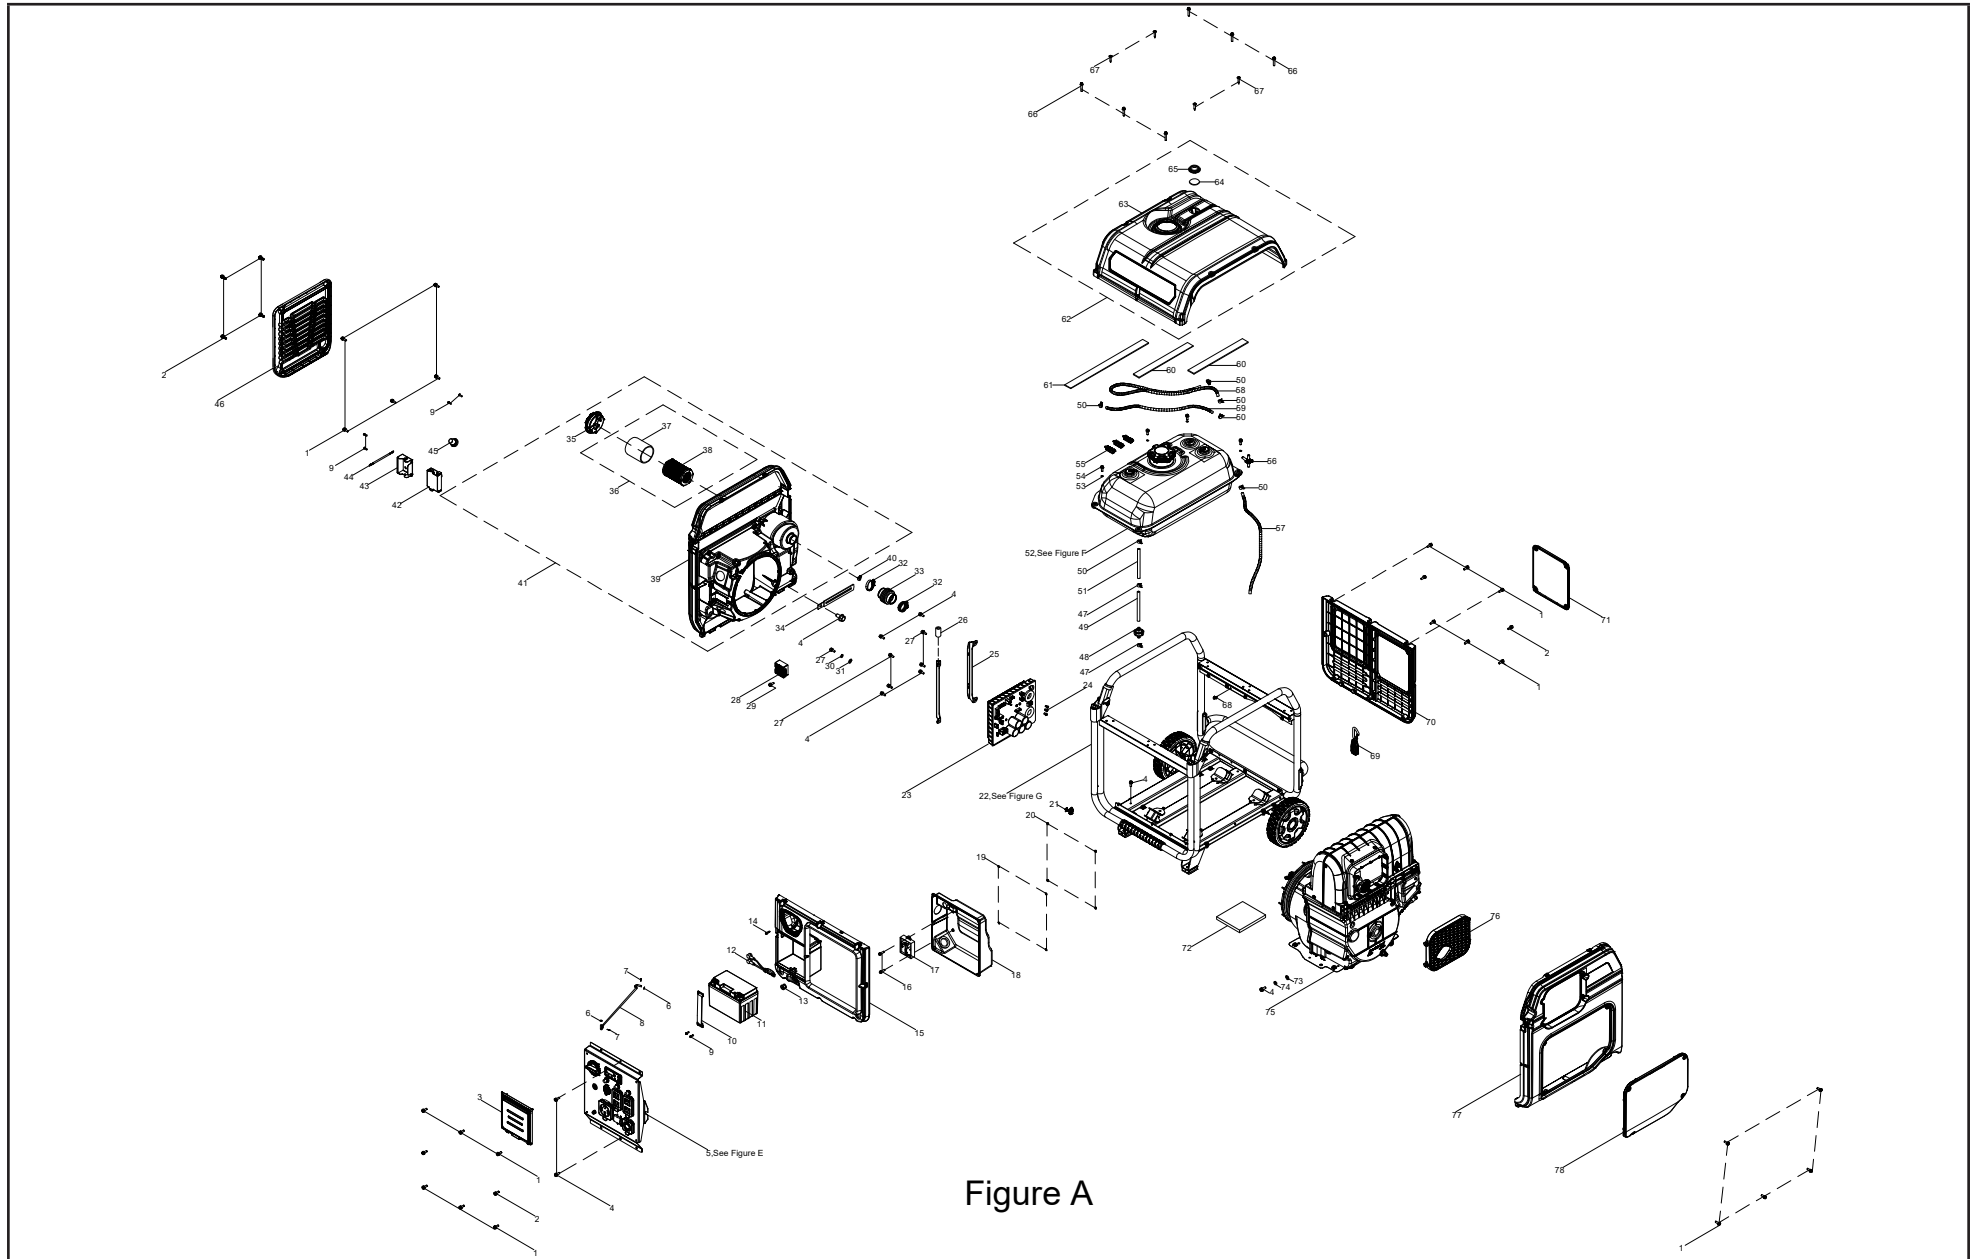


Figure A

GENERATOR PARTS LIST

#	Part Number	Description	Qty.
1	100011266-0003	M6 x 20 Flange Bolt	22
2	100798578-0001	M6 x 25 Flange	8
3	100797454-0001	Battery Window	1
4	100011261-0014	M6 x 12 Flange Bolt	9
5	100797502-0001	Panel Assembly, See Figure F	1
6	100011017-0002	Toothed Lock Washer Ø5	2
7	100762648	Pin	2
8	100748321	Torsion Bar	1
9	100032967-0003	Self-tapping Screw ST4.2 x 16	6
10	100748329	Tape	1
11	100766062-0004	Battery, 12Ah	1
12	100757075-0001	Battery Connecting Wire	1
13	100748502	Rubber Plug	1
14	100010946-0010	M4 x 10 Screw	1
15	100797453-0001	Front Cover	1
16	100011520-0003	M5 x 16 Small Flange Bolt	2
17	100797106	Start/Stop Control Module	1
18	100797449-0001	Protect Panel	1
19	100010907-0002	Flat Washer Ø4	4
20	100011450-0003	M4 Flange Nut	4
21	100732285	Clip Ø23	1
22	100797465	Frame Assembly, See Figure G	1
23	100796437	Inverter Module, 120V 240V 60Hz	1
24	100010945-0007	M4 x 8 Screw	3
25	100748324	Inverter Module Bracket	2
26	100757920	Protective Jacket, Ø15.5 x Ø26 x 50	1
27	100011249-0004	M5 x 12 Flange Bolt	5
28	100760755	Rectifier Bridge, Capacitance	1
29	100011262-0004	M6 x 14 Flange Bolt	1
30	100010885-0004	Spring Washer Ø5	1

#	Part Number	Description	Qty.
31	100010919-0002	Flat Washer Ø5	1
32	100760116	Clamp	2
33	100748292	Air Filter Elbow Pipe	1
34	100000655	Clip B	1
35	100799640	Air Filter Knob	1
36	100757988	Air Filter Assembly	1
37	100757990	Air Filter Cover	1
38	100757989	Air Filter Element	1
39	100799639	Left Housing	1
40	100771620	Clamp Ø8.5	1
41	100798277-0001	Housing Assembly, Left	1
42	5.1830.022	CO Shutdown Module	1
43	100797085	Screening Box	1
44	100781624	Grounding Wire	1
45	100771350	Wire Jacket	1
46	100798278-0001	Intake Louvres	1
47	100005130	Clamp Ø9	2
48	100798967	Fuel Tee Pipe	1
49	100799401	Tube Sheath, Silicon Resin	1
50	100005148	Clamp Ø8	6
51	100799400	Fuel Tube, L=105mm	1
52	100797464	Fuel Tank Assembly, See Figure E	1
53	100010439-0002	Washer Ø6.5 x 2 x Ø25	4
54	100011221-0003	M6 x 28 Flange Bolt	4
55	100762153	Clip	3
56	100160310	Fuel Tee Pipe	1
57	100797081	Fuel Tube, L=450mm	1
58	100777501	Fuel Tube Ø4 x Ø8 x Ø1000	1
59	100733866	Fuel Tube, L=600mm	1
60	100798580	Foam tape 1	2

#	Part Number	Description	Qty.
61	100798581	Foam tape 2	1
62	100797458-0001	Top Cover	1
63	100799641	Head Cover	1
64	100714560	Lamina Lucida	1
65	100714561-0001	Rubber Ring	1
66	100055584-0003	M6 x 32 Flange Bolt	6
67	100775279-0001	M6 x 30 Bolt	4
68	100000667	Clip	1
69	100729547	Remote Control	1
70	100797450-0001	Rear Cover	1
71	100797452-0001	Oil Window	1
72	100799432	Cotton	1
73	100010920-0002	Flat Washer Ø6	1
74	100010886-0004	Spring Washer Ø6	1
75	1ZC7DC083	Engine, See Figure B	1
76	100798280-0001	Service Window	1
77	100798282-0001	Right Cover Board Assembly	1
78	100798279-0002	Right Cover Board	1

ENGINE PARTS DIAGRAM

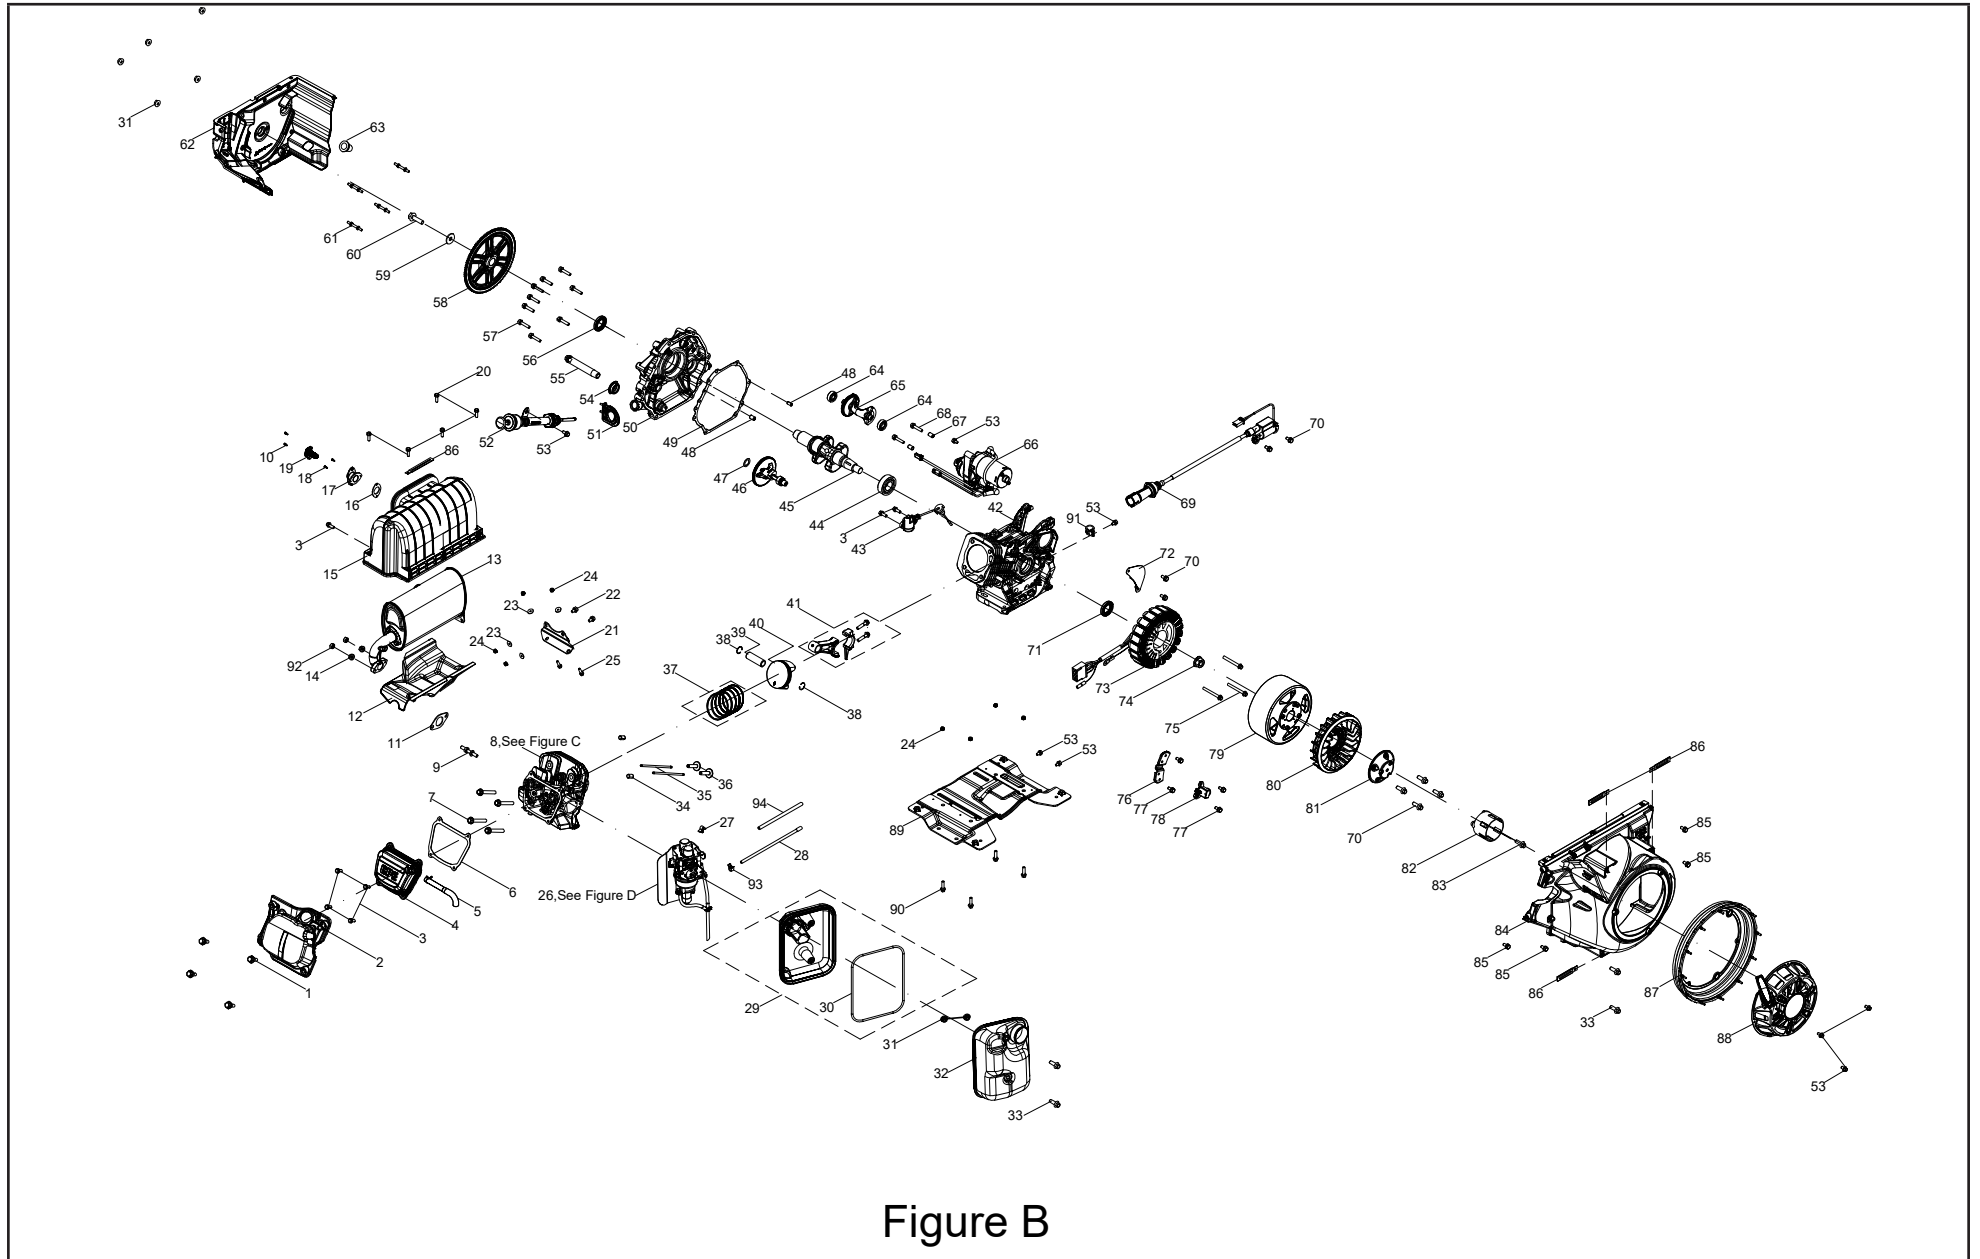


Figure B

ENGINE PARTS LIST

#	Part Number	Description	Qty.
1	100081994	Alignment Bolt	4
2	100797430	Valve Cover	1
3	100011264-0003	M6 x 16 Flange Bolt	7
4	100794576	Cylinder Head Cover Assembly	1
5	100786754	Breather Tube	1
6	100728729	Cylinder Head Cover Gasket	1
7	100746630	M10 x 1.25 x 87 Flange Bolt	4
8	100797892	Cylinder Head Assembly, See Figure C	1
9	100786755	M6 x 47 Stud Bolt	1
10	100051338-0001	M5 x 12 Flange Bolt	2
11	100006941	Muffler Gasket	1
12	100748126	Shroud	1
13	100748120	Exhaust Muffler Assembly	1
14	100011472-0001	M8 Flange Nut	2
15	100797428	Muffler Guard	1
16	100761994	Muffler Gasket	1
17	100749058	Flange	1
18	100031780-0001	M5 x 16 Flange Bolt	2
19	100154368	Spark Arrester Assembly	1
20	100011276-0003	M6 x 55 Flange Bolt	5
21	100748247	Support Board	1
22	100011313-0004	M8 x 20 Flange Bolt	2
23	100010899-0002	Big Washer Ø8	4
24	100011464-0003	M8 Flange Nut	8
25	100011318-0003	M8 x 30 Flange Bolt	2
26	100797895	Carburetor Assembly, See Figure D	1
27	100000667	Clip Ø8 x 8	1
28	100131883	Fuel Hose	1
29	100748119	Secondary Air Cleaner Seat	1
30	100748291	Sealing Strip Secondary Air Cleaner Cover	1

#	Part Number	Description	Qty.
31	100011463-0002	M6 Flange Nut	7
32	100748290	Cover Secondary Air Cleaner	1
33	100011270-0002	M6 x 30 Flange Bolt	4
34	100010562	Dowel Pin Ø12 x 20	2
35	100728726	Push Rod	2
36	100149154	Valve Lifter	2
37	100003265	Piston Ring Set	1
38	100753097	Circlip	2
39	100143102	Wrist Pin	1
40	100777619	Piston	1
41	100731578	Connecting Rod	1
42	100763709	Crankcase	1
43	100760198	Oil Level Sensor	1
44	100010789	Bearing, TM6207E	1
45	100762106	Crankshaft	1
46	100784080	Camshaft	1
47	100010521-0001	Washer Ø16.2 x 0.3 x Ø24	1
48	100010549	Dowel Pin Ø8 x 12	2
49	100746648	Crankcase Cover Gasket	1
50	100748116	Crankcase Cover	1
51	100748131	Dipstick Seal	1
52	100748129-0004	Oil Dipstick Assembly, Black	1
53	100011260-0005	M6 x 10 Flange Bolt	8
54	100748130	Sealing Washer	1
55	100770912	Oil Drain Pipe	1
56	100017653	Oil Seal Ø35 x Ø52 x 7	1
57	100011323-0001	M8 x 38 Flange Bolt	9
58	100716082	Gear Ring	1
59	100757994	Washer Ø12.5 x 2.5 x Ø34	1
60	100757973	M12 x 35 Bolt	1

#	Part Number	Description	Qty.
61	100010288	M6 x 59.5 Stud Bolt	4
62	100797426	Blower Housing	1
63	100771350	Wire Jacket	1
64	100010742	Bearing, 6202-P63	2
65	100786703	Balance Shaft	1
66	100797141	Starter	1
67	100010556	Dowel Pin Ø10 x 12	2
68	100720810-0001	M8 x 50 Flange Bolt	2
69	100797142	Ignition Coil	1
70	100011266-0004	M6 x 20 Flange Bolt	8
71	100017649	Oil Seal Ø35 x Ø52 x 7	1
72	100712964	Wire Board	1
73	100094333	Stator Assembly, Fe, Ø179 x 60 mm	1
74	100011460-0001	M16 x 1.5 Flange Nut	1
75	100064845-0001	M8 x 75 Small Flange Bolt	3
76	100712963	Trigger Support	1
77	100055591-0006	M6 x 12 Small Flange Bolt	4
78	100765363	Trigger	1
79	100781533	Rotor Assembly, Permanent Magneto, Ø71 mm	1
80	100797429	Cooling Fan	1
81	100760669	Starter Pulley	1
82	100712965	Starter Cup	1
83	100011231-0001	M8 x 20 Flange Bolt	1
84	100797427	Fan Cover, Black	1
85	100011284-0003	M6 x 100 Flange Bolt	4
86	100000655	Wire Clip B	4
87	100748293	Recoil Starter Sealing Strip	1
88	100797143-0001	Recoil Starter Assembly	1
89	100748123	Shroud	1
90	100088591-0001	Bolt M8 x 35 Flange Bolt	4
91	100756917	Clamp Ø18	1

#	Part Number	Description	Qty.
92	100011422-0017	M8 Flange Nut	2
93	100005148	Clamp Ø8	1
94	100131884	Tube Sheath, Silicon Resin	1

CYLINDER HEAD PARTS DIAGRAM

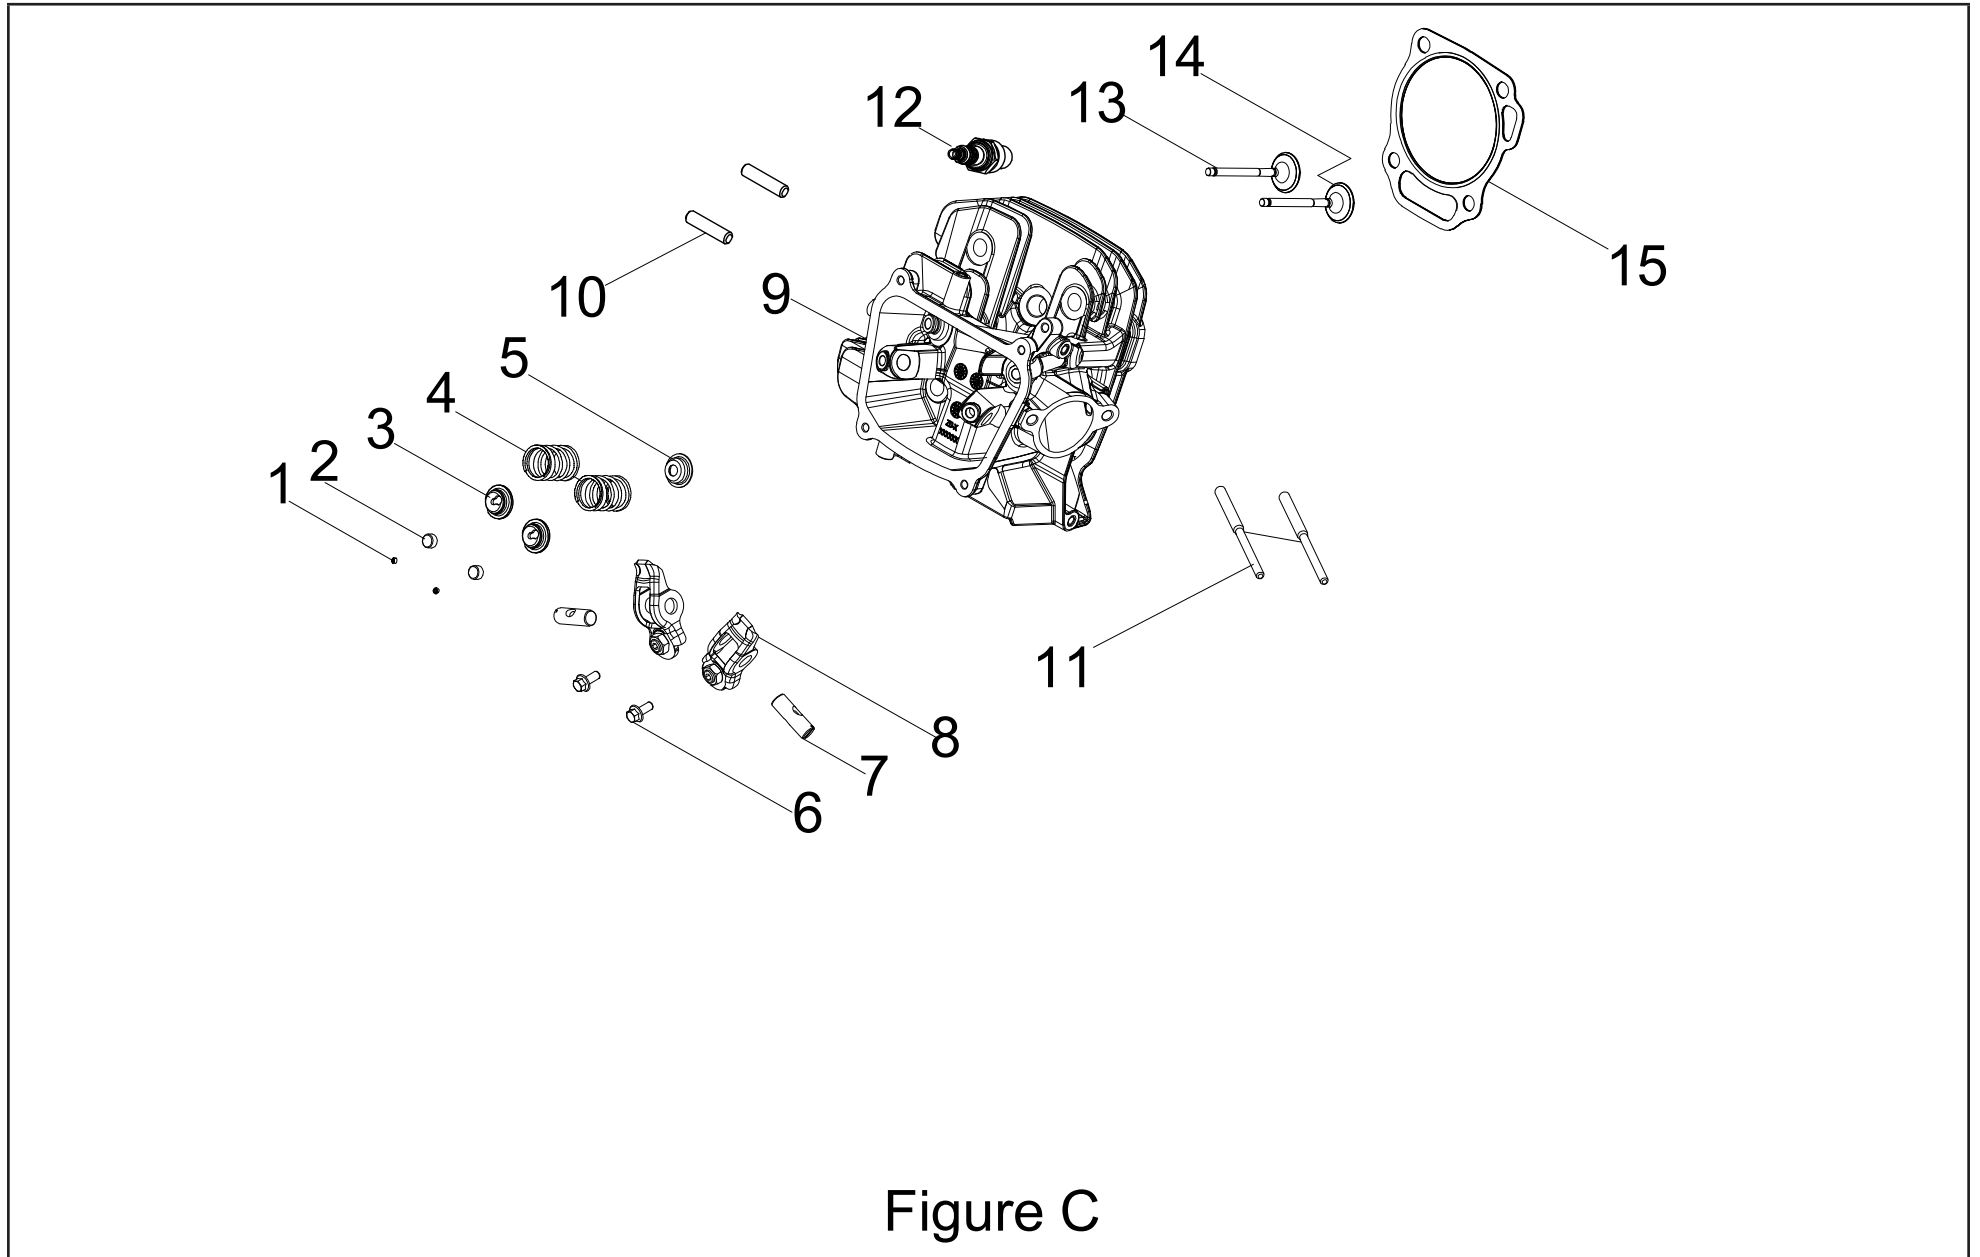


Figure C

CYLINDER HEAD PARTS LIST

#	Part Number	Description	Qty.
1	100004576	Valve Collet	4
2	100004589	Exhaust Valve Adjust Cap	2
3	100004516	Valve Spring Seat, 182F	2
4	100067633	Spring Valve	2
5	100004602	Oil Drip Pan	1
6	100011518-0001	M5 x 12 Small Flange Bolt	2
7	100765720	Rocker Arm Shaft	2
8	100728722	Rocker Arm Assembly	2
9	100787693	Cylinder Head	1
10	100798372	M8 x 56 Stud Bolt	2
11	100099271	M6-8 x 115 Stud Bolt	2
12	100009377	Spark Plug(E7RTC)	1
13	100728728	Valve Exhaust	1
14	100728727	Valve Intake	1
15	100753098	Cylinder Head Gasket	1

CARBURETOR PARTS DIAGRAM

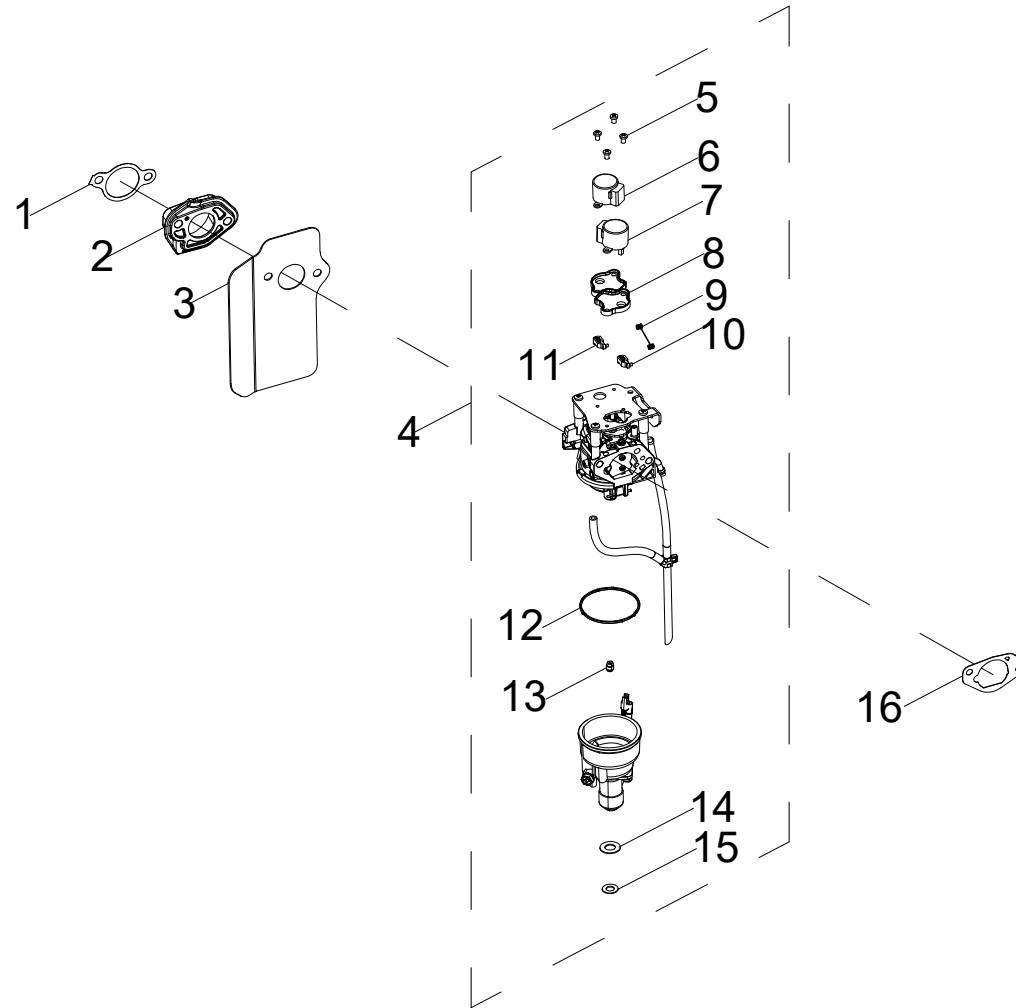


Figure D

CARBURETOR PARTS LIST

#	Part Number	Description	Qty.
1	100728730	Insulator Gasket	1
2	100786753	Carburetor Insulator	1
3	100763708	Carburetor Gasket	1
4	100797108	Carburetor	1
5	100051029-0002	M4 x 6 Screw	4
6	100727606	Stepper Motor	1
7	100720885	Stepper Motor	1
8	100757187	Insulating Board	2
9	100052405	Spring	2
10	100041167	Guide Clamp 1	1
11	100050036	Guide Clamp 2	1
12	100085766	Fuel Bowl Mounting Bolt Gasket	1
13	100777320	Main Jet Standard (100)	1
	100089154	Main Jet Standard (98)	/
14	100134226	O-Ring 1	1
15	100134227	O-Ring 2	1
16	100717415	Air Filter Base Gasket	1

FUEL TANK PARTS DIAGRAM

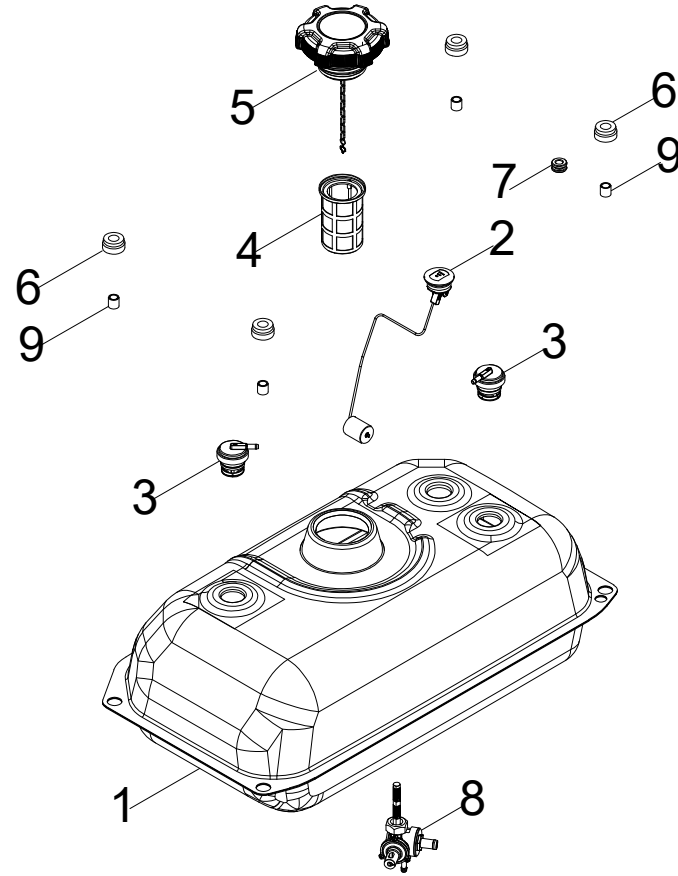


Figure E

FUEL TANK PARTS LIST

#	Part Number	Description	Qty.
1	100797533-0001	Fuel Tank, 23L	1
2	100751383	Fuel Indicator	1
3	100720340	Reversal Valve	2
4	100760633	Fuel Level Filter Assembly	1
5	100142004	Fuel Tank Cap	1
6	100032369	Vibration Mounting, Fuel Tank	4
7	100009075	Vibration Mount	1
8	100798281	Fuel Valve	1
9	100021118	Bushing, Ø12 x Ø9 x 13	4

CONTROL PANEL PARTS DIAGRAM

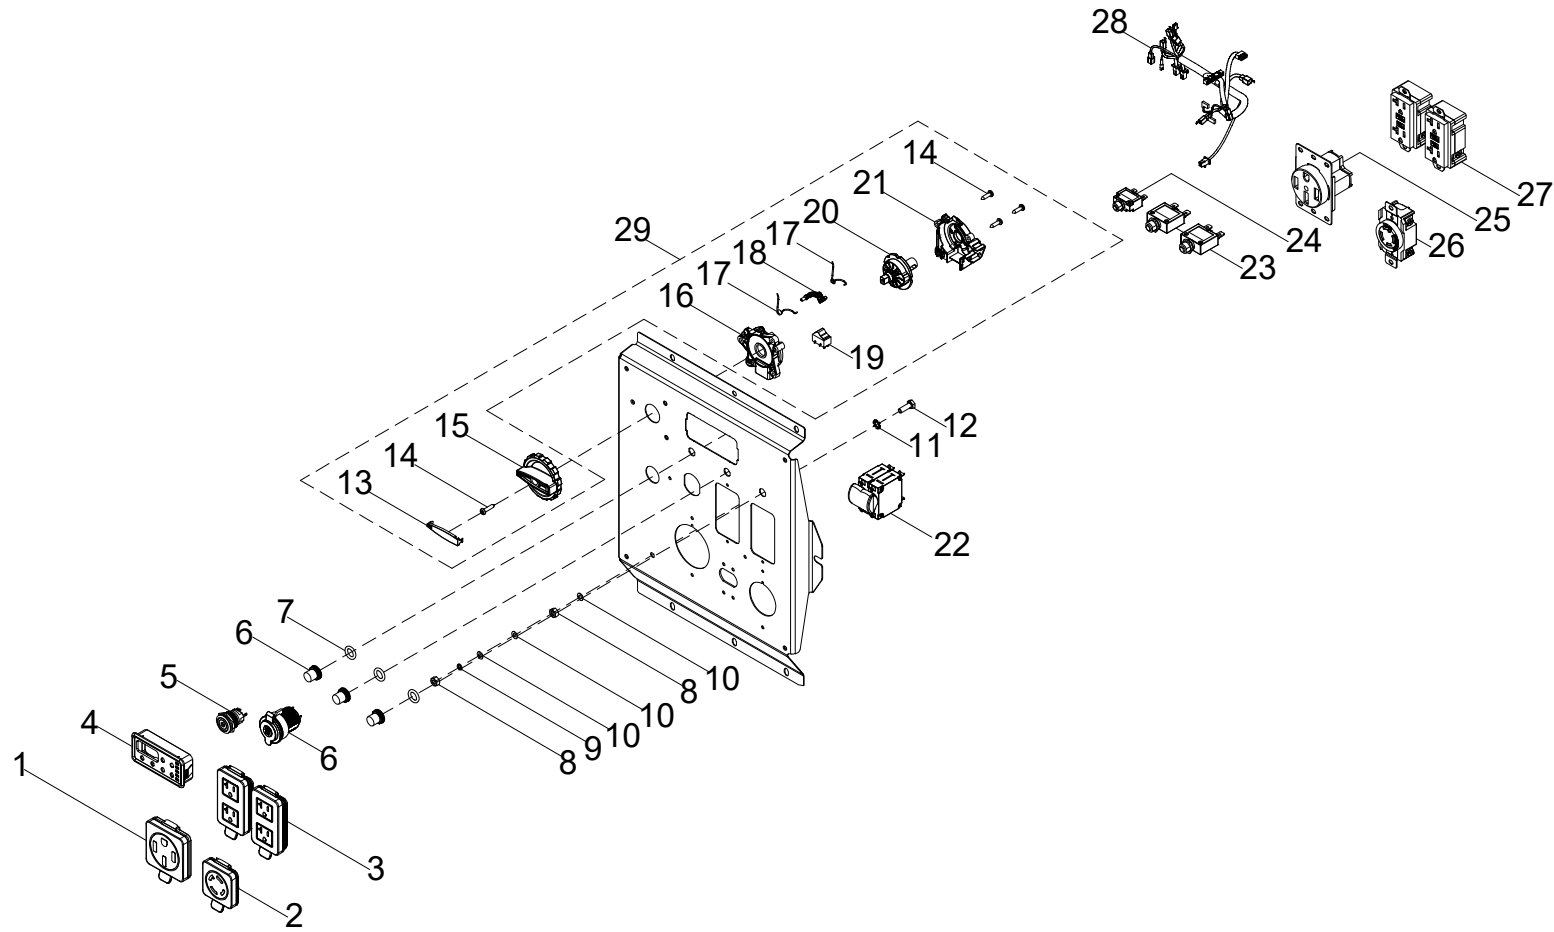


Figure F

CONTROL PANEL PARTS LIST

#	Part Number	Description	Qty.
1	100731570	Receptacle L14-50R	1
2	100731571	Receptacle L14-30R	1
3	100725859	Receptacle 5-20R	2
4	100781222	Intelligauge, INT5DINV	1
5	100730628	One-button Start	1
6	100120180	Circuit Breaker Cover	3
7	100031552	O-Ring	3
8	100011421-0019	M6 Flange Nut	2
9	100010886-0004	Spring Washer Ø6	1
10	100010910-0003	Flat Washer Ø6	3
11	100128826-0001	Toothed Lock Washer Ø6	1
12	100011174-0004	M6 x 20 Flange Bolt	1
13	100712234	Switch cover	1
14	100032967-0002	Self-tapping Screw ST4.2 x 16	4
15	100796838	Switch Lever	1
16	100750672	Upper Cover	1
17	100750660	Switch Limit Swing Spring	2
18	100750661	Switch Limit Block	1
19	100715718	Microswitch	1
20	100796839	Rotating Shaft	1
21	100796840	Lower Cover	1
22	100019957	Breaker	1
23	100019754	20Amp Circuit Breaker, Push Button	2
24	100057719	8Amp Circuit Breaker, Push Button	1
25	100020022	Receptacle L14-50R	1
26	100020023	Receptacle L14-30R	1

#	Part Number	Description	Qty.
27	100052461-0001	Receptacle 5-20R	1
28	100796438	Wire Harness Assembly	1
29	100796837	Switch Dial Assembly	1

FRAME ASSEMBLY PARTS DIAGRAM

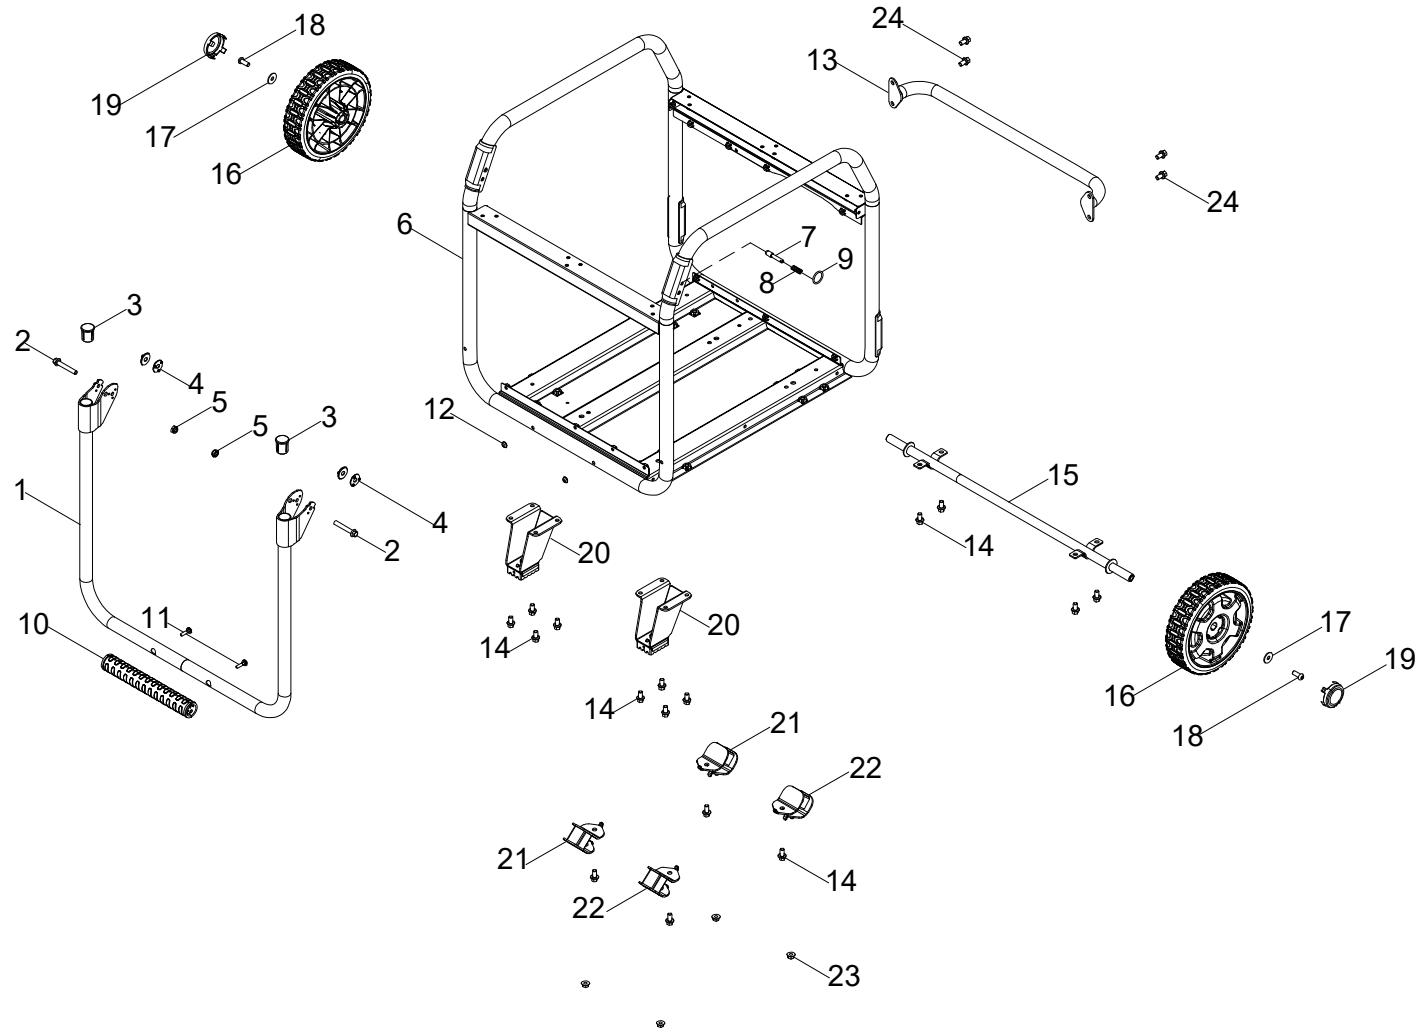


Figure G

FRAME ASSEMBLY PARTS LIST

#	Part Number	Description	Qty.
1	100796469-0001	Handle	1
2	100796110-0001	M8 x 50 Small Flange Bolt	2
3	100020747	Handle Stop Block	2
4	100068791	Washer	4
5	100070851-0001	M8 Flange Nut	2
6	100797082-0001	Frame	1
7	100731909	Pin	1
8	100797461	Spring	1
9	100798579	Chain	1
10	100711157	Handle Grip	1
11	100095857-0005	M4 x 18 Flange Bolt	2
12	100078853	Handle Damping Pad	2
13	100748299-0001	Handrail	1
14	100079508-0002	M8 x 14 Flange Bolt	16
15	100797083-0001	Wheel Shaft Assembly	1
16	100714023-0001	8 In. Wheel, Yellow	2
17	100010505-0002	Washer Ø8.5 x 1.5 x Ø23.5	2
18	100736116-0001	M8 x 16 Screw	2
19	100712243-0001	Tire Cover, Yellow	2
20	100797084-0001	Support Base	2
21	100055088-0001	Vibration Mount 1, Support	2
22	100735650-0001	Vibration Mount 2, Support	2
23	100011464-0006	M8 Flange Nut	4
24	100079508-0003	M8 x 14 Flange Bolt	4

WIRING DIAGRAM

