




Champion Power Equipment, Inc.

MODEL #201393

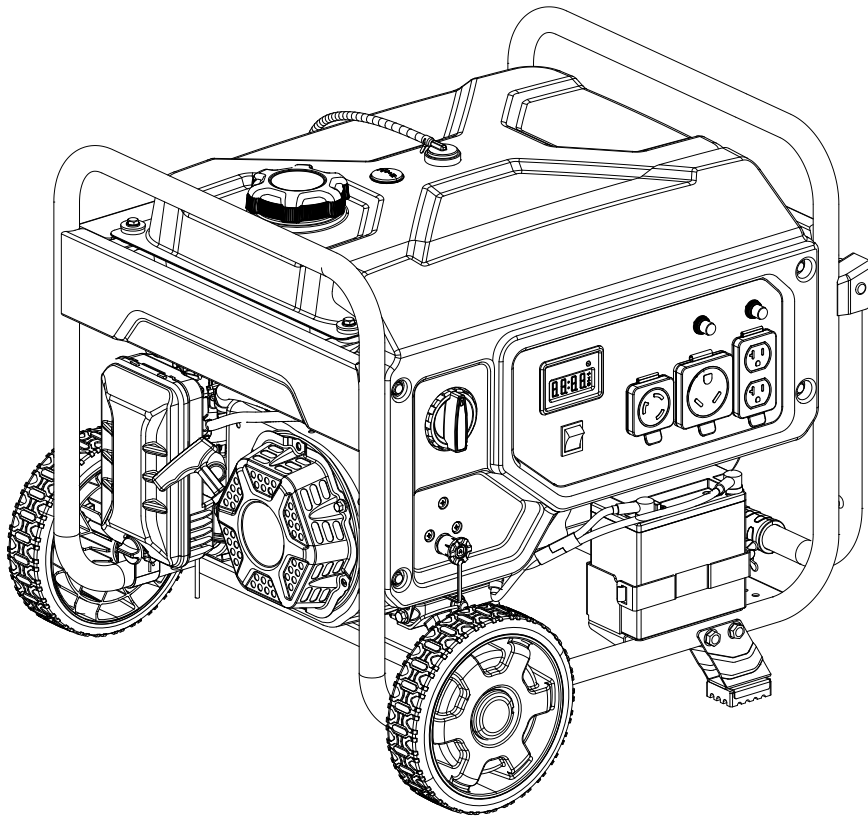

PARTS INFORMATION

3800W DUAL FUEL ELECTRIC START GENERATOR

SERIAL NUMBER RANGE: ALL



To order replacement parts please visit:
shop.championpowerequipment.com
or call **1-877-338-0999**.

TABLE OF CONTENTS

Generator Parts Diagram	3
Generator Parts List	4
Engine Parts Diagram	6
Engine Parts List	7
Cylinder Head Parts Diagram	9
Cylinder Head Parts List	10
Carburetor Parts Diagram	11
Carburetor Parts List	12
Alternator Parts Diagram	13
Alternator Parts List	14
Fuel Tank Parts Diagram	15
Fuel Tank Parts List	16
Control Panel Parts Diagram	17
Control Panel Parts List	18
Frame Assembly Parts Diagram	19
Frame Assembly Parts List	20
Wiring Diagram	21

GENERATOR PARTS DIAGRAM

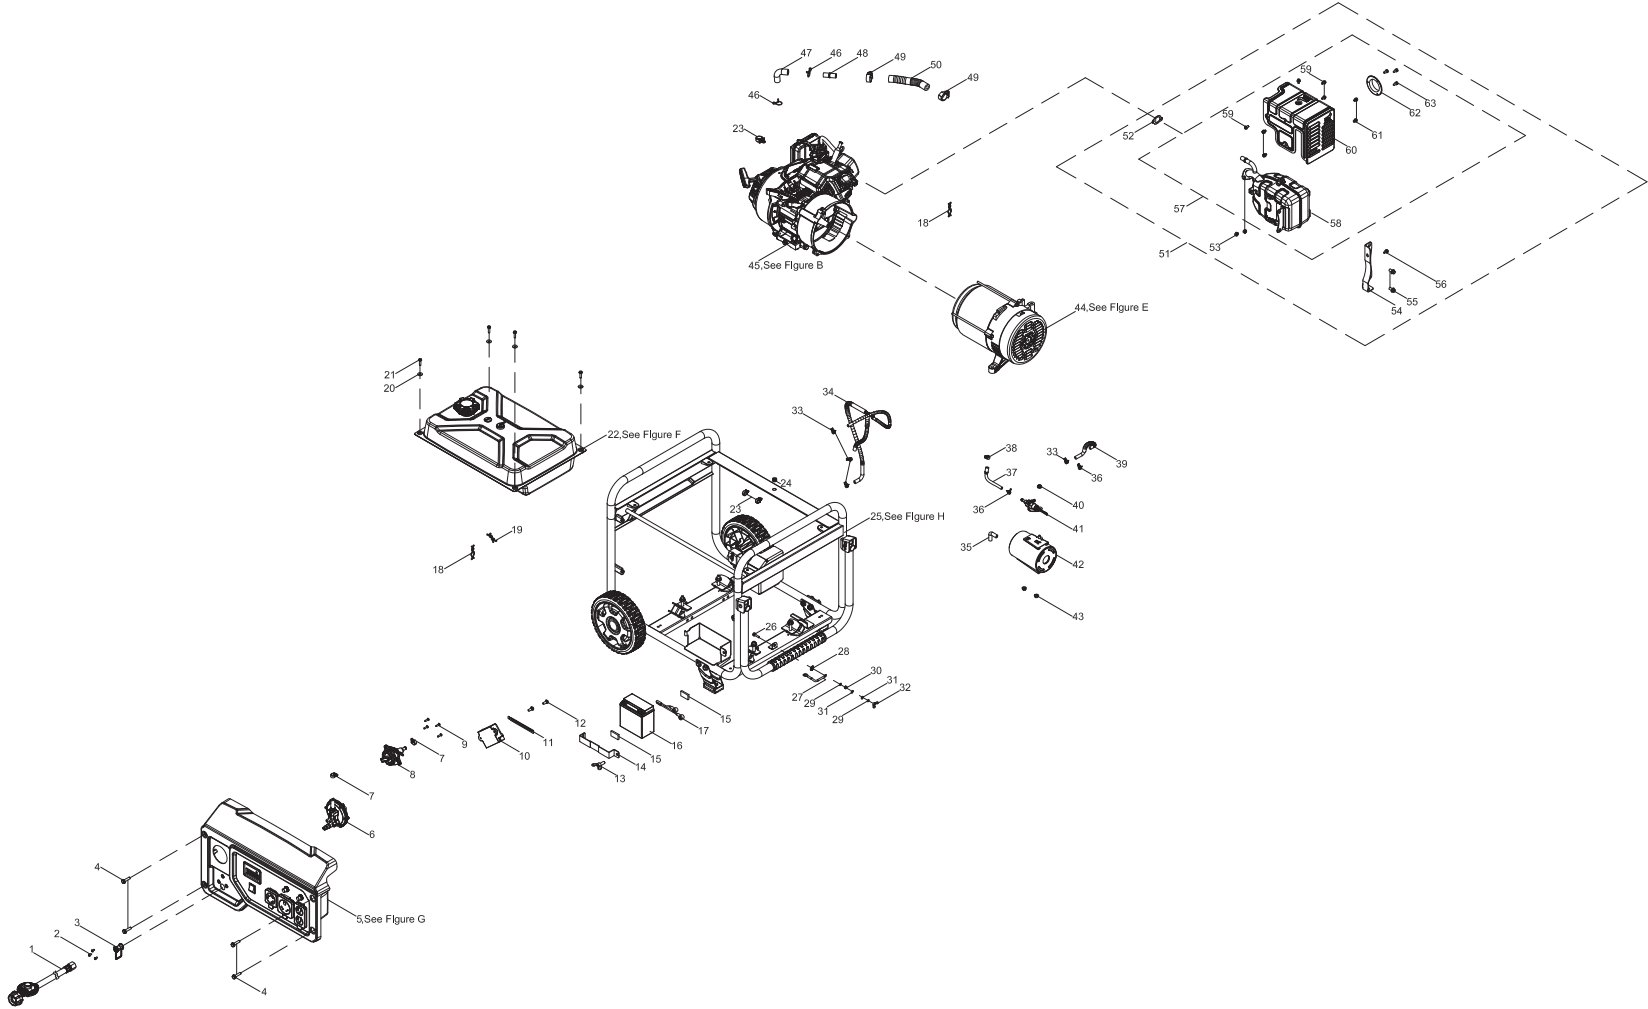


Figure A

GENERATOR PARTS LIST

#	Part Number	Description	Qty.
1	100719472-0001	LPG Hose With Regulator, 2m x 5/16" QC	1
2	100713896-0001	Screw M5 x 16	3
3	100163911	Rubber Cover, LPG Regulator	1
4	100011264-0002	Flange Bolt M6 x 16	4
5	100796349	Control Panel Assembly, See Figure G	1
6	100814202	LPG Regulator Assembly	1
7	100159468-0001	Clamp, Fuel Hose	2
8	100799947	Fuel Valve Assembly	1
9	100093250-0002	Self-tapping Screw ST4.8 x 20	4
10	5.1830.022	CO Shutdown Module	1
11	100062546	Wire Clip B	1
12	100010954-0002	Screw M5 x 12	2
13	100090978	Butterfly Type Bolt M6 x 16	1
14	100099572-0001	Pressing Plate, Battery	1
15	100143536	Rubber Mat	2
16	100122390-0003	Battery, 12V 9Ah	1
17	100752661	Battery Connecting Wire 2	1
18	100714686	Clamp 2	2
19	100000658	Clamp	1
20	100010439-0001	Washer Ø6.5 x 2 x Ø25	4
21	100011268-0002	Flange Bolt M6 x 25	4
22	100735358	Fuel Tank Assembly, See Figure F	1
23	100000671	Clamp Ø13	2
24	100009074	Rubber Damper	1
25	100814203	Frame Assembly, See Figure H	1
26	100011269-0003	Flange Bolt M6 x 28	1
27	100009983	Grounding Wire	1
28	100128826-0001	Lock Washer Ø6, Toothed	1
29	100010886-0004	Spring Washer Ø6	2
30	100011421-0003	Flange Nut M6, GB6170	1

#	Part Number	Description	Qty.
31	100010920-0002	Flat Washer Ø6	2
32	100010828-0002	Butterfly Type Nut M6	1
33	100005138	Clamp Ø9.5 x 8	4
34	100777338	Fuel Hose	1
35	100808535	Tube, Carbon Canister	1
36	100755642	Clamp Ø8.5 x 8	2
37	100777343	Fuel Hose 2	1
38	100005159	Clamp Ø10.5 x 8	1
39	100777342	Fuel Hose 1	1
40	100011452-0003	Lock Nut M6, Flange	1
41	100804035	Solenoid Valve	1
42	100775828	Carbon Canister	1
43	100011452-0002	Flange Nut M6, GB6177.1	2
44	100775260	Alternator Assembly, See Figure E	1
45	1ZC7DC036	Engine, 224 cc	1
46	100005156-0001	Clamp 1	2
47	100774698	Air Valve Tube	1
48	100774696	Air Tube	1
49	100719591	Clamp, Fuel Hose	2
50	100774699	Fuel Hose Ø12.7 x Ø21.3 x 135	1
51	100814201	Muffler Assembly	1
52	100757369	Gasket, Muffler	1
53	100011422-0004	Flange Nut M8	2
54	100751213-0001	Muffler Bracket	1
55	100011230-0002	Flange Bolt M8 x 16, GB5787	2
56	100011261-0004	Flange Bolt M6 x 12	1
57	100774690	Muffler Subassembly	1
58	100776885	Muffler	1
59	100097575-0002	Flange Bolt M6 x 10	3
60	100724737	Muffler Guard	1

#	Part Number	Description	Qty.
61	100721012-0002	Flange Bolt M6 x 8, QC340	5
62	100724738	Spark Arrester Assembly	1
63	100147110-0002	Flange Bolt M4 x 8	3

ENGINE PARTS DIAGRAM

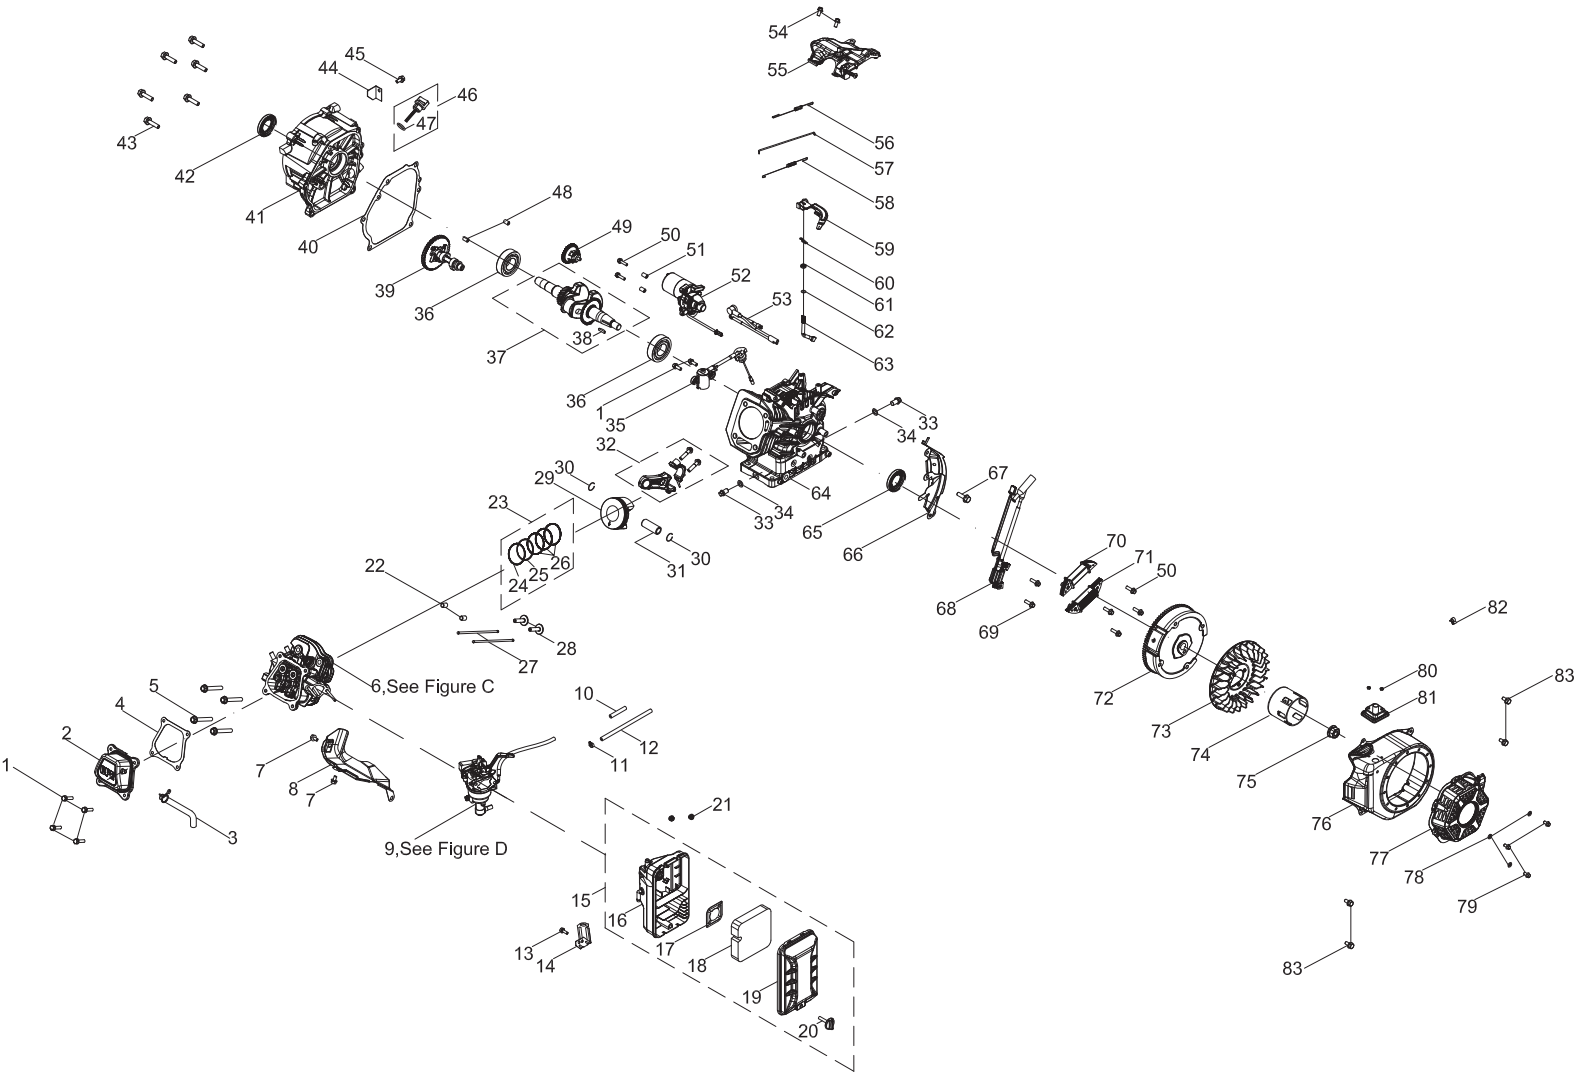


Figure B

ENGINE PARTS LIST

#	Part Number	Description	Qty.
1	100011264-0003	Flange Bolt M6 x 16, GB5789	6
2	100002335	Cylinder Head Cover(Cpe)	1
3	100719261	Breather Tube	1
4	100079562	Gasket, Cylinder Head Cover	1
5	100002464-0001	Flange Bolt M8 x 60	4
6	100724693	Cylinder Head Assembly - See Figure C	1
7	100011260-0005	Flange Bolt M6 x 10, GB5789	2
8	100774802	Air Guide, Lower	1
9	100811300	Carburetor Assembly - See Figure D	1
10	100713891	Sleeve, Fuel Hose, Ø20 x 150	1
11	100159468-0001	Clamp, Fuel Hose	1
12	100724125	Tube, Fuel, Ø9 x Ø17 x 320	1
13	100011570-0001	Flange Bolt M6 x 12, GB16674	1
14	100021030	Bracket, Air Cleaner Support	1
15	100731202	Air Filter Assembly	1
16	100731587	Air Filter Base	1
17	100005078	Air Filter Baffle	1
18	100004771	Air Filter Element	1
19	100717012	Air Filter Cover	1
20	100004949	Air Filter Bolt	1
21	100011463-0002	Flange Nut M6	2
22	100010558	Dowel Pin Ø10 x 16	2
23	100148348	Piston Ring Set	1
24	100148347	1st Piston Ring	1
25	100072135	2nd Piston Ring	1
26	100148346	Oil Ring	1
27	100149269	Push Rod	2
28	100149234	Lifter, Valve	2
29	100003086	Piston	1
30	100003221	Circlip	2

#	Part Number	Description	Qty.
31	100003123	Wrist Pin	1
32	100003446	Connecting Rod	1
33	100010272	Drain Bolt, M10 x 1.25 x 15	2
34	100010459	Washer Ø10 x 1.5 x Ø16	2
35	100161669	Oil Level Sensor	1
36	100072204	Bearing, TM6205E	2
37	100085214	Crankshaft	1
38	100010577	Woodruff Key	1
39	100784691	Camshaft	1
40	100772116	Gasket, Crankcase Cover	1
41	100002961	Cover, Crankcase	1
42	100017651	Oil Seal Ø25 x Ø41.25 x 6, Spiral Grain	1
43	100011319-0001	Flange Bolt M8 x 32	6
44	100020165	Support, End Cover	1
45	100011261-0004	Flange Bolt M6 x 12	1
46	100004105-0006	Oil Dipstick Assembly	1
47	100010077	O-Ring, Ø15.8x2.5	1
48	100010550	Dowel Pin Ø8 x 14	2
49	100129155	Gear, Governor	1
50	100011269-0003	Flange Bolt M6 x 28	6
51	100010549	Dowel Pin Ø8 x 12	2
52	100752618	Electric Starter	1
53	100752662	Battery Connecting Wire	1
54	100011215-0001	Flange Bolt M6 x 12	2
55	100774801	Air Guide, Engine Fan	1
56	100007840	Spring, Governor	1
57	100007947	Rod, Governor	1
58	100007920	Spring, Throttle Return	1
59	100008417	Arm, Governor	1
60	100007986	Cotter, Governor Shaft	1

#	Part Number	Description	Qty.
61	100017630	Oil Seal Ø6 x Ø11 x 4	1
62	100010113	Sealing Ring, Ø5.2 x 1.9	1
63	100007976	Governor Shaft	1
64	100775967-0001	Crankcase	1
65	100017644	Oil Seal Ø25 x Ø41.25 x 6	1
66	100007056	Lower Guard	1
67	100011266-0004	Flange Bolt M6 x 20, GB5789	1
68	100161478	Ignition Module	1
69	100011268-0003	Flange Bolt M6 x 25	2
70	100800284	Ignition Coil 1	1
71	100752616	Ignition Coil 2	1
72	100009508	Flywheel	1
73	100718227	Fan, Engine Cooling	1
74	100007550	Pulley, Starter	1
75	100011459-0003	Flange Nut M14 x 1.5	1
76	100799859-0001	Fan Cover, Yellow	1
77	100156547-0003	Recoil Starter, Black	1
78	100010894-0002	Washer Ø6	3
79	100011528-0002	Flange Bolt M6 x 10	3
80	100011418-0002	Nut, M4	2
81	100774691	Air Valve	1
82	100052808	Clamp	1
83	100011262-0003	Flange Bolt M6 x 14, GB5789	4

CYLINDER HEAD PARTS DIAGRAM

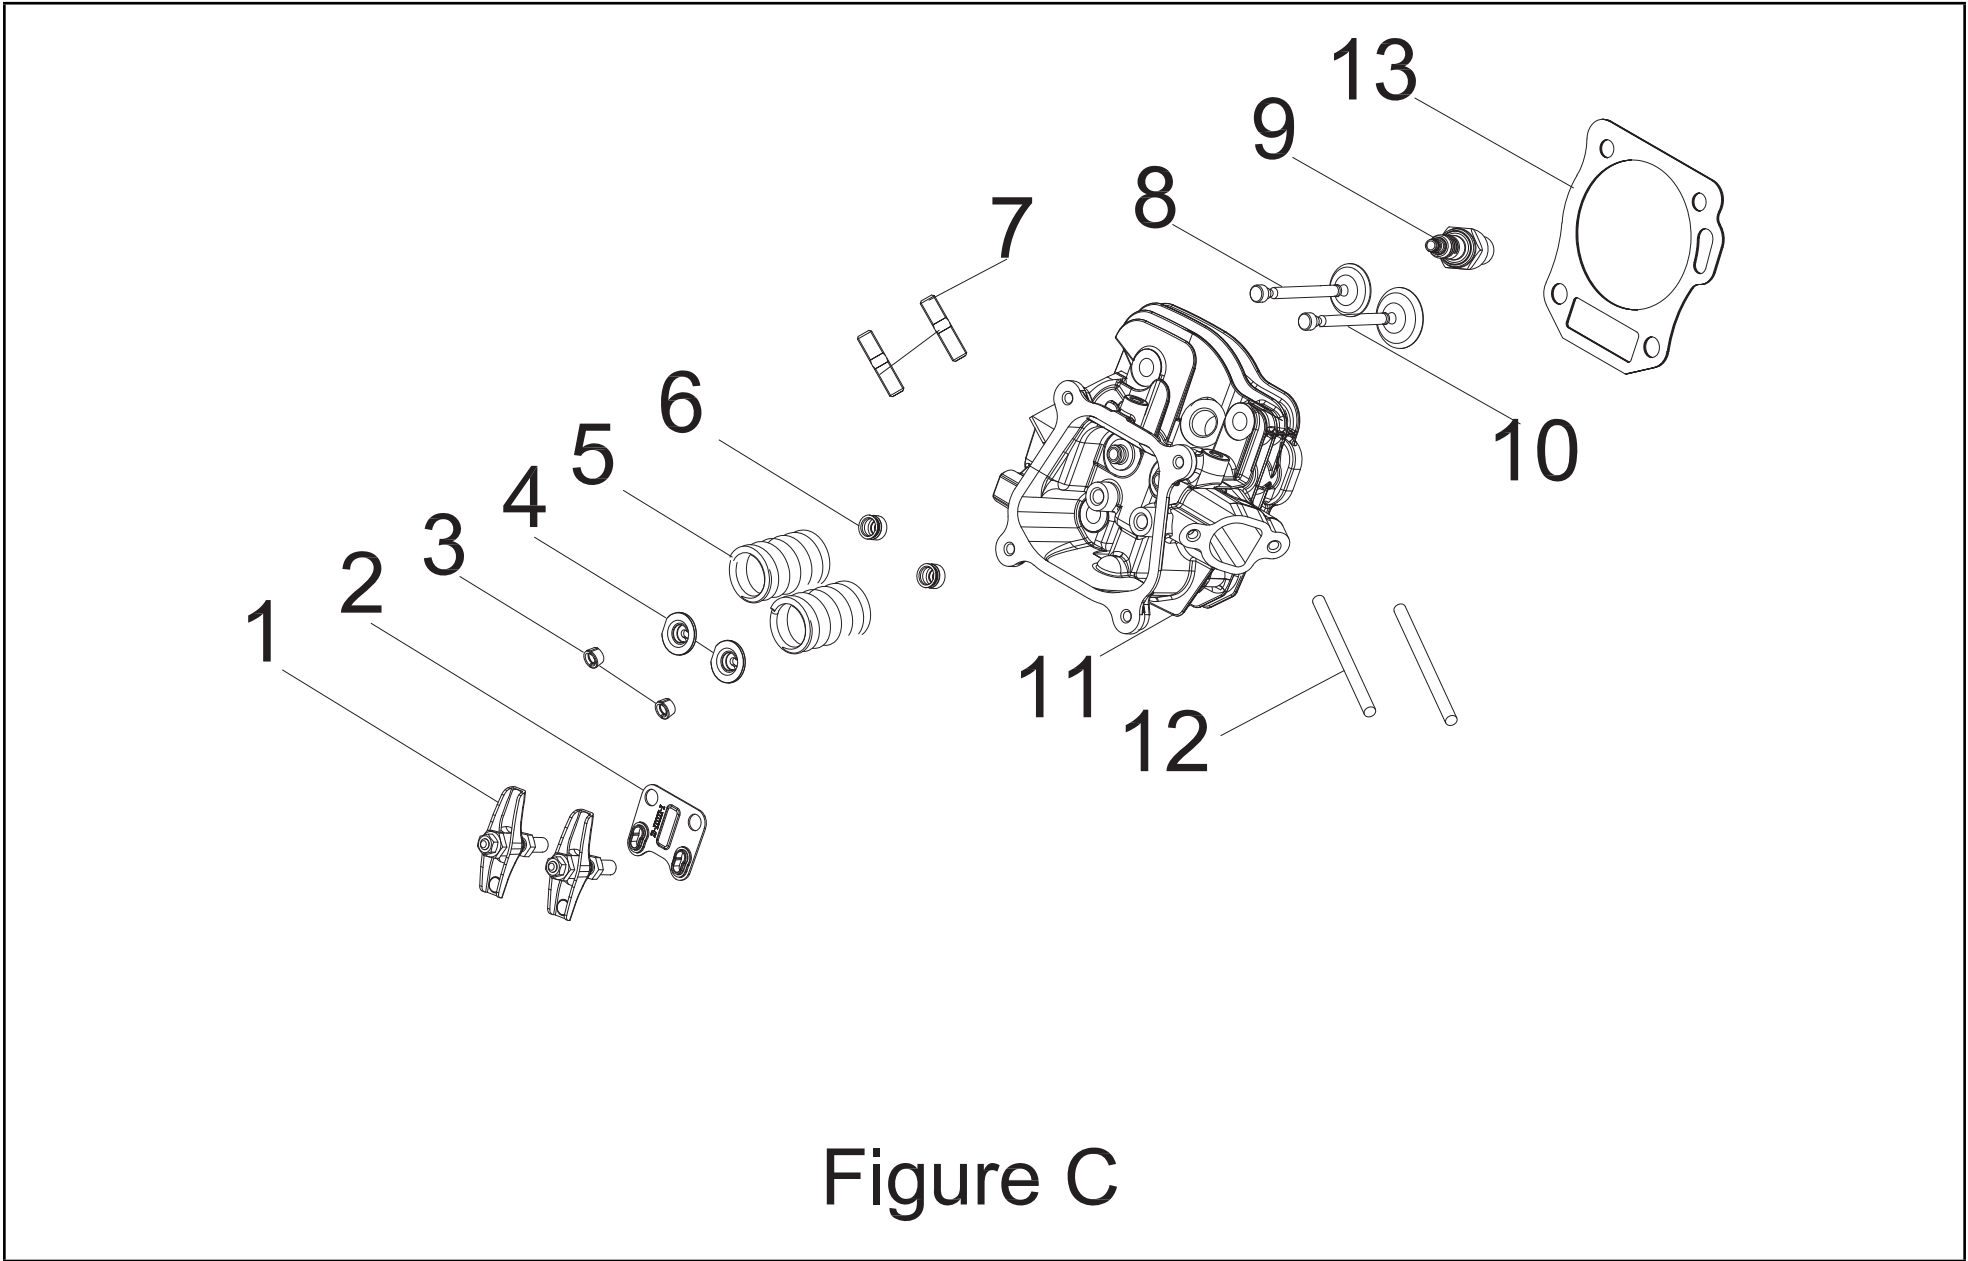


Figure C

CYLINDER HEAD PARTS LIST

#	Part Number	Description	Qty.
1	100149239	Rocker Arm Assembly	2
2	100050881	Guide Plate, Push Rod	1
3	100050896	Valve Collet	4
4	100073758	Valve Spring Seat, Upper	2
5	100713979	Spring Valve	2
6	100004599	Oil Seal, Intake Valve	2
7	100010389	Stud Bolt M8 x 35	2
8	100713981	Exhaust Valve	1
9	100009378	Spark Plug F6RTC	1
10	100713980	Intake Valve	1
11	100775964	Cylinder Head	1
12	100010354	Stud Bolt M6 x 96	2
13	100155656	Gasket, Cylinder Head	1

CARBURETOR PARTS DIAGRAM

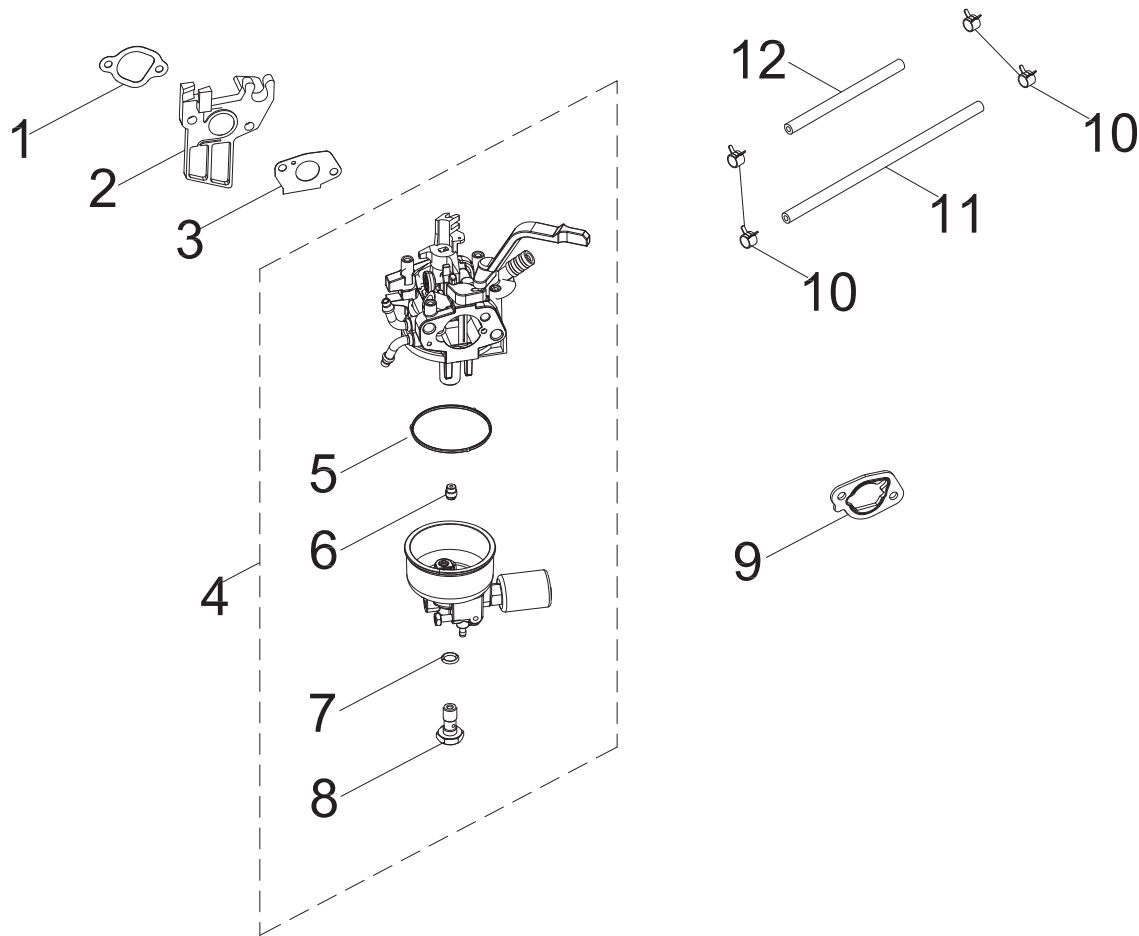


Figure D

CARBURETOR PARTS LIST

#	Part Number	Description	Qty.
1	100078607	Gasket, Insulator	1
2	100005599	Insulator, Carburetor	1
3	100078606	Gasket 1, Carburetor	1
4	100796347-0001	Carburetor	1
5	100005717	Fuel Bowl O-Ring	1
6	100053239	Main Jet Standard (77)	1
	100005767	Main Jet Altitude 1000-3000m (75)	/
7	100130186	O-Ring	1
8	100005727	Bolt	1
9	100005629	Gasket 2, Carburetor	1
10	100005138	Clamp Ø 9.5 x 8	4
11	100747341	Fuel Tube, Ø4 x Ø10 x 400	1
12	100747339	Fuel Tube, Ø4 x Ø10 x 270	1

ALTERNATOR PARTS DIAGRAM

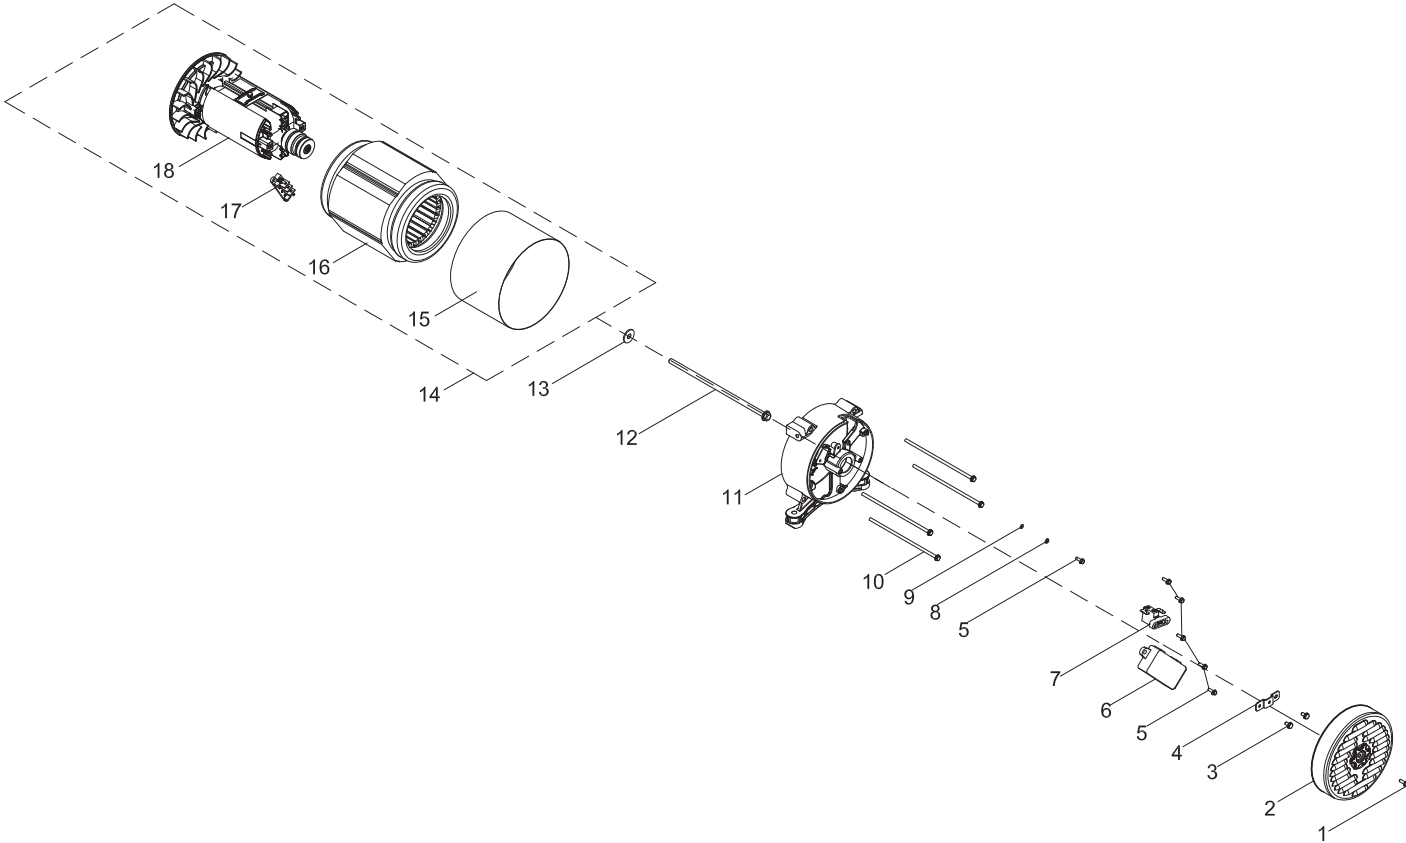


Figure E

ALTERNATOR PARTS LIST

#	Part Number	Description	Qty.
1	100011527-0004	Flange Bolt M6 x 8	1
2	100717500-0001	Generator End Cover, Yellow	1
3	100011250-0002	Flange Bolt M5 x 14	2
4	100722067	Support, End Cover	1
5	100011252-0001	Flange Bolt M5 x 18	6
6	100750028	AVR	1
7	100018592	Carbon Brush Assembly	1
8	100010885-0004	Spring Washer Ø5	1
9	100010919-0002	Flat Washer Ø5	1
10	100011299-0001	Flange Bolt M6 x 175	4
11	100018567	End Housing	1
12	100148753-0001	Flange Bolt M8 x 1 x 230	1
13	100010899-0002	Washer Ø8	1
14	100756443	Alternator Assembly, AI	1
15	100161949	Stator Cover	1
16	100766673	Stator Assembly	1
17	100018701	Terminal Block	1
18	100766674	Rotor Assembly	1

FUEL TANK PARTS DIAGRAM

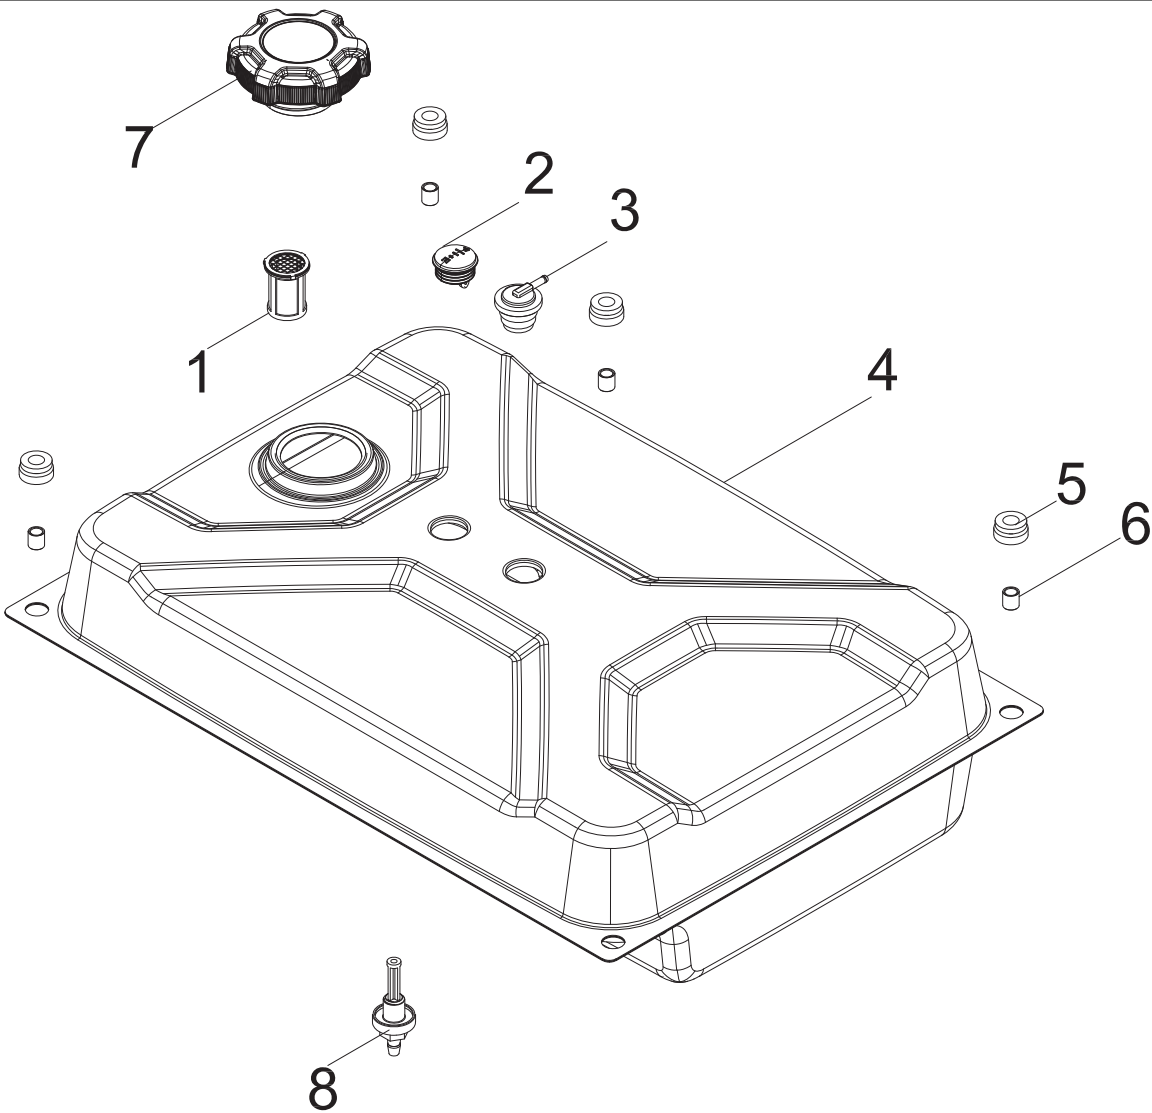


Figure F

FUEL TANK PARTS LIST

#	Part Number	Description	Qty.
1	100775824	Fuel Filter Assembly	1
2	100726883	Fuel Gauge	1
3	100720340	Reversal Valve	1
4	100724734-0001	Fuel Tank, 17.7 L, Yellow	1
5	100032369	Vibration Mounting, Fuel Tank	4
6	100021118	Bushing, Ø12 x Ø9 x 13	4
7	100142004	Fuel Tank Cap	1
8	100714546	Fuel Tank Nipple	1

CONTROL PANEL PARTS DIAGRAM

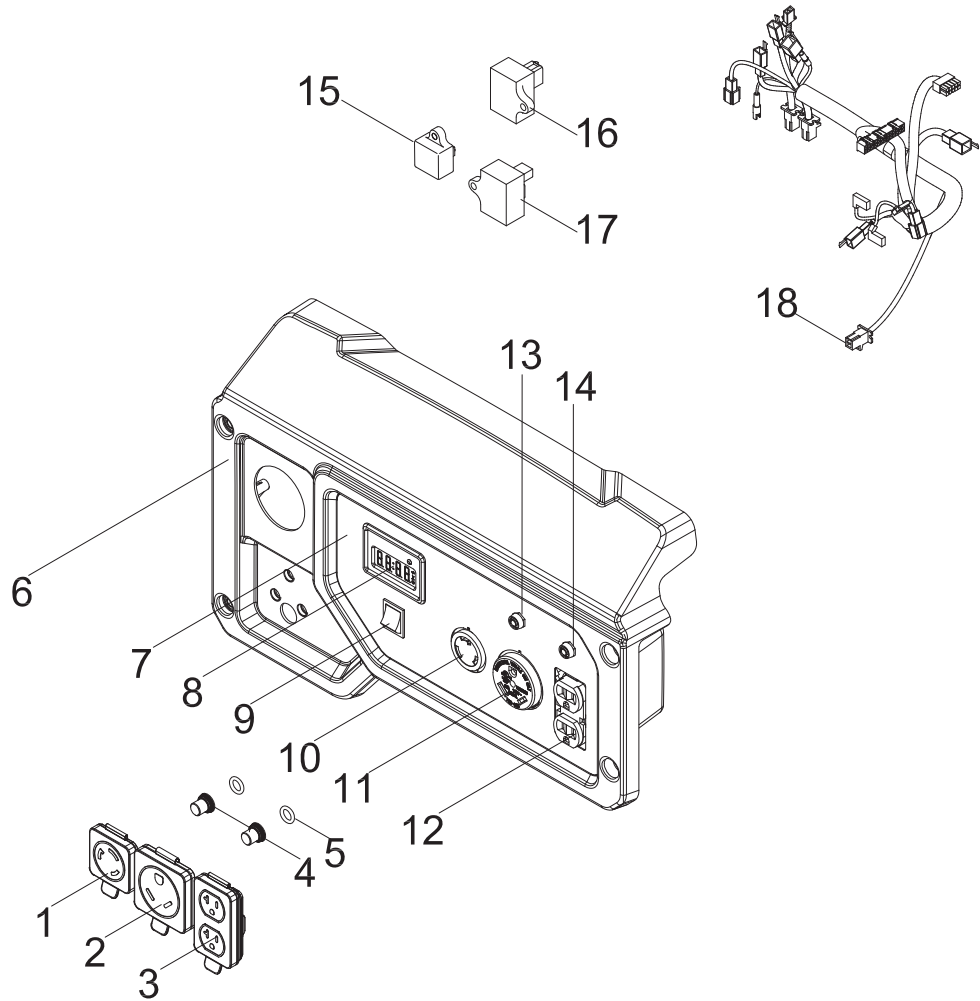


Figure G

CONTROL PANEL PARTS LIST

#	Part Number	Description	Qty.
1	100731573	Receptacle Cover, L5-30R	1
2	100731572	Receptacle Cover, TT-30R	1
3	100731575	Receptacle Cover, 5-20R, Duplex	1
4	100120180	Breaker Cover	2
5	100031552	O-Ring	2
6	100724732-0001	Control Panel Housing	1
7	100732103	Control Panel	1
8	100730999	Intelligauge, INT10F	1
9	100714233	Switch, Engine	1
10	100020005	Receptacle L5-30R	1
11	100020008	Receptacle TT-30R	1
12	100020029	Receptacle 5-20R, Duplex	1
13	100019751	30Amp Circuit Breaker, Push Button	1
14	100019754	20Amp Circuit Breaker, Push Button	1
15	100783059	Charger	1
16	100721216	Controller Module, Solenoid Valve	1
17	100728387	OVF Module	1
18	100748731	Wire Harness Assembly	1

FRAME ASSEMBLY PARTS DIAGRAM

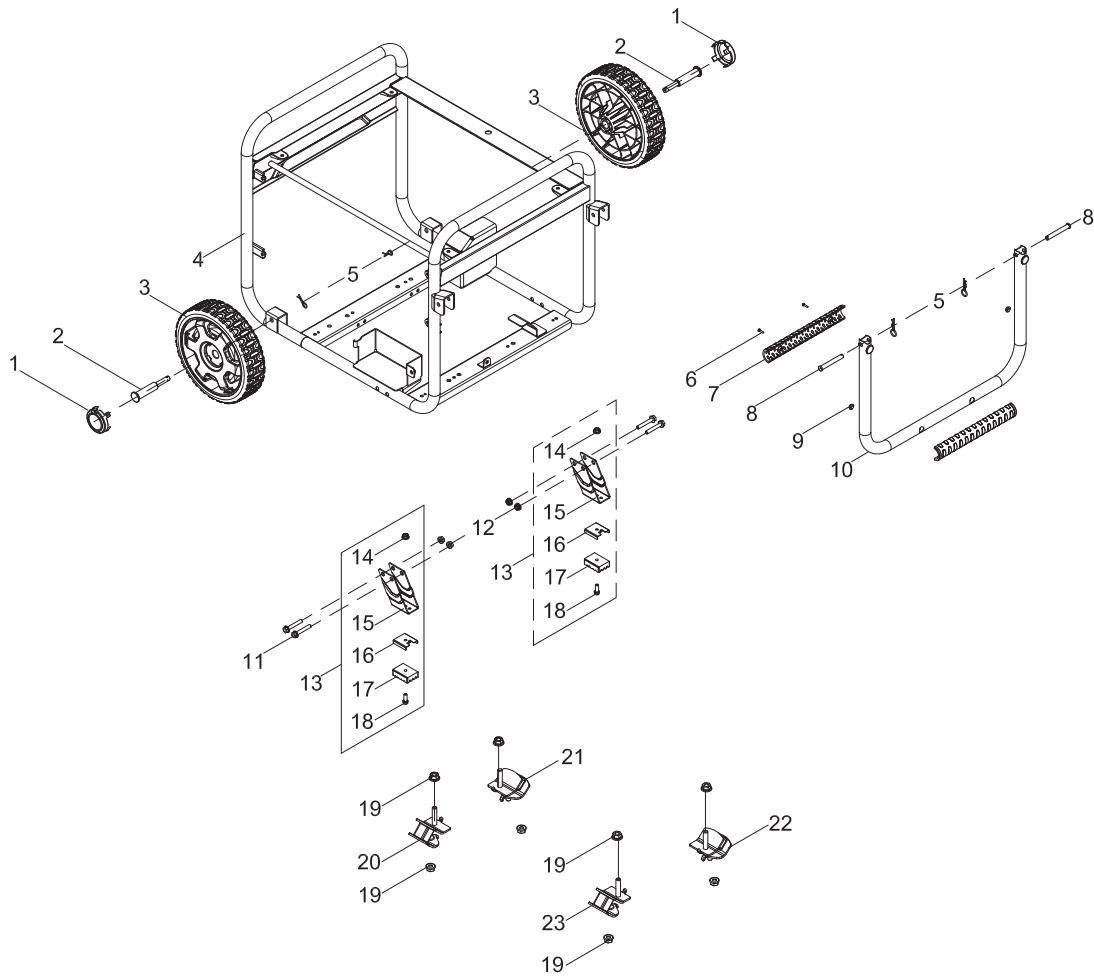


Figure H

FRAME ASSEMBLY PARTS LIST

#	Part Number	Description	Qty.
1	100712243-0001	Tire Cover, Yellow	2
2	100714025	Roll Pin	2
3	100714023-0001	8 In. Wheel, Yellow	2
4	100796348-0001	Frame	1
5	100714685-0001	R-pin, R5	4
6	100095857-0005	Flange Bolt M4 x 18	2
7	100711157	Sheath, Handle	1
8	100011047-0003	Roll Pin Ø8 x 40	2
9	100078853	Damping Pad, Handle	2
10	100724129-0001	Handle	1
11	100011325-0004	Flange Bolt M8 x 40	4
12	100011453-0002	Flange Nut M8, GB6177.1	4
13	100716098-0001	Support Leg Assembly	2
14	100011452-0003	Lock Nut M6, Flange	2
15	100724735-0001	Support Leg	2
16	100068623-0001	Stop Block	2
17	100058956	Vibration Mount	2
18	100011266-0004	Flange Bolt M6 x 20	2
19	100011453-0003	Lock Nut M8, Flange	8
20	100020986-0001	Vibration Mount 1	1
21	100775843	Vibration Mount 2	1
22	100793533	Vibration Mount 3	1
23	100021000-0001	Vibration Mount 4	1

