
CHAMPION
POWER EQUIPMENT™-MC

Champion Power Equipment, Inc.

MODEL #201092

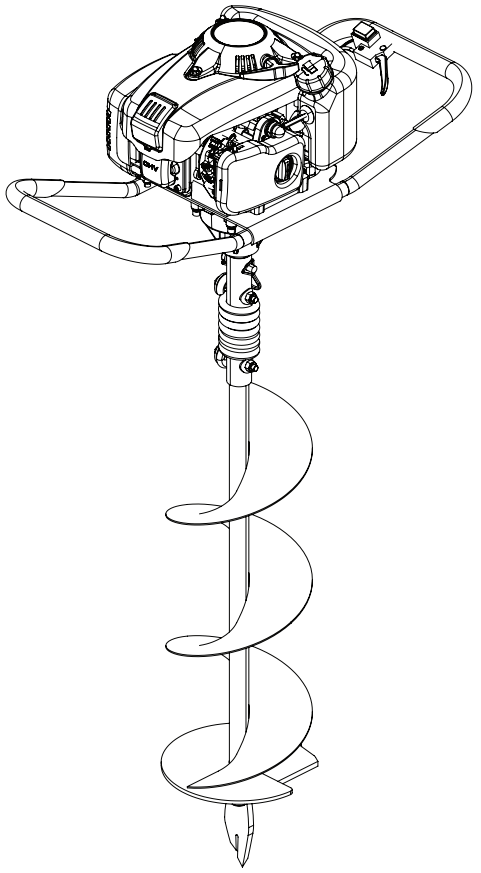

PARTS INFORMATION

EARTH AUGER

SERIAL NUMBER RANGE: ALL

To order replacement parts please visit:
shop.championpowerequipment.com
or call **1-877-338-0999.**

REV 20250303

TABLE OF CONTENTS

Earth Auger Parts Diagram 3

Earth Auger Parts List 4

Engine Parts Diagram 5

Engine Parts List 6

EARTH AUGER PARTS DIAGRAM

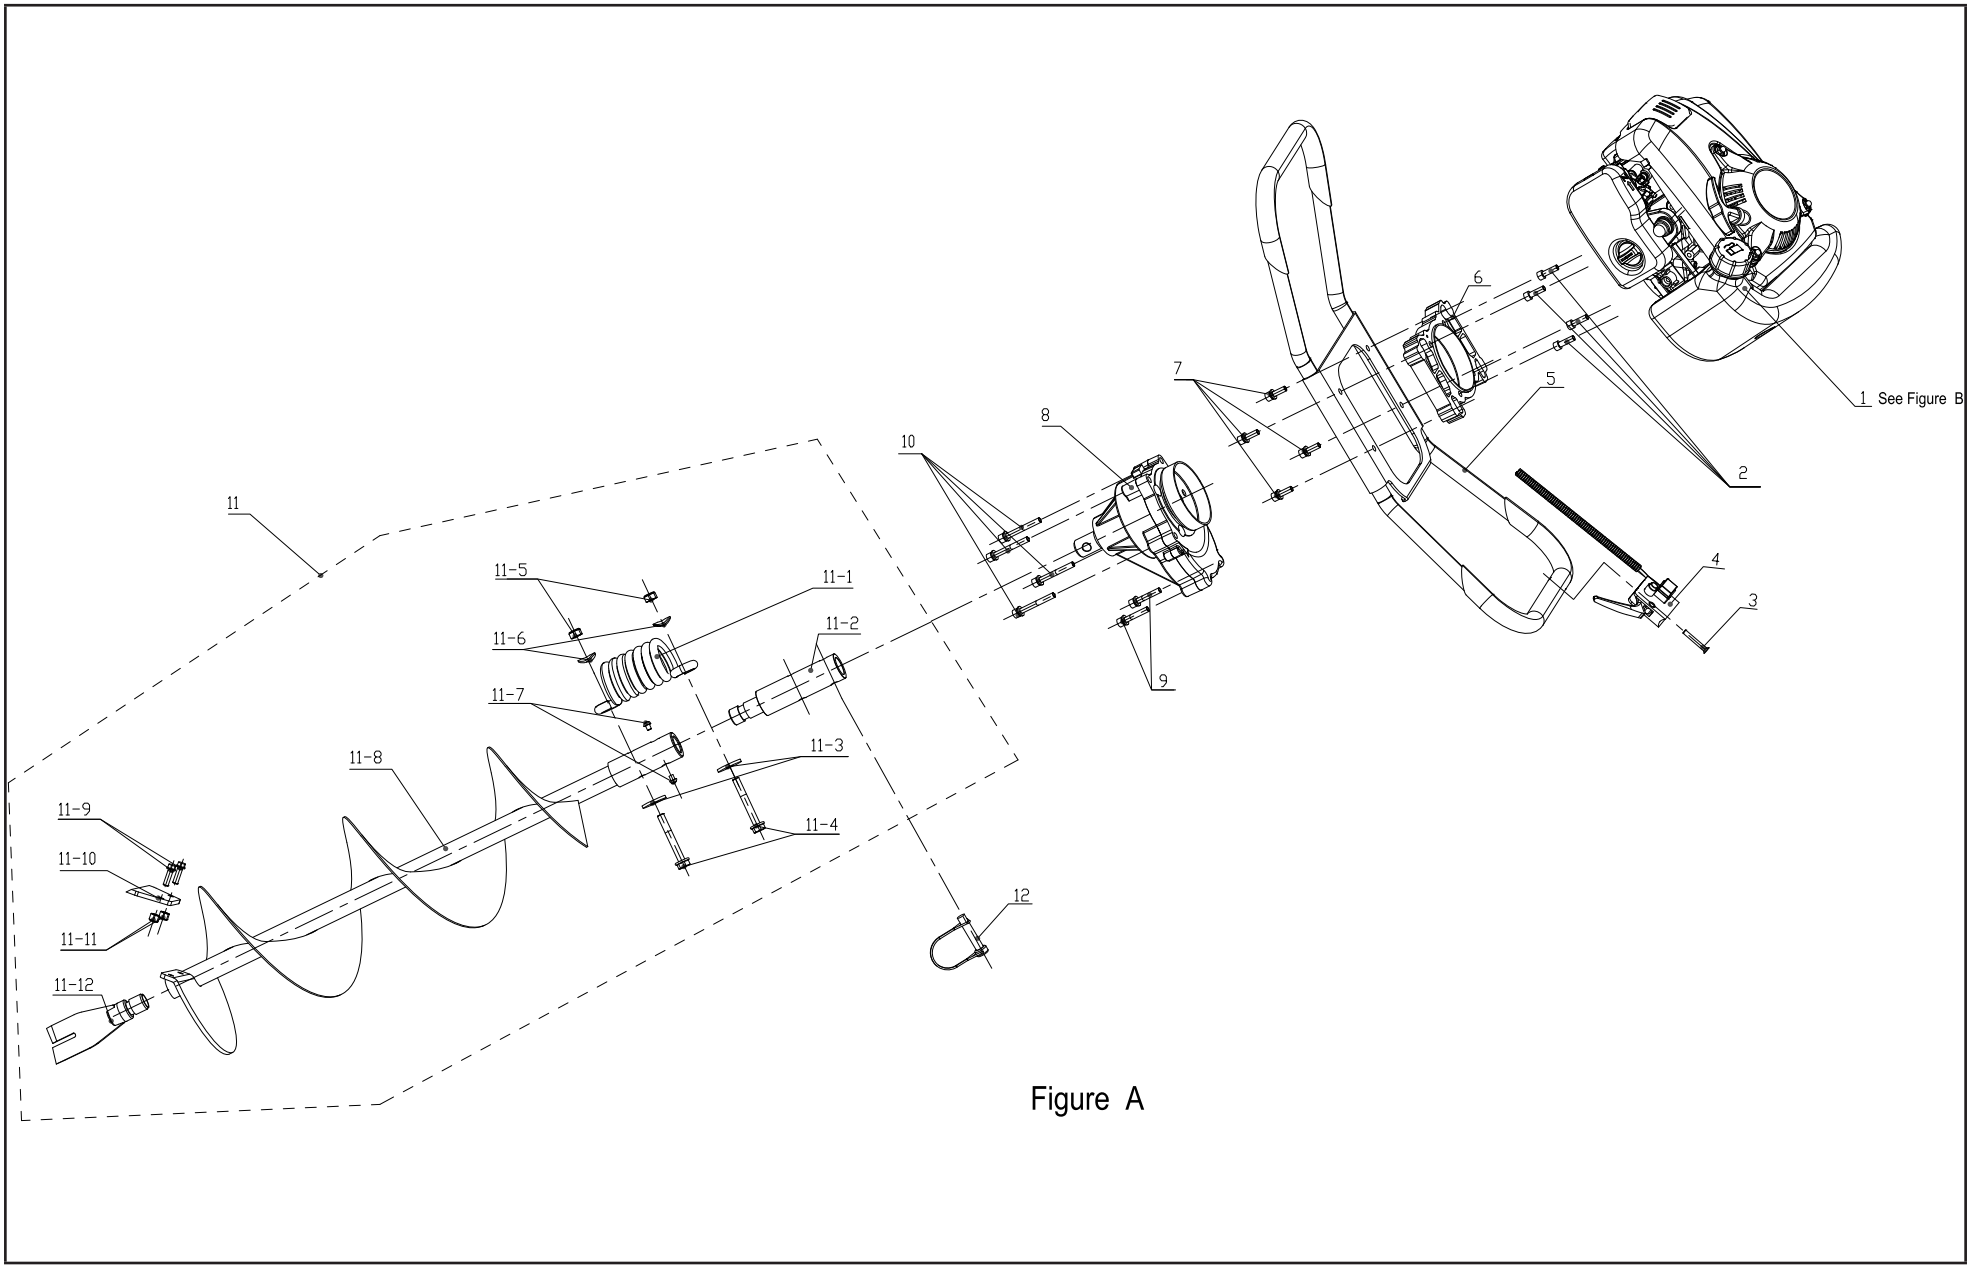


Figure A

EARTH AUGER PARTS LIST

#	Part Number	Description	Qty.
1	101480040001000	Four-Cycle Engine, 53.5 cc	1
2	B02040602067	Bolt, M6 × 20	4
3	30010860107000	Bolt, M5 × 35	1
4	20010860107040	Throttle Cable And Trigger Assembly	1
5	20020860107000	Handle Bar Assembly	1
6	30010860102000	Gear Box Seat	1
7	B13360602067	Bolt Assembly, M6 × 20	4
8	20060860103000	Gear Case Assembly	1
9	B13360603567	Bolt Assembly, M6 × 35	2
10	B13360605567	Bolt Assembly, M6 × 55	4
11	20040860107000	Auger Bit Assembly	1
11-1	30020860107000	Adapter, Auger Bit	1
11-2	30030860107000	Cushion Spring	1
11-3	B0131080606B	Bolt, M8 × 60	2
11-4	30040860107000	Boat Washer, Ø8.5 × Ø22 × 2	2
11-5	30050860107000	Washer, Ø8.5 × Ø22 × 2.2	2
11-6	B0441080004B	Nut, M8	2
11-7	B02270500626	Bolt, M5 × 6	2
11-8	20060860107000	Auger Bit	1
11-9	B0131060186B	Bolt, M6 × 18	2
11-10	30040860103000	Earth Blade	1
11-11	B0441060004B	Nut, M6	2
11-12	39340860103000	Fishtail Bit Point	1
12	39350860103000	Clevis Pin With Double Wire	1

ENGINE PARTS DIAGRAM

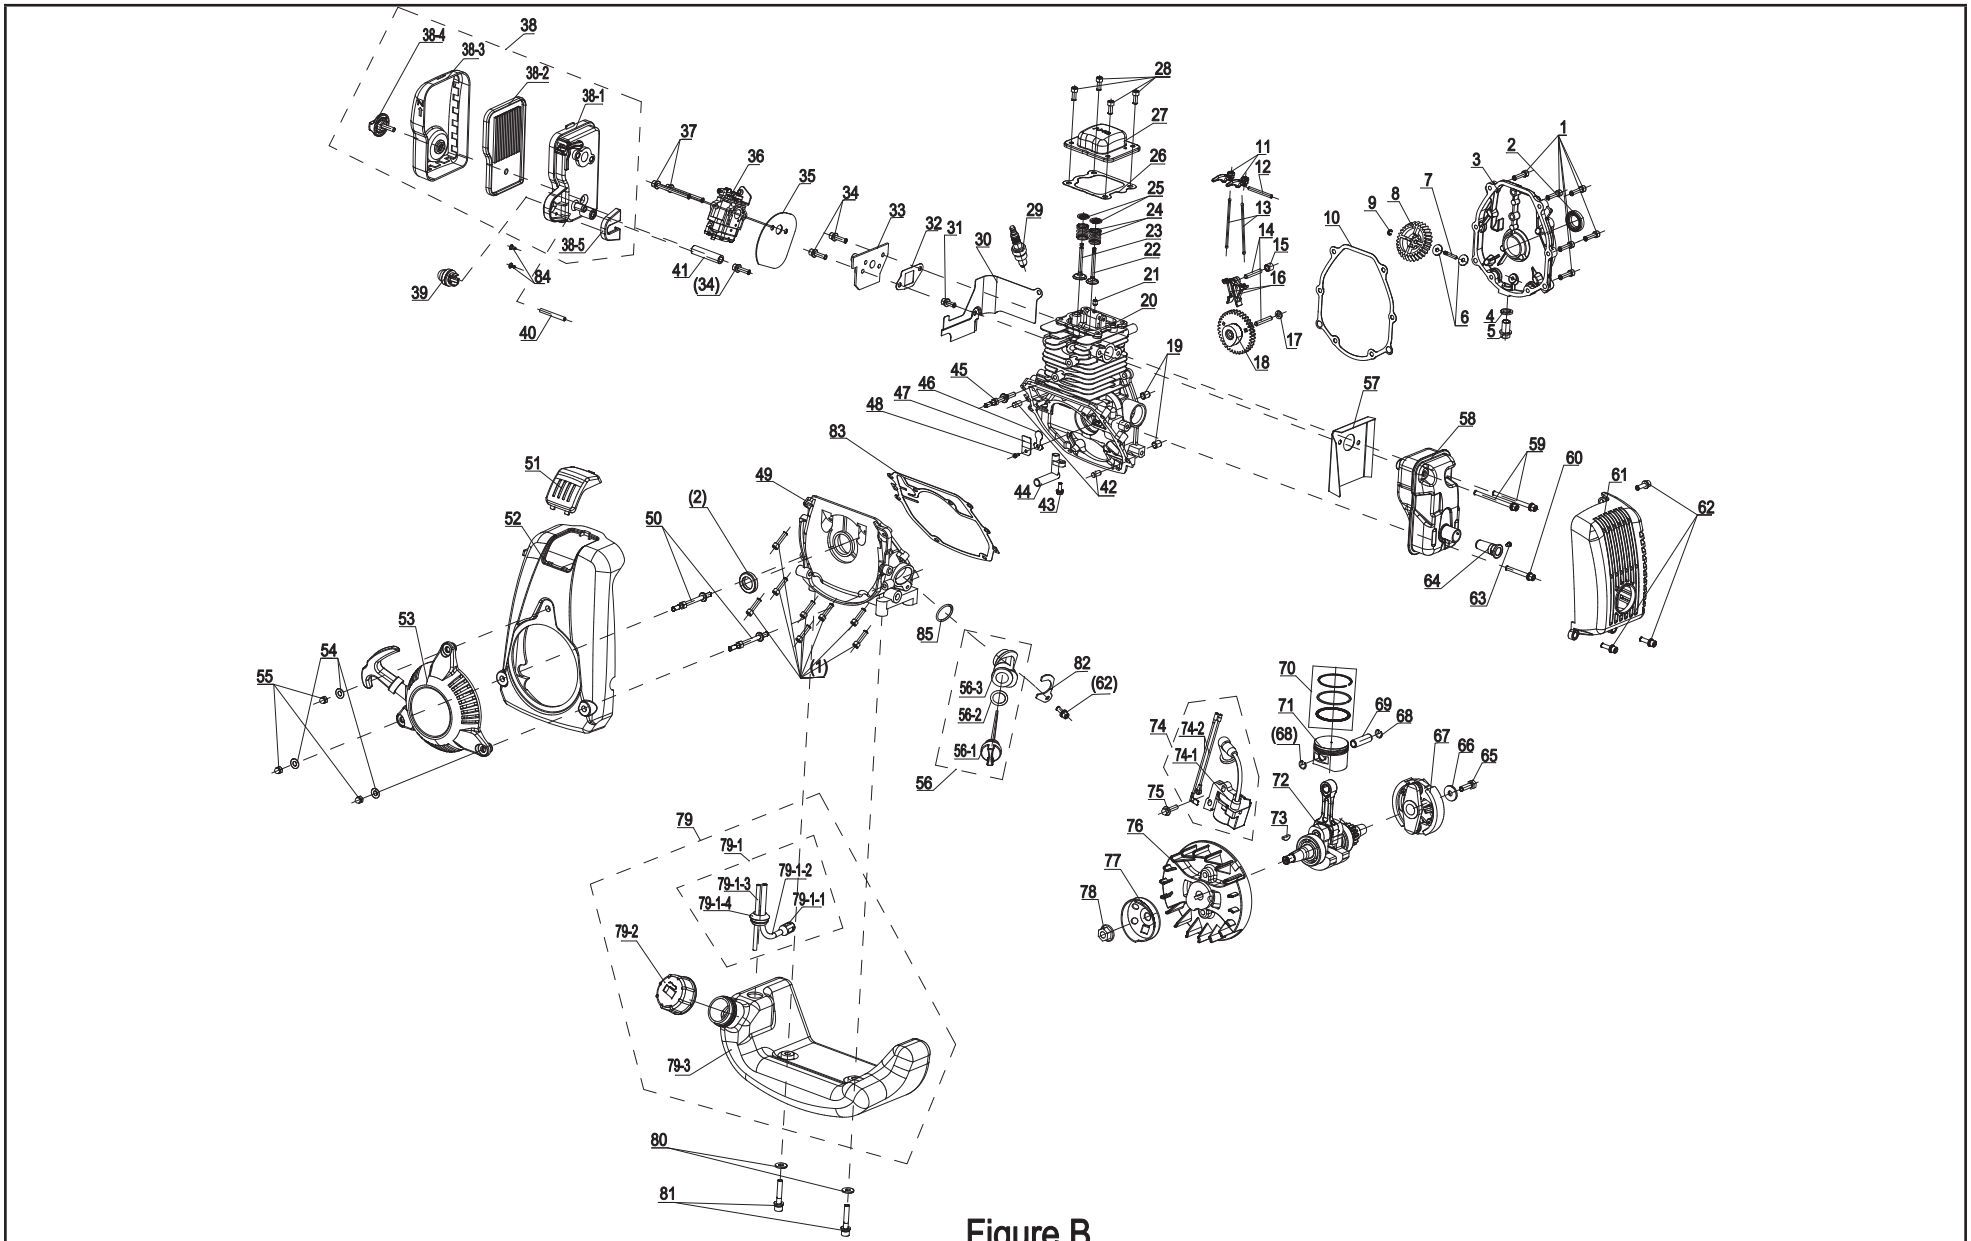


Figure B

ENGINE PARTS LIST

#	Part Number	Description	Qty.
1	B0204050206B	Bolt, M5 x 20	14
2	21080113001000	Oil Seal, Ø17 x Ø27 x 6	2
3	33010148001000	Crankcase Cover	1
4	31090135001000	Washer, Oil Drain Plug	1
5	31080135001000	Oil Drain Bolt	1
6	35090132001000	Washer Ø4.6 x Ø13.8 x 1	2
7	31080113001000	Pin, Oil Gear	1
8	31070113001000	Oil Gear	1
9	B08100000311	"E" Ring, Ø3	1
10	33020148001000	Gasket, Crankcase Cover	1
11	23030112001000	Rocker Arm, Upper	2
12	33050112001000	Rocker Arm Shaft, Upper	1
13	33040112001000	Pin-Lift	2
14	33020113001000	Rocker Arm Shaft, Down	2
15	33030112001000	Shaft Sleeve	1
16	33020112001000	Rocker Arm,Down	2
17	33030113001000	Washer Ø5.2 x Ø10 x 1.5	1
18	23040113001000	Cam Assembly	1
19	31070148001000	Pin, Ø8 x 10	2
20	21010148001000	Crankcase, Top	1
21	B02120500561	Set Screw, M5 x 5	1
22	31180112001000	Exhaust Valve	1
23	31200112001000	Inlet Valve	1
24	31190112001000	Valve Spring	2
25	33110114001000	Retainer, Valve Spring	2
26	32050113001001	Gasket, Cylinder Head Cover	1
27	31150112001000	Cylinder Head Cover	1
28	B0204050126B	Bolt, M5 x 12	4
29	31250114001002	Spark Plug, A7TC	1
30	31020148001000	Baffle,Cylinder Head	1

#	Part Number	Description	Qty.
31	B1336050146B	Bolt Assembly, M5 x 14	1
32	32080113001000	Gasket, Inlet	1
33	36010148001000	Intake Seat	1
34	B1336050206B	Bolt Assembly, M5 × 20	3
35	36020148001000	Gasket, Carburetor	1
36	26010148003000	Carburetor Assembly	1
37	B1336050556B	Bolt Assembly, M5 × 55	2
38	26020148003000	Air Filter Assembly	1
38-1	36020148003000	Housing, Air Filter	1
38-2	36030148003000	Element, Air Filter	1
38-3	36010148003000	Cover, Air Filter	1
38-4	37140104011000	Knob, Screw	1
38-5	36050148003000	Cover Plate,Primer Bulb	1
39	26030148003000	Primer Bulb	1
40	36040148003000	Fuel Tube, Primer Bulb	1
41	36030148001000	Breather Tube	1
42	31060148001000	Pin, Ø6 x 12	2
43	B13080401421	Bolt Assembly, M4 x 14	1
44	31080148001000	Oil Conduit	1
45	31010148001000	Stud Bolt 1	1
46	32120113001000	Reed Valve	1
47	31050114001000	Reed Valve Limit Plate	1
48	B02270300626	Screw M3 x 6	1
49	32010148001000	Crankcase, Down	1
50	32020148001000	Stud Bolt 2	2
51	39010148003350	Spark Plug Shield	1
52	29010148003350	Wind Scooper	1
53	29020148001000	Recoil Starter Assembly	1
54	35300132001000	Washer, Ø6.6 x Ø12.8 x 1	3
55	B0419050004B	Nut, M5	3

#	Part Number	Description	Qty.
56	22010148001350	Oil Dipstick Assembly	1
56-1	32030148001001	Oil Dipstick	1
56-2	32050148001000	O-Ring, Oil Dipstick	1
56-3	32040148001000	Oil Dipstick Seat	1
57	37010148001000	Gasket, Muffler	1
58	27010148001000	Muffler Assembly	1
59	B1336050656B	Bolt Assembly, M5 x 65	2
60	B1336050406B	Bolt Assembly, M5 x 40	1
61	37020148001000	Muffler Shield	1
62	B1336050186B	Bolt Assembly, M5 x 18	4
63	B05003506ECB	Screw, ST3.5 x 6.5	1
64	27020148001000	Spark Arrestor	1
65	B0124060256B	Bolt, M6 x 25	1
66	38010148001000	Washer, Ø6.5 x Ø20 x 3	1
67	28030148001000	Clutch Assembly	1
68	34030113001000	Circlip, Piston Pin	2
69	34020104001000	Piston Pin	1
70	24030113001000	Piston Ring	1
71	34040113001000	Piston	1
72	24010148001000	Crankshaft / Connecting Rod Assembly	1
73	34030112001000	Key	1
74	28020148001001	Ignition Coil Assembly	1
74-1	38020148001001	Ignition Coil	2
74-2	38030148001000	Flameout Line	3
75	B0131050206B	Bolt, M5 x 20	1
76	28010148001001	Rotor Assembly	1
77	38020113001000	Starting Ratchet	1
78	34090113001000	Nut, M10 x 1.25	1
79	29030148003000	Fuel Tank Assembly	1
79-1	29050148003000	Fuel Filter And Fuel Tube And Seal Assembly	1
79-1-1	27100104001000	Fuel Filter	1
79-1-2	39010148001000	Fuel Inlet Tube	1
79-1-3	39020148001000	Fuel Return Tube	1
79-1-4	37120104001000	Seal, Fuel Tube	1
79-2	28010110001000	Fuel Tank Cap	1
79-3	29040148001000	Fuel Tank	1
80	39050148001000	Washer, Ø6.2 x Ø16 x 2	2
81	B1336060406B	Bolt Assembly, M6 x 40	2
82	32070148001000	Clamp Plate,Oil Dipstick Seat	1
83	31090148001000	Gasket, Crankcase	1
84	B05012909E2B	Bolt Assembly, M6 x 40	2
85	32060148001000	O-Ring, Oil Dipstick Seat	1